



Card #5: Use Yellow Paper  
Card #5: 使用黃色紙張

**Cordless Scanner Memory Mode**

**Enable Memory Mode**

**Disable Memory Mode\***

**Send Data** ①

**Clear Data & Confirm** ②

P/N S1XXXCBS11000 1a

**Cordless Scanner BT Authentication**

**Enable Authentication** ①

Use Preset PIN <0000>\*

**Disable Authentication\***

Use Random PIN

**PIN Code Input** ②

Presets PIN: Before pairing, scan barcodes at back.

Random PIN: While pairing, scan barcodes at back to input the same code displayed on the target device.

P/N S1XXXCBS21009 2a

**Cordless Scanner HID Interface**

**Reset BT HID connection**

**BT HID\*** ①

PCAT(US)\*

**CipherLab dongle: USB HID\*** ①

PCAT(US)\*

**USB cable: HID** ①

Memory Mode, 1661/1664 only  
PCAT(US)\*

**Select keyboard type** ②

Scan barcodes at back.

P/N S1XXXCBS31018 3a

**Cordless Scanner Virtual COM Interface**

**BT SPP, Slave**

**BT SPP, Master**

**CipherLab dongle: USB VCOM**

**USB cable: VCOM\***

Memory Mode, 1661/1664 only

P/N S1XXXCBS41017 4a

**Cordless Scanner Initial Setup for Mobile Phone**

**iPhone, iPad** HID

Random PIN: While pairing, scan barcodes at back.  
HID: Transmit by Character  
Enable keypad on mobile

**BlackBerry, Android, Windows Mobile** SPP

Presets PIN <0000>  
SPP Slave Mode

**Windows Mobile** Preset PIN, HID

Presets PIN <0000>  
HID: Transmit by Batch

**Windows Mobile** Random PIN, HID

Random PIN: While pairing, scan barcodes at back.  
HID: Transmit by Batch

P/N S1XXXCBS51006 5a

**Cordless Scanner Memory Mode**

**Start**

0

1

2

3

4

5

6

7

8

9

**End**

P/N S1XXXCBS11000 1b

**Cordless Scanner PIN Code Input**

**Start**

0

1

2

3

4

5

6

7

8

9

**End**

P/N S1XXXCBS21009 2b

**Cordless Scanner Keyboard Type**

64 : PCAT (US)      69 : PCAT (Norwegian)  
65 : PCAT (French)    70 : PCAT (UK)  
66 : PCAT (German)    71 : PCAT (Belgium)  
67 : PCAT (Italy)      72 : PCAT (Spanish)  
68 : PCAT (Swedish)    73 : PCAT (Portuguese)  
74 : PS55 A01-2 (Japanese)  
76 : PCAT (Turkish)

0

1

2

3

4

5

6

7

8

9

**End**

P/N S1XXXCBS31018 3b

**Cordless Scanner Restore Defaults**

**Restore System Defaults**

**Restore User Defaults**

**Save as User Defaults**

P/N S1XXXCBS41017 4b

**Cordless Scanner PIN Code Input**

**Start**

0

1

2

3

4

5

6

7

8

9

**End**

P/N S1XXXCBS51006 5b

**Enable Auto-Sense**

Hands-free use with  
BT Base,  
1560/1564 only



**Disable Auto-Sense\***

1560/1564 only



**Enable High Sensitivity**

Auto-Sense Mode,  
1560 only



**Disable High Sensitivity\***

1560 only



**Keyboard Wedge**

1

BT Base only  
PCAT(US)\*



**Select keyboard type**

2

Scan barcodes at back.

**RS-232**



**Laser Mode\***

Handheld use



**Continuous Mode**

Hands-free use with  
BT Base



**Presentation Mode**

Hands-free use with  
BT Base, 1564 only



64 : PCAT(US)  
65 : PCAT(French)  
66 : PCAT(German)  
67 : PCAT(Italy)  
68 : PCAT(Swedish)

69 : PCAT(Norwegian)  
70 : PCAT(UK)  
71 : PCAT(Belgium)  
72 : PCAT(Spanish)  
73 : PCAT(Portuguese)  
74 : PS55 A01-2 (Japanese)  
76 : PCAT(Turkish)



0



1



2



3



4



5



6



7



8



9



End