



METROLOGIC INSTRUMENTS, INC.  
MS2200 Stratos™ Series  
Installation and User's Guide



## **Copyright**

© 2005 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

# TABLE OF CONTENTS

---

## INTRODUCTION

Manual Scope .....	1
Manual Symbol Key.....	1
Product Overview .....	2
Base Kit Components.....	3
Optional Accessories.....	4
Optional Remote Scale Display .....	5
Dimensions.....	5
Control Panel.....	5
Replacement Parts .....	6
General Precautions.....	7
MS2200 Series Design Specifications.....	8

## BASE MODEL CHARACTERISTICS

MS2220 Scanner/Scale.....	10
Components .....	10
Dimensions.....	12
Connector Panel.....	12
Caution and Serial Number Labels.....	13
MS2221 Scanner.....	14
Components .....	14
Dimensions.....	16
Connector Panel.....	16
Caution and Serial Number Labels.....	17
MS2222 Scanner.....	18
Components .....	18
Dimensions.....	20
Connector Panel.....	20
Caution and Serial Number Labels.....	21

## INSTALLATION

Quick Installation Outline.....	22
---------------------------------	----

## TABLE OF CONTENTS

---

Site Requirements .....	22
Vertical Clearance .....	22
Ventilation and Spacing .....	22
Service Access .....	23
Power Installation .....	23
Checkstand Layout Consideration .....	23
Unpacking the Unit .....	24
MS2220 Package Warning .....	25
Installing the Unit in the Counter .....	25
MS2220 Mounting Diagram .....	26
MS2221 Mounting Diagram .....	27
MS2222 Mounting Diagram .....	28
Cable Installation (Interface Specific) .....	29
RS232 .....	29
Full Speed USB .....	32
IBM 46xx .....	35
OCIA .....	38
Cable Installation (Secondary Metrologic Scanner) .....	41
EAS Deactivation .....	43

### **SCANNER OPERATION**

Scan Zone .....	44
IR Activation Area (IR LED Output) .....	46
Indicator Descriptions .....	47
Audible .....	47
Visual .....	48
Failure .....	50
Diagnostic Indicator Display; Error Codes .....	51
Power Save Modes .....	56
Beeper Options and Button Functions .....	58
Beeper Tone and Volume Control .....	58
The Multi-Function Button .....	59

# TABLE OF CONTENTS

---

Startup.....	60
Power-Up Test Mode.....	60
Configuration Mode.....	60
<b>SCALE OPERATION</b>	
Scale Zeroing .....	61
Calibration .....	62
Tools Required .....	62
Scale Calibration Methods.....	62
Priming the Scale for Calibration (lbs. & kg) .....	63
Scale Calibration Procedure (lbs. & kg) with Remote Display .....	64
Bar Code Calibration Procedure without Remote Display .....	68
Calibration Verification.....	72
U.S. Pounds (lbs.) .....	72
Kilograms (kg) .....	74
Security Seal Installation .....	76
Pressure Sensitive Security Seal .....	76
Wire Security Seal (Conversion Kit 46-00239) .....	78
<b>MAINTENANCE</b>	
Horizontal Scan Window Replacement .....	79
Vertical Scan Window Replacement .....	80
Daily Maintenance .....	80
<b>TROUBLESHOOTING</b>	
RS232 Demonstration Program .....	85
<b>DEFAULT SETTINGS</b>	
Communication Parameters .....	86
<b>SCANNER AND CABLE TERMINATIONS</b>	
Scanner Pinout Connections .....	95
Cable Connector Configurations (Host End) .....	97

# TABLE OF CONTENTS

---

**LASER AND PRODUCT SAFETY**

Notices ..... 99

Cautions ..... 100

**LIMITED WARRANTY ..... 101**

**PATENTS..... 102**

**INDEX..... 103**




# INTRODUCTION

---

## MANUAL SCOPE

This guide provides an overview of the scanner and scanner/scale operation with detailed information about setup and installation. Adobe® Acrobat® versions of the user's manuals are also available for download from the Metrologic website ([www.metrologic.com](http://www.metrologic.com)).

## MANUAL SYMBOL KEY

	Caution!
	Important Additional Information
	Manufactures Note

## INTRODUCTION

---

### PRODUCT OVERVIEW

Metrologic's StratosS series is designed to meet the demanding needs of high volume supermarket and point-of-sale applications. With advanced features like 5-sided, 360° scanning, 5400 scans per second, a complex scan zone and advanced decoding software, this high performance series of in-counter scanner/scale products guarantees fast customer checkouts with minimal operator fatigue and stress. The MS2200 series is equipped with a multitude of standard features including:

- StratosSCAN™ – 5-sided, 360° scanning that minimizes product orientation
- StratosSPHERE™ – Decoding software that reads poor quality and damaged bar codes
- StratosSYNC™ – Horizontal and vertical scanning zones operate independently from one another
- RSS-14 Decoding – Decodes RSS-14, RSS Limited and RSS expanded emerging symbologies
- Flash ROM – Upgrade latest software enhancements on site.
- Powered Aux Port – Connect hand-held scanner for large or bulky items
- Integrated Scale – Factory integrated field upgradeable scale
- Loud Speaker – 3 volume/7 tone settings can be heard in all environments
- Easy Configuration – Windows® based utility or simple bar code setup
- Fully Automatic – “No touch” infrared wake up from power save modes
- EAS Deactivation – Electronic Article Surveillance (EAS) included
- Field Replaceable Vertical Window – Quickly remove vertical window for cleaning or replacement
- StratosSCOPE™ – Visual diagnostic indicator for easy-to read feedback on scanner condition
- StratosSWAP™ – Modular optics engine technology – small, pre-aligned, field replaceable modules
- StratosSCHOOL™ – operator training software



## INTRODUCTION

---

### BASE KIT COMPONENTS

BASE KIT COMPONENTS			
Part #	Description		
MS22 <i>x x</i> -105 <i>y z</i>	StratosS® Series Scanner		
	<i>x x</i>	20	Scanner with Integrated Scale - Compact
		21	Scanner Only – Compact
		22	Scanner Only – Sub-Compact
	<i>y</i>	A	Avery Scale
		X	Scale Ready
		N	No Scale
	<i>z</i>	D	Diamonex Horizontal Window
		S	Sapphire Horizontal Window
00-02407	MetroSelect® Configuration Guide		
00-02034	MS2 <i>x x</i> 0 Stratos Series Configuration Addendum		
00-02048	MS2200 StratosS Series Installation and User's Guide		

*Guides also available for download at [www.metrologic.com](http://www.metrologic.com).*

*Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's Customer Service Department at 1-800-ID-METRO or 1-800-436-3876.*

## INTRODUCTION

### OPTIONAL ACCESSORIES

OPTIONAL ACCESSORIES	
Part #	Description
57-57210 $\times$ -N-3	RS232 Interface Cable Straight, 3.7 m (12') Cord with Short Strain Relief
57-57212 $\times$ -N-3	IBM 46xx Port 9 Cable, Straight 3.7 m (12') Cord
57-57016 $\times$ -N-3	OCIA Interface Cable Straight, 3.7 m (12') Cord with Short Strain Relief
57-57201 $\times$ -N-3	USB Full Speed Communication Cable, Straight 4.0 m (13') Cord, Type A (Non-Locking) Connector
57-57227 $\times$ -N-3	USB Full Speed Communication Cable, Straight 4.0 m (13') Cord, Locking 12V Plus-Power™ Type A
57-57000 $\times$ -N-3	Dual Interface Cable Straight, 3.7 m (12') Cord with Short Strain Relief
57-57008 $\times$ -N-3	Aux Program Cable Straight 2.3 m (7.5') Cord with Short Strain Relief
57-57099 $\times$ -3	LSO RS232 PowerLink AUX Cable with built in power jack Straight, 2.1 m (7') Cord with Short Strain Relief
52-52511 $\times$	24" EAS cable
AC to DC Power Transformer - Regulated Output: +5.2V @ 2A +12V @ 1A	
46-00226	120V United States and Canada
46-00227	220V – 240V Continental European
46-00228	220V – 240V United Kingdom
46-00229	220V – 240V China
46-00230	220V – 240V Australia
46-00239	Wire Seal Conversion Kit

INTRODUCTION

OPTIONAL ACCESSORIES

OPTIONAL ACCESSORIES	
Part #	Description
Optional Remote Scale Display	
46-00248	Remote Scale Display for use with MS2000 lb. Scanner/Scales
46-00249	Remote Scale Display for use with MS2000 kg Scanner/Scales

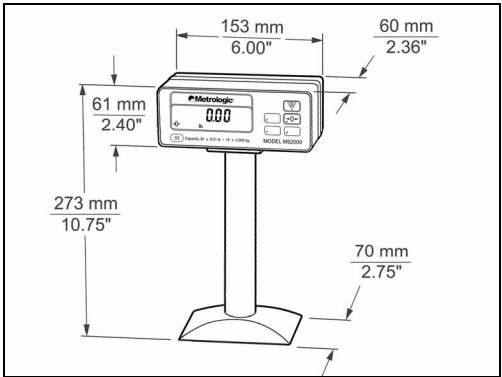


Figure 1. Optional Remote Scale Display Dimensions

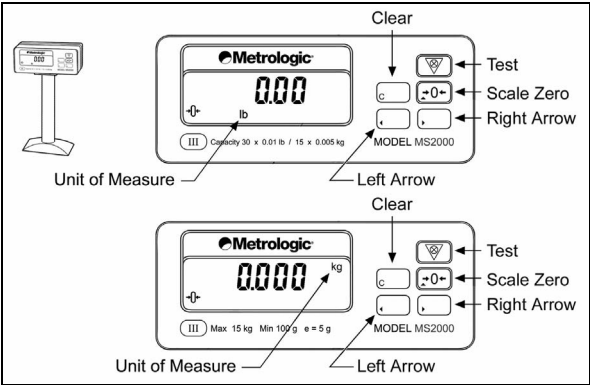



Figure 2. Optional Remote Scale Display Controls (46-00248 lb, 46-00249 kg)

## INTRODUCTION

---

### REPLACEMENT PARTS

REPLACEMENT PARTS	
Part #	Description
 Caution	Window types (Diamonex and Sapphire) are <u>not</u> interchangeable due to laser safety and/or scanner performance differences.  To change window type, the scanner must be returned to the manufacturer for reconfiguration.
46-00232	Vertical Window
46-00233	Diamonex Platter - Full Size
46-00296	Diamonex Platter - Full Size, with Product Weight Roll Bar / Platter Lift Handle
46-00234	Diamonex Platter - Compact Size
46-00235	Sapphire Platter - Full Size
46-00297	Sapphire Platter - Full Size, with Product Weight Roll Bar / Platter Lift Handle
46-00236	Sapphire Platter - Compact Size

*Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's Customer Service Department at 1-800-ID-METRO or 1-800-436-3876.*

## INTRODUCTION

### GENERAL PRECAUTIONS

The following are some general precautions to remember when handling your MS2200 Series scanner.

#### **DO NOT TURN**

the unit upside down with the platter in place.

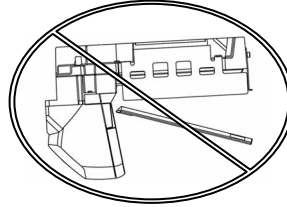


Figure 3

#### **DO NOT PRESS**

on the window in the replacement platter or the vertical window frame.

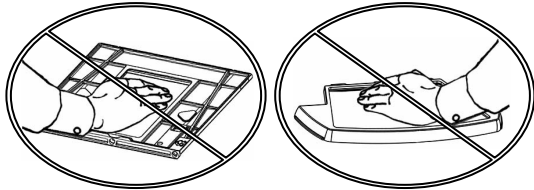


Figure 4

#### **PLATTER REMOVAL**

No hardware or tools are required to remove the platter (see Figure 5). Refer to the Maintenance section of this manual for additional information on platter replacement.

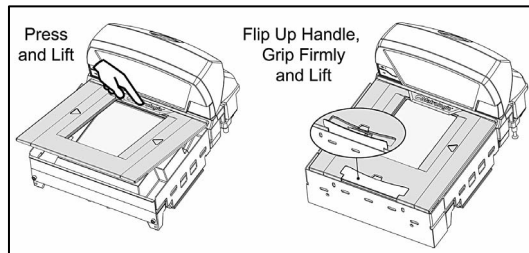


Figure 5



See caution statement on page 6.

#### **FINGER RECESSES**

**REST** both thumbs against the vertical window frame for added stability when lifting the unit by the finger recesses.

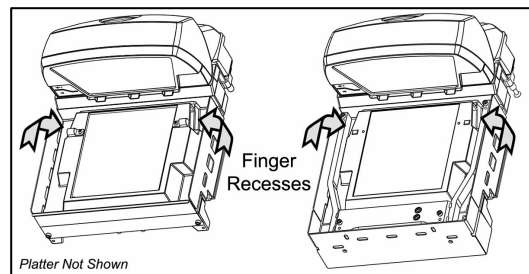


Figure 6

## INTRODUCTION

### MS2200 SERIES DESIGN SPECIFICATIONS

Design Specifications	
Operational	
Light Source:	VLD 650 nm
Peak Laser Power:	<1.5 mW
Maximum IR LED Output:	50µW per IEC 60825-1 measurement procedure
Horizontal Depth of Field:	0 mm - 152 mm (0" - 6") for 0.33 mm (13 mil) Bar Code
Vertical Depth of Field:	0 mm - 216 mm (0" - 8.5") for 0.33 mm (13 mil) Bar Code
Scan Speed:	5400 Scan Lines per Second
No. of Scan Lines:	54 (38 Horizontal / 16 Vertical)
Motor Speed:	6000 / 6000 RPM (Horizontal / Vertical )
Min Bar Width:	0.127 mm (5.0 mil)
Scan Zone:	360°
Decode Capability:	All Standard 1-D Bar Codes, RSS-14, RSS-Expanded, and RSS-14 Limited Bar Codes
System Interfaces:	RS232, Aux RS232, IBM468x/469x, USB, and OCIA
Print Contrast:	35% Minimum Reflectance Difference
No. Characters Read:	Up to 80 data characters. Maximum number will vary based on symbology and density.
Beeper Operation:	7 Tones or No Beep; 3 Volume Settings
Indicators (LED)	Blue Laser ON, Ready to Scan
	White Good Read, Decoding
	Amber Scale at Zero
Mechanical	
	Unit Length      Unit Width      Tower Height
MS2220 L x W x H:	399 mm (15.7")      292 mm (11.5")      130 mm (5.12")
MS2221 L x W x H:	399 mm (15.7")      292 mm (11.5")      130 mm (5.12")
MS2222 L x W x H:	353 mm (13.9")      292 mm (11.5")      130 mm (5.12")
Depth (Below Counter):	100 mm (3.9"), All Models
Weight (with Platter):	MS2220, 9.28 kg (20.5 lbs.)
	MS2221, 9.28 kg (20.5 lbs.)
	MS2222, 5.98 kg (13.20 lbs.)

*Specifications are subject to change without notice.*

## INTRODUCTION

### MS2200 SERIES DESIGN SPECIFICATIONS

	Design Specifications				
Scale Capacities					
Capacity:	kg unit	15 kg		lb. unit	30.0 lb.
Minimum Increment:	kg unit	0.005 kg		lb. unit	0.01 lb.
Maximum Static Weight:	kg unit	75 kg		lb. unit	150 lb.
Adjustments required:	Calibration is required for scaled units.				
Electrical					
Voltage Supply:	2A @ +5.2V / 1A @ +12V				
Operating Power:	11.9 Watts				
Standby Power:	3.25 Watts				
Operating Current:	1.5A @ 5.2V / .3A @ 12V				
Standby Current:	.44 A @ 5.2V / .08A @ 12V				
DC Transformers:	Class II; 5.2VDC @ 2A; 12VDC @ 1A				
Laser Class 1:	IEC 60825-1:1993+A1:1997+A2:2001 EN 60825-1:1994+A11:1996+A2:2001+A1:2002				
EMC:	FCC, ICES-003 & EN 55022 Class A				
Environmental					
Operating Temperature:	0°C to 40°C (32°F to 104°F)				
IP Rating:	IP 55				
Light Levels:	4842 Lux (450 footcandles)				
Storage Temperature:	-40°C to 60°C (-40°F to 140°F)				
Humidity:	5% to 95% Relative Humidity, Non-Condensing				
Contaminants:	Sealed to resist airborne particulate contaminants.				
Ventilation:	None Required				

*Specifications are subject to change without notice.*

# BASE MODEL CHARACTERISTICS

## MS2220 Scanner/Scale

### Components

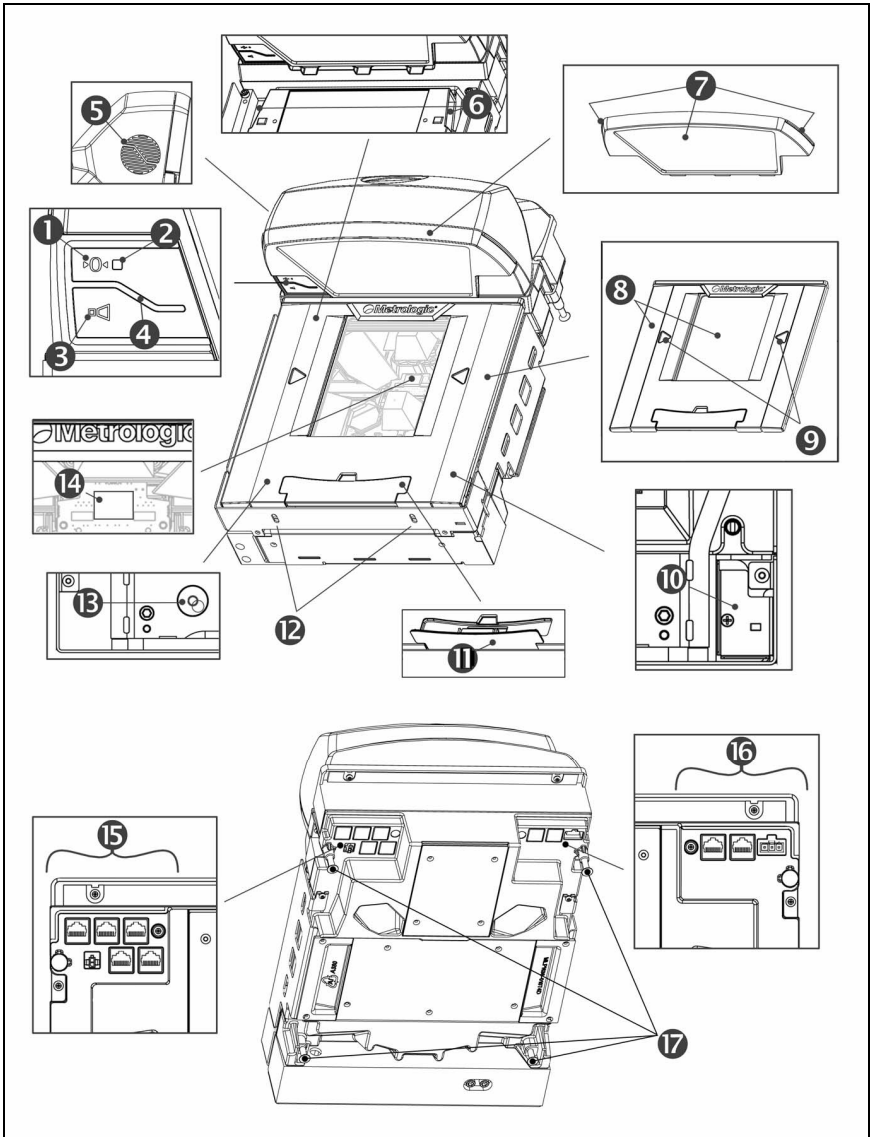



Figure 7. MS2220 Components



## BASE MODEL CHARACTERISTICS

### MS2220 Scanner/Scale

#### Components

ITEM NO.	DESCRIPTION OF ITEM IN FIGURE 7
1	Scale Zero Button (see page 61)
2	Amber LED, Scale Zero Indicator (see page 61)
3	Volume/Tone Multi-Function Button (see page 59)
4	Blue and White LED Indicators (see page 48)
5	Speaker
6	Finger Recesses for Lifting (Located Under Platter)
7	High Impact Window Frame / Vertical Window (Laser Aperture)
8	Replaceable Stainless Steel Platter with Diamonex or Sapphire Horizontal Window (Laser Aperture)
9	Flow Direction Indicator
10	Sealed Calibration Switch/Button Cover (Located Under Platter) On a fully installed unit the calibration switch cover should be sealed with a lead wire or paper seal. This seal indicates the appropriate Federal, State and Local Weights and Measures authorities have calibrated the scale. See the <i>Scale Operation: Calibration</i> section of this guide for further information.
11	Product Weight Roll Bar / Platter Lift Handle
12	Location of Scale Shipping Hardware (see page 25)
13	Leveling Bubble for Scale Arms
14	Diagnostic Indicator Display (see page 51 for Error Codes)
15	Interface, Aux Scanner and EAS Connectors ( see page 12 )
16	Power and Scale Connectors ( see page 12 )
17	Leveling Feet
	Scanner/Scale label information can be found on page 13.

# BASE MODEL CHARACTERISTICS

## MS2220 Scanner/Scale

### Dimensions

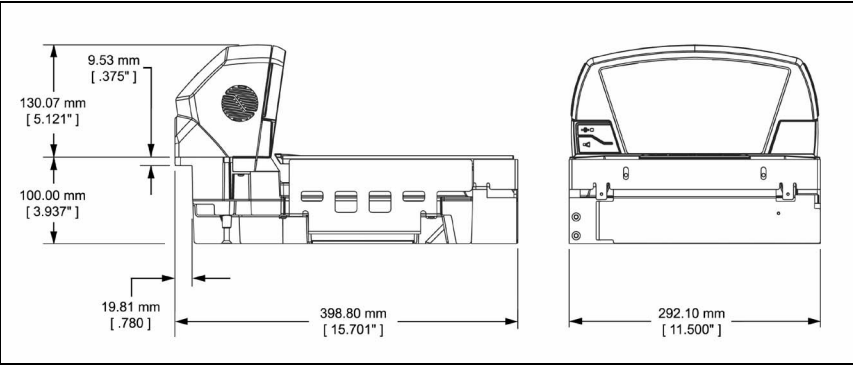


Figure 8. MS2220 Dimensions

### Connector Panel

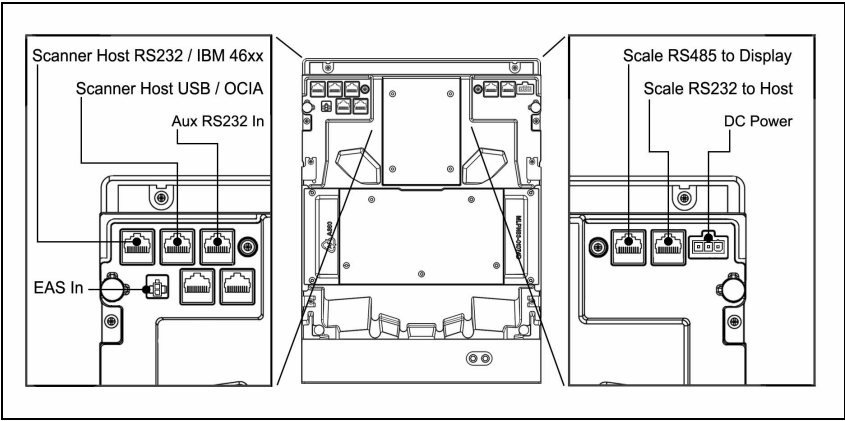


Figure 9. MS2220 Connector Panel

# BASE MODEL CHARACTERISTICS

## MS2220 Scanner/Scale

### Caution and Serial Number Labels

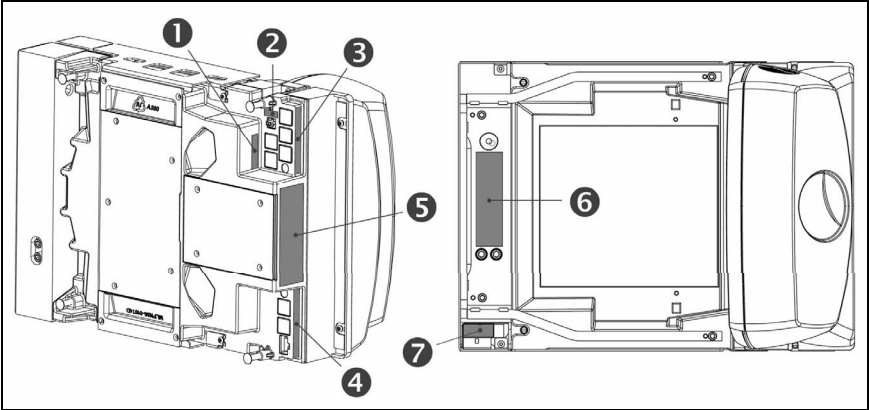


Figure 10. MS2220 Label Locations (Top) and Examples (Bottom)

1

Scale Data In	Scale Display Data In
------------------	--------------------------

2

EAS In
--------


3

Scanner Host RS232, 46xx	Scanner Host USB, OCIA	Aux RS232 In
-----------------------------	---------------------------	-----------------

4



Scale RS485 to Display	Scale RS232 to Host	DC Power In
---------------------------	------------------------	----------------


5

**Metrologic Instruments Inc.**  
Blackwood New Jersey, USA  
Contains no user serviceable components. Warranty void if case is opened. Complies with FCC and ICES-003 Class A. See manual.  
Manufactured Blackwood, NJ August 2005 (A)  
Model: MS2220-105AD / 232, OCIA, 46XX, USB  
Stratos® Barcode Scanner  
37 03 09 0011  
  
See User's Guide for patent coverage.


This product complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50 dated July 26, 2001.


5V, 12V

CAUTION:  
Laser light when opened.  
DO NOT STARE INTO BEAM. 

6

**Metrologic**  
**Model MS2220-z**   
CAPACITY 30 x 0.01 lb / 15 x 0.005 kg  
12V 1.5A MAX  
NTEP CC 03-056

S/N: 37 05 18 0013  


7

**Metrologic**  
**SEAL**

MS2221 Scanner

Components

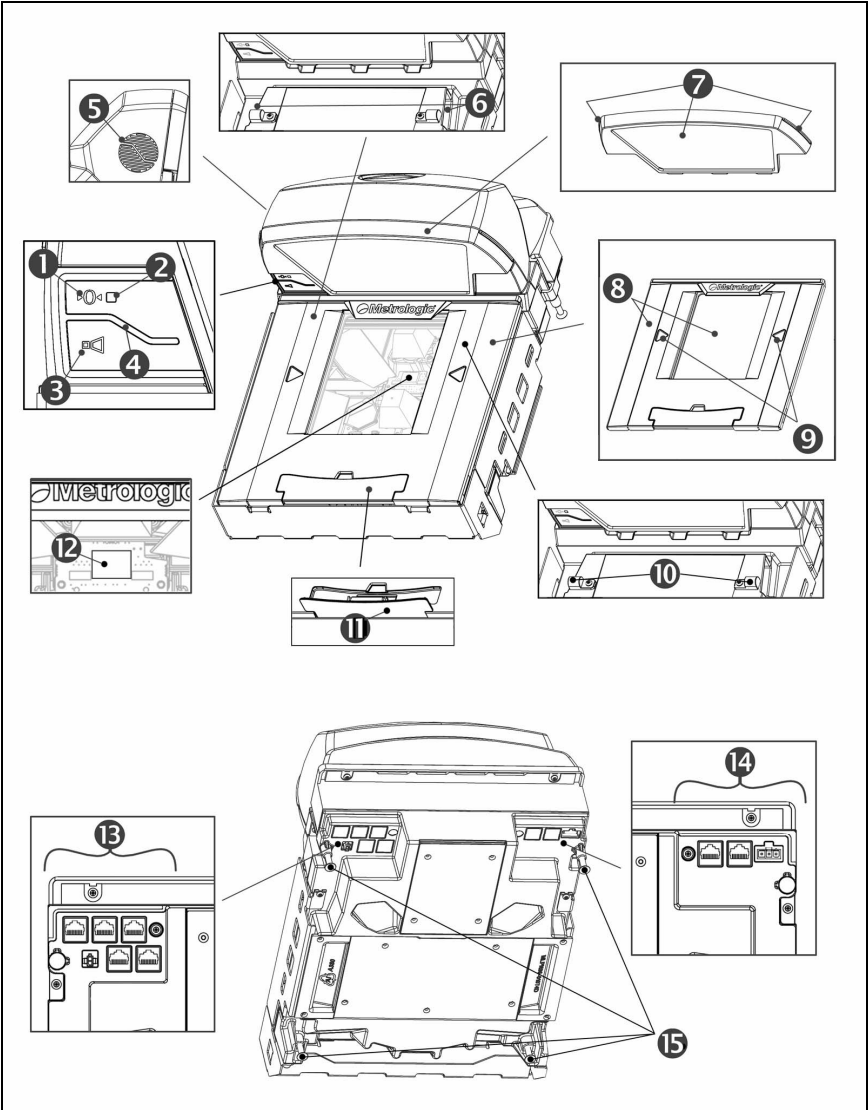



Figure 11. MS2221 Components

## BASE MODEL CHARACTERISTICS

---

### MS2221 Scanner

#### Components

ITEM NO.	DESCRIPTION OF ITEM IN FIGURE 11
1	Scale Zero Button (Option on the MS2220 and the MS2230 Only)
2	Amber LED, Scale Zero Indicator (Option on the MS2220 and the MS2230 Only)
3	Volume/Tone Multi-Function Button ( <i>see page 59</i> )
4	Blue and White LED Indicators ( <i>see page 48</i> )
5	Speaker
6	Finger Recesses for Lifting
7	High Impact Window Frame / Vertical Window (Laser Aperture)
8	Replaceable Stainless Steel Platter with Diamonex or Sapphire Horizontal Window (Laser Aperture)
9	Flow Direction Indicators
10	Platter Support Bumpers ( <i>see page 79</i> )
11	Optional Product Weight Roll Bar / Platter Lift Handle (Option provided with <i>scale ready</i> MS2221-105x models only.)
12	Diagnostic Indicator Display ( <i>see page 51 for Error Codes</i> )
13	Interface, Aux Scanner and EAS Connectors ( <i>see page 16</i> )
14	Power Connector Area ( <i>see page 16</i> )
15	Optional Leveling Feet (Option provided with <i>scale ready</i> MS2221-105x models only.)
	Scanner label information can be found on page 17.

# BASE MODEL CHARACTERISTICS

## MS2221 Scanner

### Dimensions

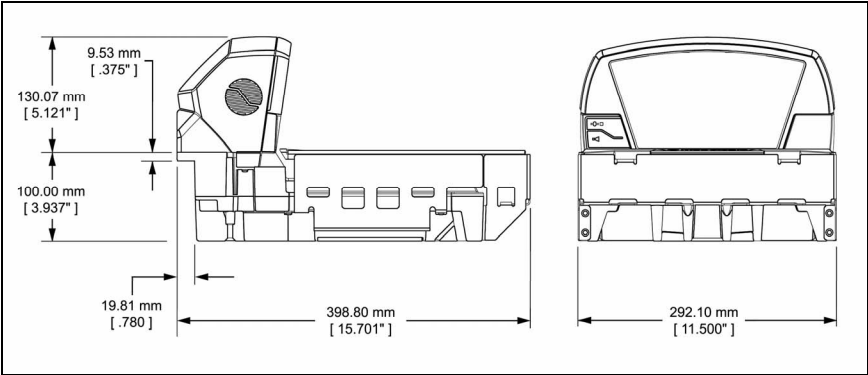


Figure 12. MS2221 Dimensions

### Connector Panel

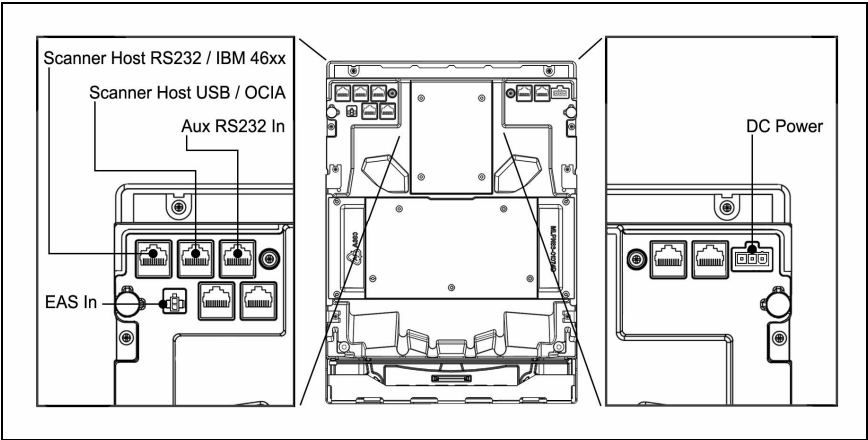


Figure 13. MS2221 Connector Panel

BASE MODEL CHARACTERISTICS

MS2221 Scanner

Caution and Serial Number Labels

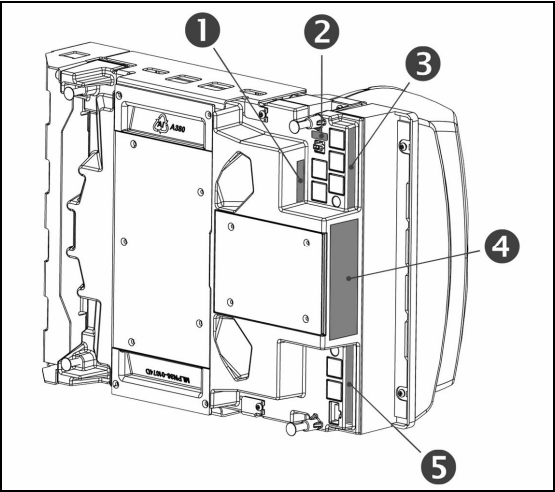


Figure 14. MS2221 Label Locations (Top) and Examples (Bottom)

1

N/A	N/A
-----	-----


2

EAS In
--------


3


Scanner Host	Scanner Host	Aux
RS232, 46xx	USB, OCIA	RS232 In


4

**Metrologic Instruments Inc.**  
Blackwood New Jersey, USA  
Contains no user serviceable components. Warranty void if case is opened. Complies with FCC and ICES-003 Class A.  
See manual.  
Manufactured Blackwood, NJ. August 2005 (A)  
Model: MS2221-105D 232, OCIA, 46XX, USB  
Stratos® Barcode Scanner  
37 03 09 0011  
  
See User's Guide for patent coverage.

This product complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50 dated July 26, 2001.

  
CAUTION:  
Laser light when opened.  
DO NOT STARE INTO BEAM.

  
LISTED  
94J8  
I.T.E.



5

N/C	N/C	DC Power In
-----	-----	----------------

17

# BASE MODEL CHARACTERISTICS

## MS2222 Scanner

### Components

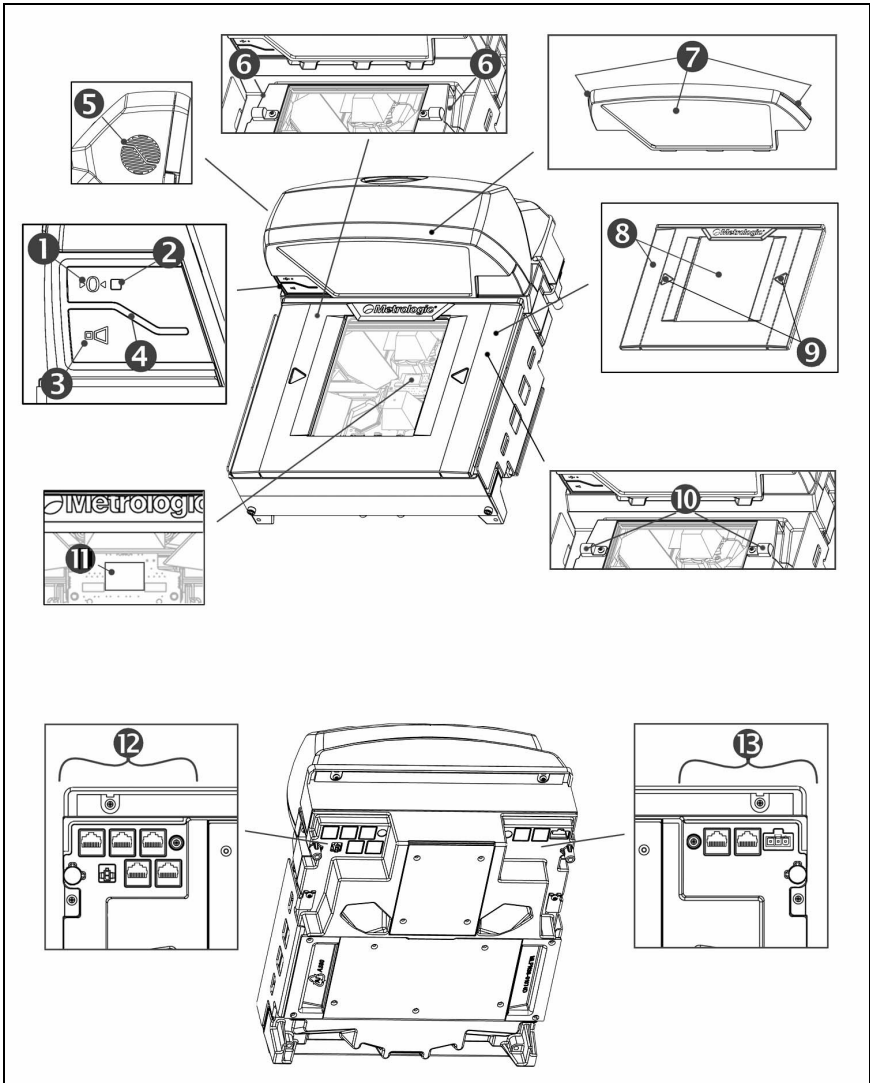


Figure 15. MS2222 Components




## BASE MODEL CHARACTERISTICS

---

### MS2222 Scanner

#### Components

ITEM NO.	DESCRIPTION OF ITEM IN FIGURE 15
1	Scale Zero Button (Option on the MS2220 and the MS2230 Only)
2	Amber LED, Scale Zero Indicator (Option on the MS2220 and the MS2230 Only)
3	Volume/Tone Multi-Function Button ( <i>see page 59</i> )
4	Blue and White LED Indicators ( <i>see page 48</i> )
5	Speaker ( <i>see page 47</i> )
6	Finger Recesses for Lifting (Located Under Platter)
7	High Impact Window Frame / Vertical Window (Laser Aperture)
8	Replaceable Stainless Steel Platter with Diamonex or Sapphire Horizontal Window (Laser Aperture)
9	Flow Direction Indicator
10	Platter Support Bumpers ( <i>see page 79</i> )
11	Diagnostic Indicator Display ( <i>see page 51</i> )
12	Interface, Aux Scanner and EAS Connectors ( <i>see page 20</i> )
13	Power Connector ( <i>see page 20</i> )
	Scanner label information can be found on page 21.

# BASE MODEL CHARACTERISTICS

## MS2222 Scanner

### Dimensions

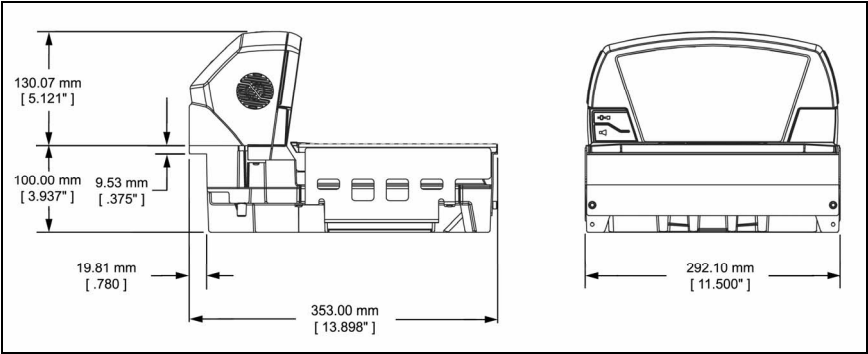


Figure 16. MS2222 Dimensions

### Connector Panel

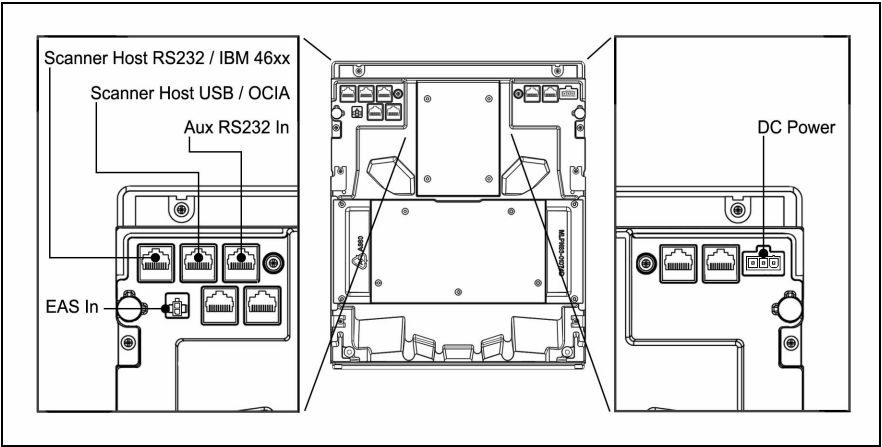


Figure 17. MS2222 Connectors

BASE MODEL CHARACTERISTICS

MS2222 Scanner

Caution and Serial Number Labels

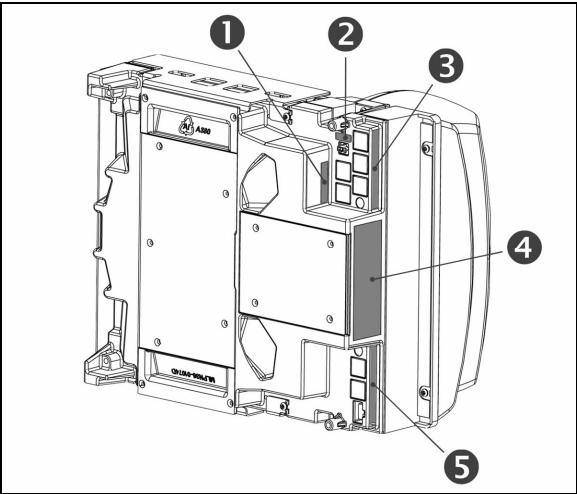


Figure 18. MS2222 Label Locations (Top) and Examples (Bottom)

1

N/C	N/C
-----	-----


2

EAS In
--------


3

Scanner Host	Scanner Host	Aux
RS232, 46xx	USB, OCIA	RS232 In

4

**Metrologic Instruments Inc.**  
Blackwood New Jersey, USA  
Contains no user serviceable components. Warranty void if case is opened. Complies with FCC and ICES-003 Class A.  
See manual.  
Manufactured Blackwood, NJ. August 2005 (A)  
Model: MS2222-105D 232, OCIA, 46XX, USB  
Stratos® Barcode Scanner  
37 03 09 0011  
  
See User's Guide for patent coverage.

This product complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50 dated July 25, 2001.




UL

LISTED

94J8

I.T.E.



CAUTION:  
Laser light when opened.  
DO NOT STARE INTO BEAM.

5

N/C	N/C	DC Power In
-----	-----	----------------

## INSTALLATION

---

### QUICK INSTALLATION OUTLINE

The following is a quick preview of the steps required for 1<sup>st</sup> time installations. Each item is discussed in detail later in this section.

- Determine clearance, ventilation and service access requirements.
- Determine checkstand layout taking into account package flow, cable routing and power requirements.
- Choose the mounting option which provides the best cable/power access and unit stability.
- Unpack the unit.
- Make the appropriate countertop cutouts and install all support brackets.
- Place the unit in the counter.
- Install the platter.
- Follow the steps under the correct interface to connect the cables and power supply.
- Configure the unit for the correct interface.
- Calibrate the scale (for the MS2220 model only).

### SITE REQUIREMENTS

Before installing your StratosS scanner/scale, please consider the following items.

#### **Vertical Clearance**

A minimum clearance height of 5.25" from the checkstand surface is needed for the vertical 'hood' on all of the scanner models.

#### **Ventilation and Spacing**

All StratosS models have a die-cast housing to dissipate heat allowing the unit to operate without a ventilation fan. Metrologic recommends that the temperature surrounding the unit does not exceed 40°C (104°F). There should be adequate convection and minimal heat producing equipment in close proximity of the unit. A cooling fan with a filter is recommended if there will be a conveyor motor or other heat producing equipment close to the unit that will create a high temperature environment.

Adequate spacing between the unit and the checkstand opening is required for proper operation of the scale. When the scanner/scale model is mounted properly, the scale platter should be able to move up and down freely without hitting the edges of the checkstand cutout. Refer to *Installing the Unit in the Counter* for detailed cutout dimensions and mounting instructions.

## INSTALLATION

---

### SITE REQUIREMENTS

#### Service Access

When routing and installing the cable(s) and power supply, make sure you leave access that these components may be swapped easily without the need to remove the unit from the checkstand.

When changing the StratosSWAP optics engine modules, Metrologic recommends removing the unit completely from the checkstand.

When calibrating or zeroing the scale, do not remove the unit from the checkstand. Refer to the *Scale Operation Section* of this guide for detailed instructions on zeroing and calibration.

#### Power Installation

The Power Supply (AC/DC) should be connected to an AC Outlet that is free of electrical noise (clean). A qualified electrician can determine the amount of electrical noise on the AC line. See additional information on power installation and restrictions under the Installation: Interface section of this manual.



Metrologic recommends using a switched AC outlet. The switch should be located on the operator's side of the checkstand in close proximity to the StratosS to facilitate calibration and service of the unit.

#### Checkstand Layout Considerations

When placing a scanner in a checkstand, the following factors should be considered.

- Items should flow at a distance to the operator that maximizes comfort. The operator should not need to stretch or strain to reach for and scan packages.
- The StratosS can scan a bar code on five sides of a package. The packages should flow into the scan area that provides the maximum reading performance. No lifting or orientation of the items is necessary. A properly placed item diverter can maximize the flow of packages.
- In what direction are the packages flowing? Most checkstands are designed for left-handed takeaway. If the operator is facing the vertical window of the scanner, packages flow from the operator's right to left. The packages are in queue on the conveyor to the right and the bagging is to the left.

## INSTALLATION

### UNPACKING THE UNIT

1. Make sure the shipping box is top-side up before opening.
2. Remove the accessories box and check the box's content for the following items.

- Remote Display (*Optional*) ..... Qty. 1
- Product Manuals ..... Qty. 3
- Power Supply ..... Qty. 1
- Communication Cables ..... Qty. of Cables is Application Dependent

3. Lift the scanner out of the shipping box by gripping the **bottom** of the unit on both sides.

**Important!** Do not lift the unit out of the box by gripping the sides of the platter.

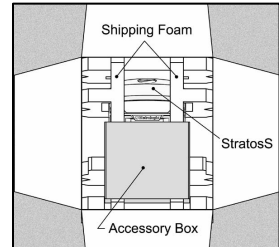


Figure 19

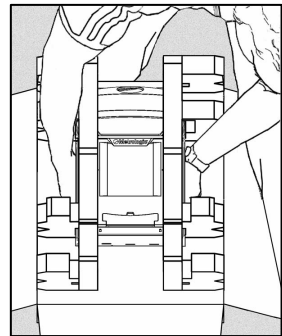


Figure 20

4. Carefully remove the shipping foam around the unit.

**Important!** Do not turn the unit upside down or tilt the unit onto its side while removing the shipping foam. The platter is not attached to the unit and can fall off!

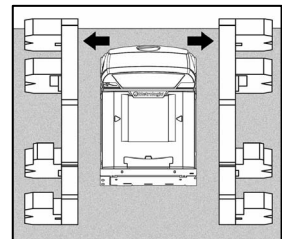


Figure 21

5. Lift the platter off the unit and store it in a safe location until the unit is installed in the checkstand counter.

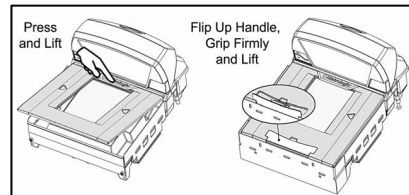


Figure 22

## INSTALLATION

### UNPACKING THE UNIT

#### MS2220 Package Warning

All hardware securing the scale arms during shipping must be removed or the scale will not function!

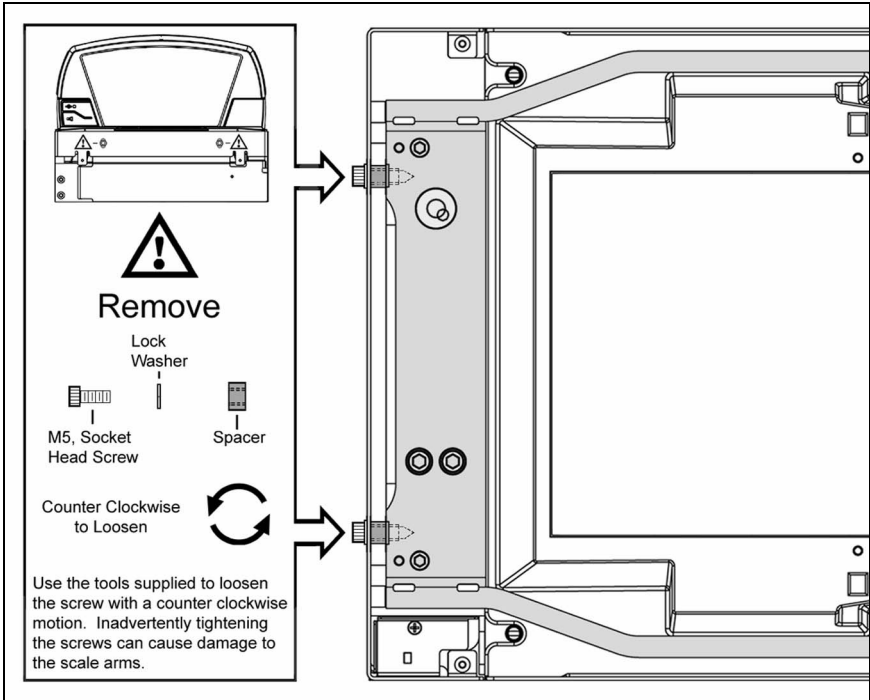


Figure 23



#### **Do not discard instructions and shipping hardware!**

These items must be reinstalled if the unit is going to be shipped.

### INSTALLING THE UNIT IN THE COUNTER

Before starting to mount the StratosS determine:

- the scanner's orientation in reference to the operator and the direction of package flow,
- the mounting method that provides the most stability for the scanner and
- if any additional materials or tools are required for installation.

# INSTALLATION

## INSTALLING THE UNIT IN THE COUNTER

### MS2220 Mounting Diagram

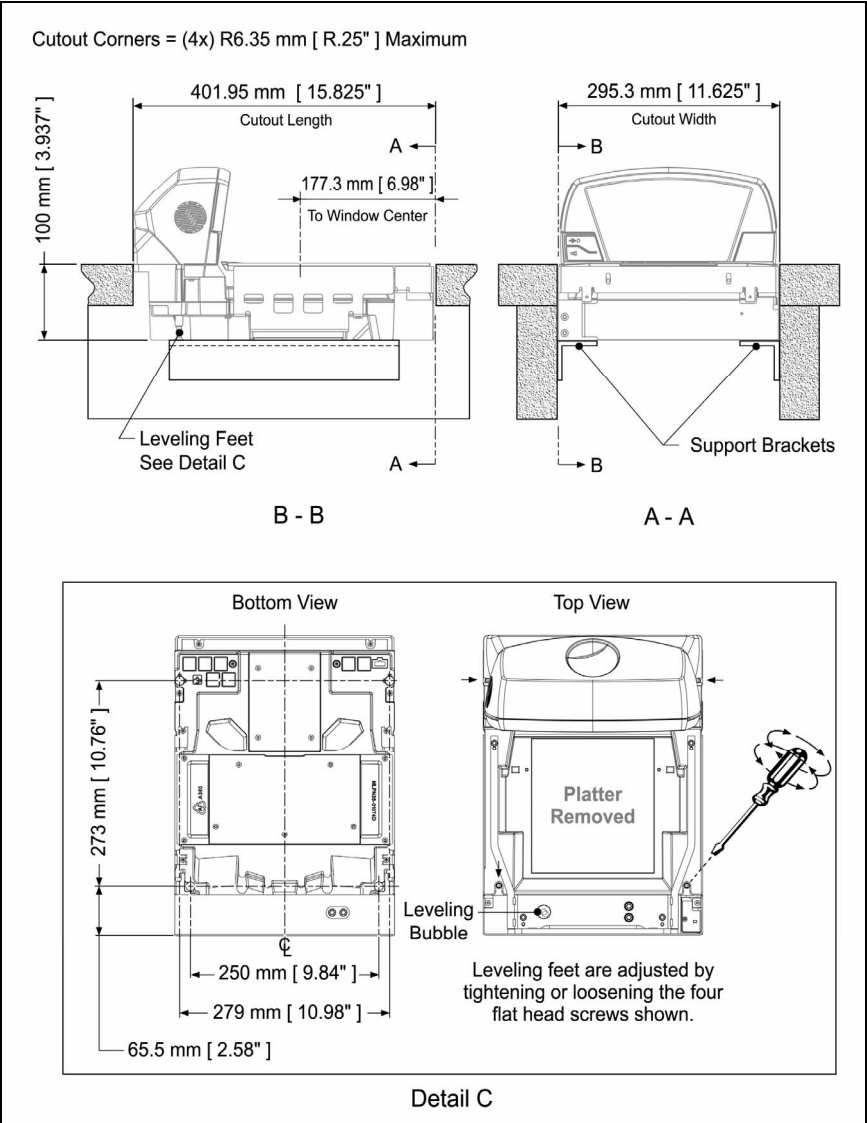


Figure 24. MS2220 Mounting Diagram



INSTALLATION

INSTALLING THE UNIT IN THE COUNTER

MS2221 Mounting Diagram

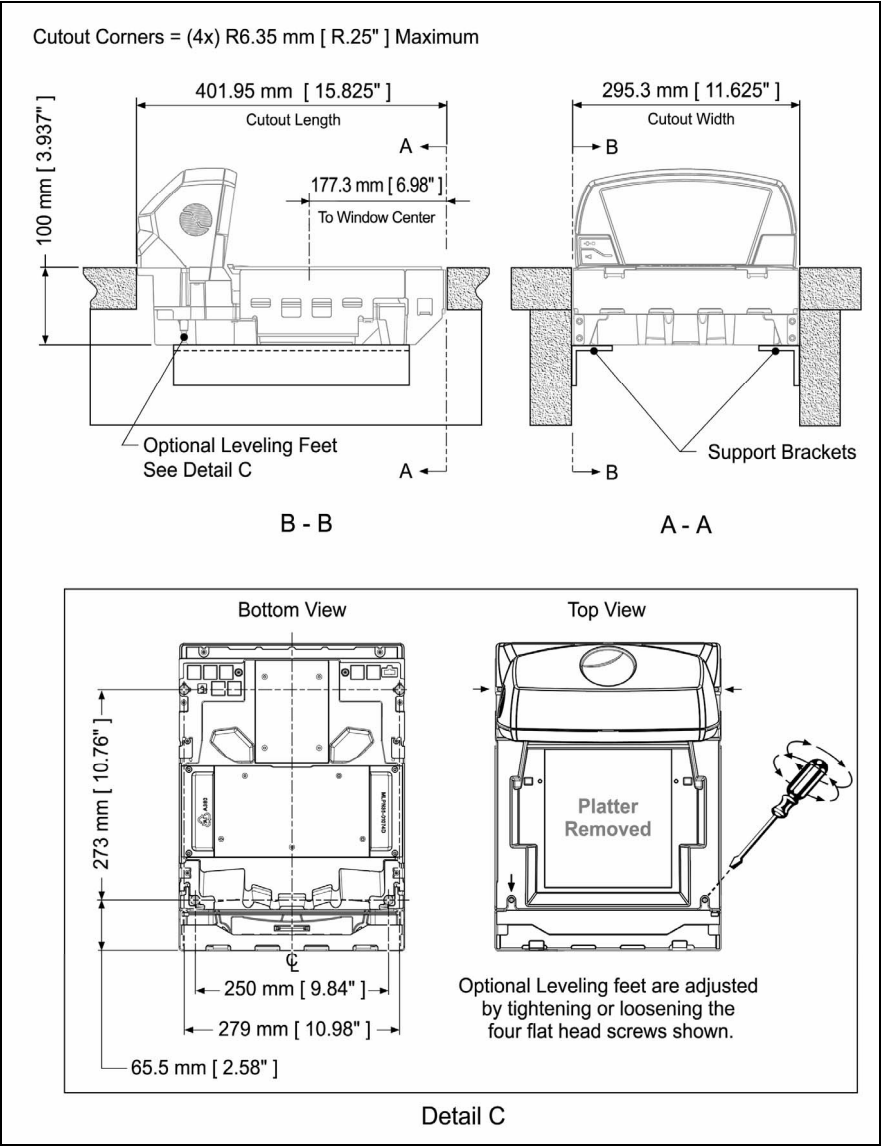


Figure 25. MS2221 Mounting Diagram

INSTALLATION

INSTALLING THE UNIT IN THE COUNTER

MS2222 Mounting Diagram

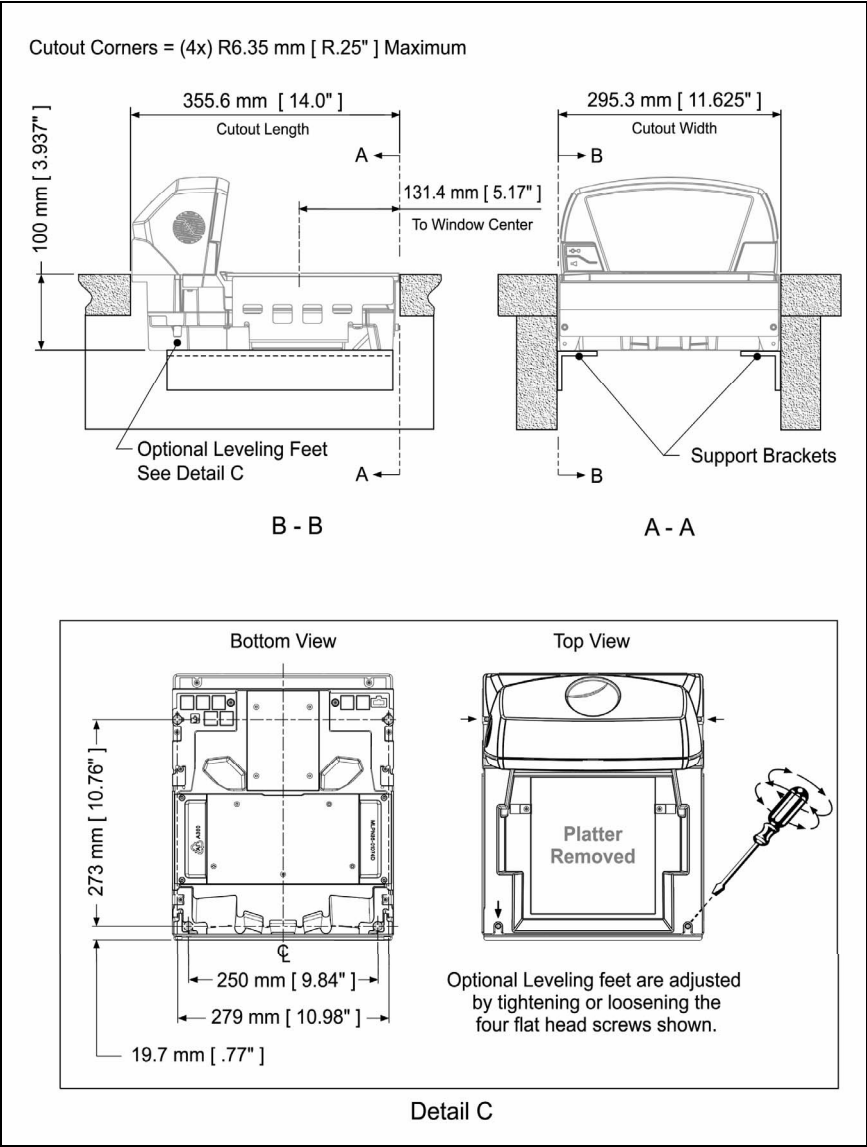


Figure 26. MS2222 Mounting Diagram

## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### RS232

The following steps describe how to properly install the cables for an RS232 StratosS application. The scanner/scale **must** then be configured to match the host's RS232 parameters. Cable installation alone **does not** guarantee that the StratosS will communicate properly with the host system.



Configuration bar codes are located in the MetroSelect Configuration Guide (MLPN 00-02407.x) and the MS2.x0 Stratos Series Configuration Addendum (MLPN 00-02034.x).

1. Turn off the host system.
2. Plug the 10-pin RJ45 end of the RS232 interface cable (MLPN 57-57210.x-N-3) into the 10-pin socket labeled *Scanner Host RS232*, on the bottom of the StratosS. Refer to figure on page 31.
3. Connect the other end of the RS232 cable to the proper communication port on the host device.



Before continuing, verify that the RS232 interface cable is connected to the appropriate interface socket on the scanner. An incorrect cable connection can cause communication problems or potential damage to the scanner and/or terminal.

Steps 4 through 6 are for scaled MS2200 models using dual cable interfaces where the scale connects to the host with a separate communication cable. *Skip to Step 7 for all StratosS models that do not have a scale. Skip to Step 6 for scaled StratosS models using a single cable interface with an optional remote display.*

4. Plug the dual interface cable (MLPN 57-57000.x-N-3) into the 10-pin socket labeled, *Scale RS232 to Host*, on the bottom of the StratosS.
5. Connect the other end of the dual interface cable (MLPN 57-57000.x-N-3) to the appropriate communication port on the host's scale device.
6. Plug the *optional* remote display cable (MLPN 46-00248.x or 46-00249.x) into the 10-pin socket labeled, *Scale RS485 to Display*, on the bottom of the StratosS.

## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### RS232

7. Plug the external power supply (MLPN 46-002x) into the 3-pin Molex socket labeled, DC Power In, on the bottom of the StratosS.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet should be located near the equipment and be easily accessible.



Metrologic recommends using a switched AC outlet. The switch should be located on the operator's side of the checkstand in close proximity to the StratosS to facilitate calibration and service of the unit.

8. Connect AC power to the transformer. If the AC outlet is equipped with an on/off switch, turn the power on.
9. Turn on the host system.
10. Scan the recall *Recall Defaults* bar code.



The *Recall Defaults* bar code is located in the MetroSelect Configuration Guide, under *Need to Start Over* on page xi (MLPN 00-02407x).

11. Configure the StratosS to match the host system's RS232 parameters.



Refer to the MetroSelect Configuration Guide (MLPN 00-02407x) under *Section G: RS232* for enabling RS232 Mode (scan the *recall defaults* bar code first).

Refer to the MS2x0 Stratos Series Configuration Addendum (MLPN 00-02034x) for scale, dual cable and single cable configuration bar codes.

#### Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### RS232

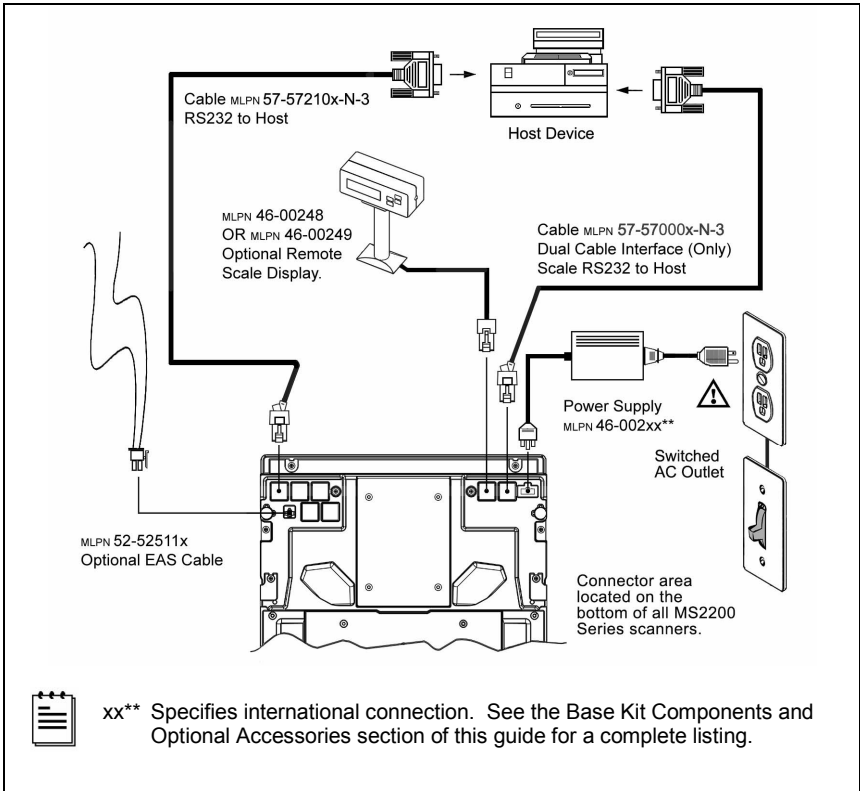


Figure 27. RS232 Interface Cable Installation Schematic

**Caution:** To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.



To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### FULL SPEED USB

The following steps describe how to properly install the cables for a Full Speed USB StratosS application. The scanner/scale **must** then be configured to match the host's USB parameters. Cable installation alone **does not** guarantee that the StratosS will communicate properly with the host system.



Configuration bar codes are located in the MetroSelect Configuration Guide (MLPN 00-02407.x) and the MS2.x:x0 Stratos Series Configuration Addendum (MLPN 00-02034.x).

1. Turn off the host system.
2. Plug the 10-pin RJ45 end of the USB interface cable (MLPN 57-57201.x-N-3 or 57-57227.x-N-3) into the 10-pin socket labeled, *Scanner Host USB*, on the bottom of the StratosS. Refer to Figure on page 34.
3. Connect the other end of the USB interface cable to the appropriate USB port on the host device.



Before continuing verify that the USB interface cable is connected to the appropriate socket on the scanner. An incorrect cable connection can cause communication problems or potential damage to the scanner and/or terminal.



**Manufacturers Note:** Plugging the scanner into the USB port of the host does not guarantee that scanned information will appear at the host. A software driver and correct configuration setting are also required for proper communication to occur.

Steps 4 through 6 are for scaled MS2200 models using dual cable interfaces where the scale connects to the host with a separate communication cable. *Skip to Step 7 for all StratosS models that do not have a scale. Skip to Step 6 for scaled StratosS models using a single cable interface with an optional remote display.*

4. Plug the dual interface cable (MLPN 57-57000.x-N-3) to the 10-pin socket labeled, *Scale RS232 to Host*, on the bottom of the StratosS.
5. Connect the other end of the dual interface cable (MLPN 57-57000.x-N-3) to the appropriate communication port on the host's scale device.

## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### FULL SPEED USB

6. Plug the optional remote display cable (MLPN 46-00248*x* or 46-00249) into the 10-pin socket labeled Scale RS485 to Display on the bottom of the StratosS.
7. Plug the external power supply (MLPN 46-002*xx*) into the 3-pin Molex socket labeled, *DC Power In*, on the bottom of the StratosS.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet should be located near the equipment and be easily accessible.



Metrologic recommends using a switched AC outlet. The switch should be located on the operator's side of the checkstand in close proximity to the StratosS to facilitate calibration and service of the unit.

8. Connect AC power to the transformer. If the AC outlet is equipped with an on/off switch, turn the power on.
9. Turn on the host system.
10. Configure the StratosS to match the host system's USB parameters.



Refer to the MS2*xx*0 Stratos Series Configuration Addendum (MLPN 00-02034*x*) under *Scanner Configuration Bar Codes: IBM OEM Full Speed USB Communication Defaults* and *IBM OEM Full Speed USB Protocols*. Additional scale, dual cable and single cable configuration bar codes are also available in the addendum.

Additional general configuration bar codes can be found in the MetroSelect Configuration Guide (MLPN 00-02407*x*).

#### Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### FULL SPEED USB

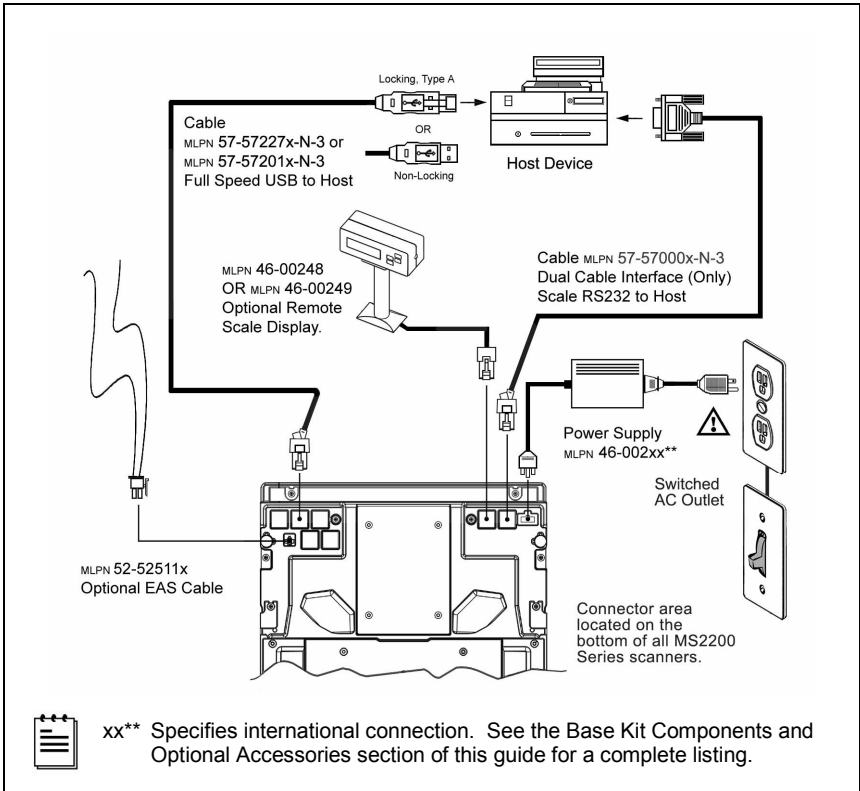


Figure 28. USB Cable Installation Schematic

**Caution:** To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.



To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.



## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### IBM 46xx

The following steps describe how to properly install the cables for an IBM 46xx StratosS application. The scanner/scale **must** then be configured to match the host's IBM 46xx parameters. Cable installation alone **does not** guarantee that the StratosS will communicate properly with the host system.



Configuration bar codes are located in the MetroSelect Configuration Guide (MLPN 00-02407.x) and the MS2.x:0 Stratos Series Configuration Addendum (MLPN 00-02034.x).

1. Turn off the host system.
2. Plug the 10-pin RJ45 end of the IBM interface cable (MLPN 57-57212.x-N-3) into the 10-pin socket labeled *Scanner Host 46xx*, on the bottom of the StratosS. Refer to Figure on page 37.
3. Connect the other end of the IBM cable to communication port 9 on the host device.



Before continuing verify that the IBM cable is connected to the appropriate interface socket on the scanner. An incorrect cable connection can cause communication problems or potential damage to the scanner and/or terminal.



**Manufacturers Note:** Plugging the scanner into the serial port of the host device does not guarantee that scanned information will appear at the host device. A software driver and correct configuration settings are also required for proper communication to occur.

Steps 4 through 6 are for scaled MS2200 models using dual cable interfaces where the scale connects to the host with a separate communication cable. *Skip to Step 7 for all StratosS models that do not have a scale. Skip to Step 6 for scaled StratosS models using a single cable interface with an optional remote display.*

4. Plug the 10-pin RJ45 end of the dual interface cable (MLPN 57-57000.x-N-3) into the 10-pin socket labeled *Scale RS232 to Host* on the bottom of the bottom of the StratosS.
5. Connect the other end of the dual interface cable (MLPN 57-57000.x-N-3) into the appropriate communication port on the host's scale.

## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### IBM 46xx

6. Plug the *optional* remote display cable (MLPN 46-00248*x* or 46-00249*x*) into the 10-pin socket labeled Scale RS485 to Display on the bottom of the StratosS.
7. Plug the external power supply (46-002xx) into the 3-pin Molex socket labeled, *DC Power In*, on the bottom of the StratosS.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet should be located near the equipment and be easily accessible.



Metrologic recommends using a switched AC outlet. The switch should be located on the operator's side of the checkstand in close proximity to the StratosS to facilitate calibration and service of the unit.

8. Connect AC power to the transformer. If the AC outlet is equipped with an on/off switch, turn the power on.
9. Turn on the host system.
10. Configure the StratosS to match the host system's IBM 46xx parameters.



Refer to the MS2*x*0 Stratos Series Configuration Addendum (MLPN 00-02034*x*) under *Scanner Configuration Bar Codes: IBM 3<sup>rd</sup> Generation Communication Defaults and IBM 3<sup>rd</sup> Generation Protocols*.

Additional general configuration bar codes can be found in the MetroSelect Configuration Guide (MLPN 00-02407*x*).

#### Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### IBM 46xx

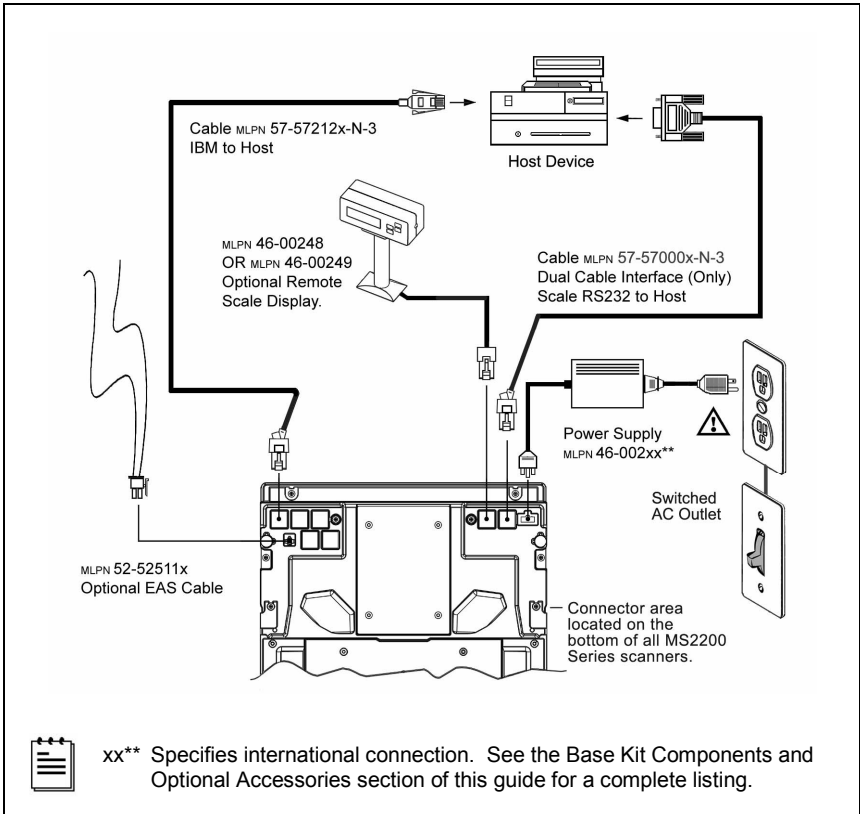


Figure 29. IBM Cable Installation Schematic

**Caution:** To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.



To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### OCIA

The following steps describe how to properly install the cables for an OCIA StratosS application. The scanner/scale **must** then be configured to match the host's OCIA parameters. Cable installation alone **does not** guarantee that the StratosS will communicate properly with the host system.



Configuration bar codes are located in the MetroSelect Configuration Guide (MLPN 00-02407.x) and the MS2.x:0 Stratos Series Configuration Addendum (MLPN 00-02034.x).

1. Turn off the host system.
2. Plug the 10-pin RJ45 end of the OCIA interface cable (MLPN 57-57016.x-N-3) into the 10-pin socket labeled *Scanner Host OCIA* on the bottom of the StratosS. Refer to figure on page 40.
3. Connect the other end of the OCIA Interface cable (MLPN 57-57016.x-N-3) to the appropriate communication port on the host device.



Before continuing verify that the OCIA cable pinouts match the host system's and is connected to the appropriate interface socket on the scanner. An incorrect cable connection can cause communication problems or potential damage to the scanner and/or terminal.



**Manufacturers Note:** Plugging the scanner into the serial port of the host device does not guarantee that scanned information will appear at the host device. A software driver and correct configuration settings are also required for proper communication to occur.

Steps 4 through 6 are for scaled MS2200 models using dual cable interfaces where the scale connects to the host with a separate communication cable. *Skip to Step 7 for all StratosS models that do not have a scale. Skip to Step 6 for scaled StratosS models using a single cable interface with an optional remote display.*

4. Plug the dual interface cable (MLPN 57-57000.x-N-3) into the 10-pin socket labeled *Scale RS232 to Host*, on the bottom of the StratosS.
5. Connect the other end of the dual interface cable (MLPN 57-57000.x-N-3) to the appropriate communication port on the host's scale device.

## INSTALLATION

---

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### OCIA

6. Plug the *optional* remote display cable (MLPN 46-00248.x or 46-00249.x) into the 10-pin socket labeled *Scale RS485 to Display* on the bottom of the StratosS.
7. Plug the external power supply (MLPN 46-002.x.x) into the 3-pin Molex socket labeled, *DC Power In*, on the bottom of the StratosS.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet should be located near the equipment and be easily accessible.



Metrologic recommends using a switched AC outlet. The switch should be located on the operator's side of the checkstand in close proximity to the StratosS to facilitate calibration and service of the unit.

8. Connect AC power to the transformer. If the AC outlet is equipped with an on/off switch, turn the power on.
9. Turn on the host system.
10. Configure the StratosS to match the host system's OCIA parameters.



Refer to the MetroSelect Configuration Guide (MLPN 00-02407.x) under *Section I: OCIA* for enabling and setting OCIA parameters.

Refer to the MS2.x.x0 Stratos Series Configuration Addendum (MLPN 00-02034.x) for scale, dual cable and single cable configuration bar codes.

#### Caution:



To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### CABLE INSTALLATION (INTERFACE SPECIFIC)

#### OCIA

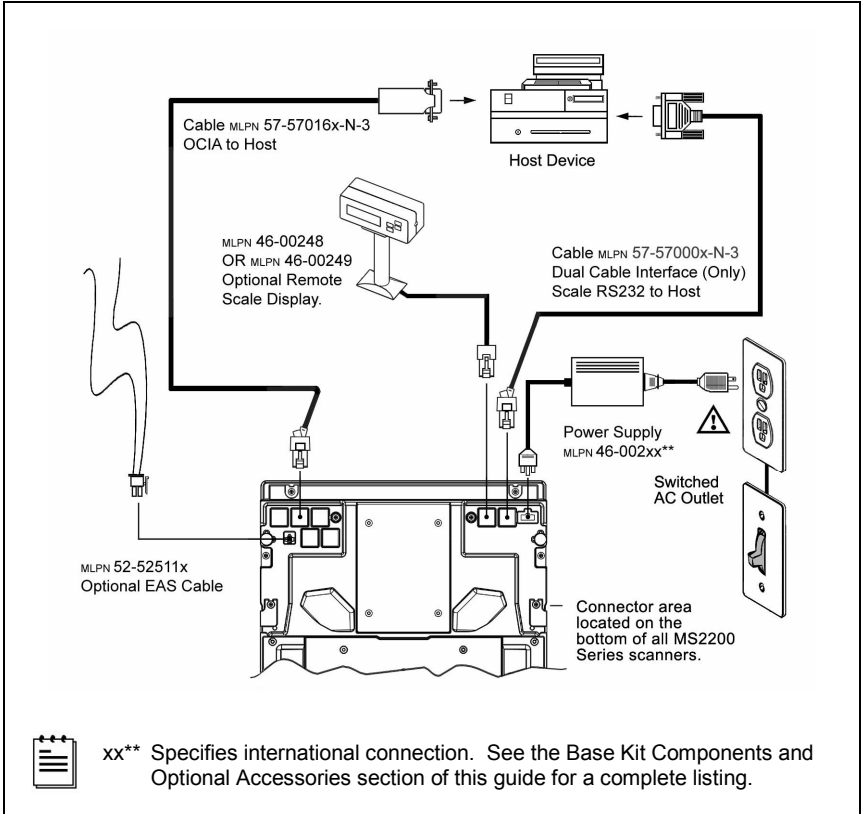


Figure 30. OCIA Cable Installation Schematic

**Caution:** To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.



To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

---

### CABLE INSTALLATION (SECONDARY METROLOGIC SCANNER)

The following steps describe how to properly install the cables between a secondary *Metrologic* scanner and the StratosS. The StratosS and the secondary scanner **must** then be configured to communicate properly. Cable installation alone **does not** guarantee that the StratosS will communicate properly with the host system and secondary scanner.



Contact a Metrologic customer service representative **before** connecting another manufacturer's scanner to the StratosS as a secondary scanner.



Configuration bar codes are located in the MS2x0 Stratos Series Configuration Addendum (MLPN 00-02034.x) under *Scanner Configuration Bar Codes: Auxiliary Port, Quick Start for a Secondary Metrologic Scanners*.

1. Refer to pages 29 - 38 for the type of interface (*RS232, IBM 46xx, etc.*) required for your application. Follow the cable installation steps under the appropriate interface before continuing. Once the communication and power cables have been installed follow step 2 below for the secondary scanner installation.
2. Connect the **straight** end of the RS232 PowerLink AUX cable (MLPN 57-57099x-3) into the RS232 socket of the **secondary** scanner (*see figure on page 42*).
3. Connect the **angled** end of the RS232 AUX cable (MLPN 57-57099x-3) into the 10-pin socket labeled **Aux RS232 In**, on the bottom of the StratosS.

*Important: The StratosS series' aux port requires the signals; transmit, receive, RTS & CTS from the secondary scanner.*



StratosS' auxiliary port will support 5VDC devices with a 150mA maximum current. If the auxiliary device exceeds this specification an external power supply will be required to power the auxiliary device.

The following Metrologic scanners can receive power from StratosS: the MS9520, MS9540, and the MS5145.

## INSTALLATION

### CABLE INSTALLATION (SECONDARY METROLOGIC SCANNER)

4. **This step is required for secondary devices that require >5VDC and/or 150mA current to operate.** Skip to step 5 if the secondary device requires  $\leq 5$ VDC.

Plug the power supply into the **secondary** scanner's PowerLink cable (MLPN 57-57099x-3) and connect AC power to the secondary scanner.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet should be located near the equipment and be easily accessible.

5. Configure the StratosS and the secondary scanner. The auxiliary input port's data format must match the main output format of the secondary scanner.



Refer to the MS2x0 Stratos Series Configuration Addendum (MLPN 00-02034.x) under *Scanner Configuration Bar Codes: Auxiliary Port, Quick Start for a Secondary Metrologic Scanners.*

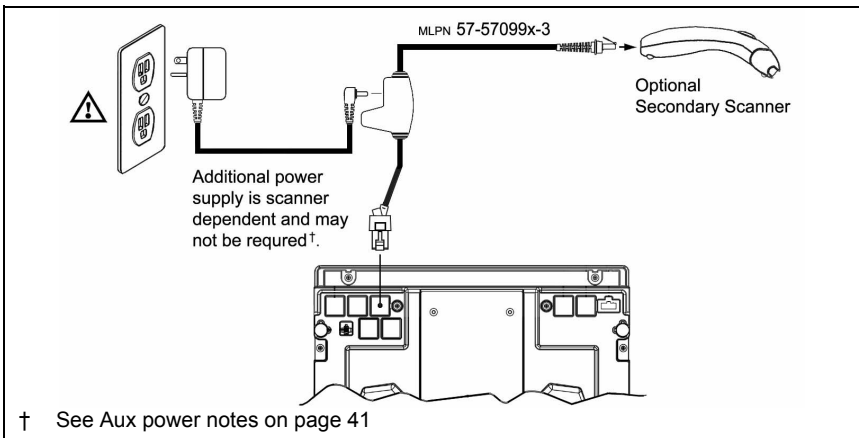


Figure 31. Secondary Scanner Cable Installation Schematic

**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.



To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.



# INSTALLATION

## EAS DEACTIVATION

SW1 and SW2 are the switch banks inside the CheckPoint Device that set the deactivation range. The following is a list of CheckPoint recommended switch bank settings.

Base Model	CheckPoint Recommended Switch Bank Settings
MS2220	SW1 & SW2 switches 1 and 6 set to ON
MS2221	SW1 & SW2 switches 1 and 6 set to ON
MS2222	SW1 & SW2 switches 1 and 6 set to ON

All StratosS models have a connector labeled *EAS In* on the bottom of the unit. Metrologic has an optional EAS cable (MLPN 52-52511x) available for purchase for connection between the Checkpoint Device and the StratosS.

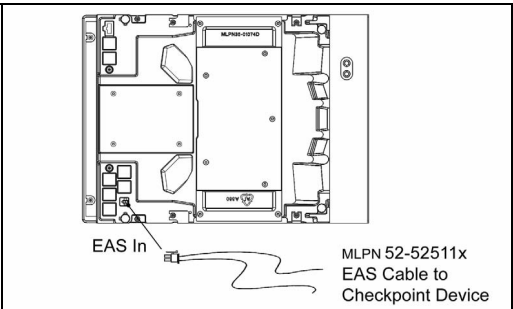


Figure 32. EAS Cable Connection (Bottom of StratosS)

The following figure shows the location of the EAS deactivation area for the StratosS. It is important to pass the entire tag through this area to deactivate the security tag.

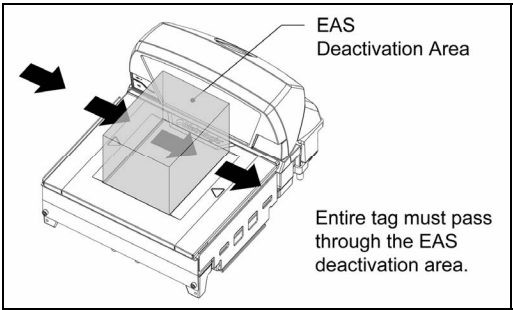


Figure 33. EAS Deactivation Area

SCANNER OPERATION

SCAN ZONE

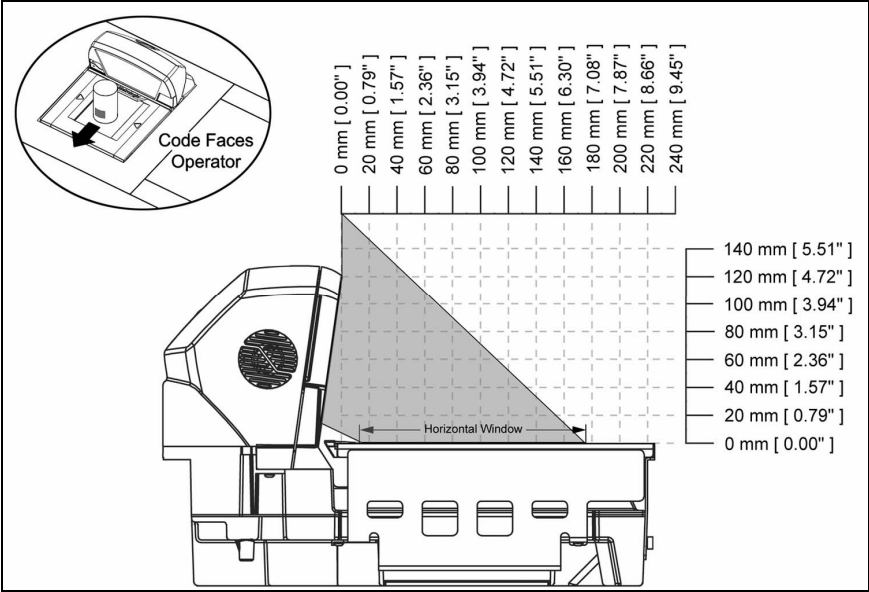


Figure 34. Checker-Side (13 mil)

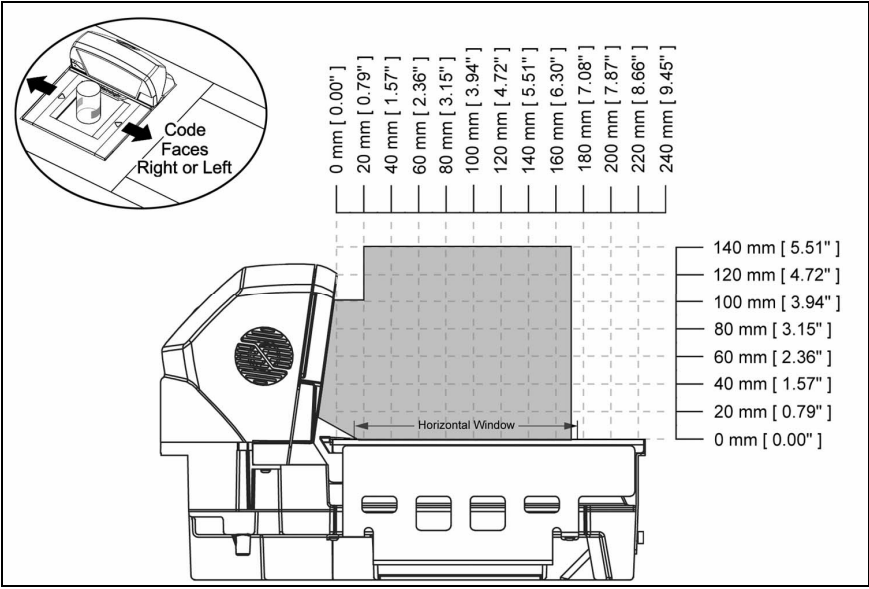


Figure 35. Horizontal Left/Right (13 mil)

SCANNER OPERATION

SCAN ZONE

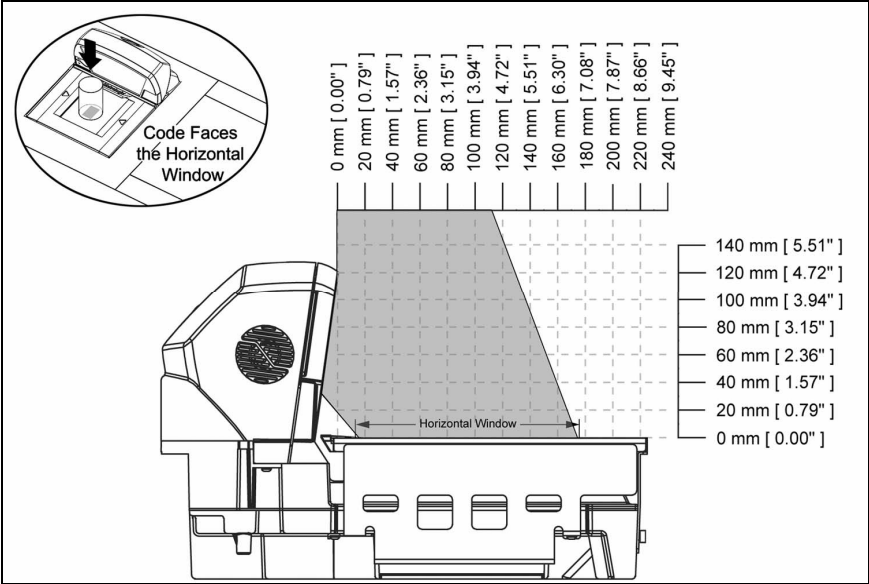


Figure 36. Horizontal Direct (13 mil)

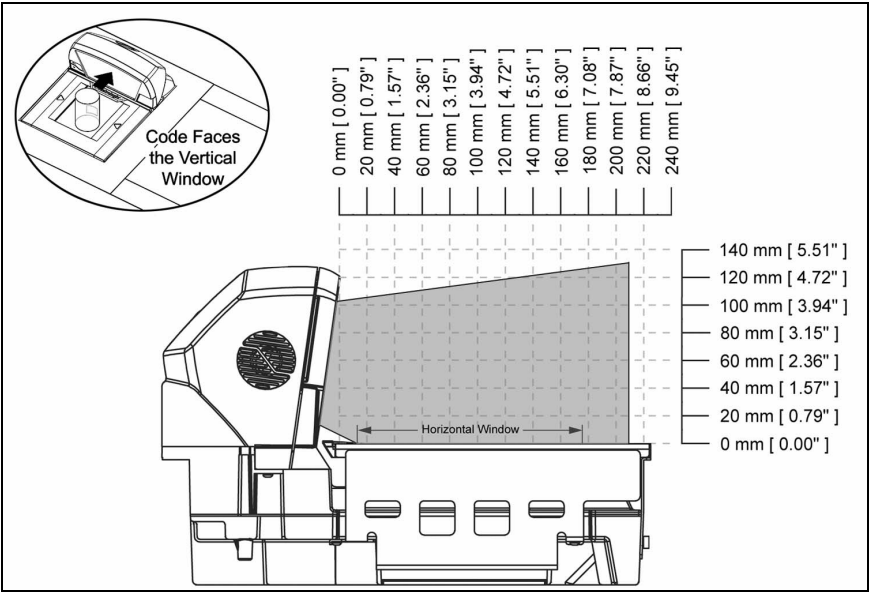


Figure 37. Vertical Direct (13 mil)

IR ACTIVATION AREA (IR LED OUTPUT)

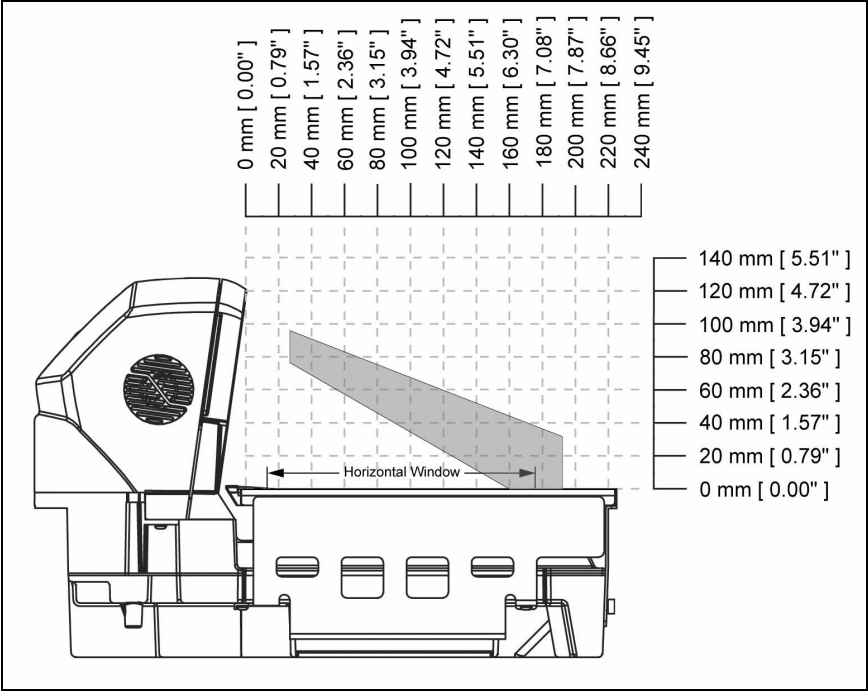


Figure 38. IR Activation Area Perpendicular to Package Flow (IR LED Output)

### INDICATOR DESCRIPTIONS

#### Audible

When in operation the StratosS provides audible feedback that indicates the status of the unit and the current scan. Eight settings are available for the tone of the beep (normal, 6 alternate tones and no tone) plus three volume settings. To change the tone or volume, refer to the *Changing the Beeper Tone & Volume* section of this manual.

#### One Beep

When the scanner *first* receives power the white LED will flash, the blue LED will turn on and the scanner will beep once (*the white LED will remain on for the duration of the beep*). The scanner is now ready to scan.

When the scanner *successfully* reads a bar code, the white LED will flash and the scanner beeps once (*if configured to do so*). If the scanner does not beep once and the white light does not flash, then the bar code has *not* been successfully read.

#### Razzberry Tone

This is a failure indicator. Refer to failure modes on page 50.

#### Three Beeps - during operation

When placing the scanner in configuration mode, the white LED will flash while the scanner simultaneously beeps three times. The white and blue LEDs will continue to flash until the unit exits configuration mode. Upon exiting configuration mode, the scanner will beep three times and the white LED will stop flashing.

When configured, three beeps can also indicate a communications timeout during normal scanning mode.

When using one-code-configuring, the scanner will beep three times (the current selected tone), followed by a short pause, a high tone and a low tone. This tells the user that the single configuration bar code has *successfully* configured the scanner.

#### Three Beeps - on power up

This is a failure indicator. Refer to failure modes on page 50.

## SCANNER OPERATION

---

### INDICATOR DESCRIPTIONS

#### Visual

White and blue LEDs are located near the bottom corner of the vertical output window on the StratosS. When the scanner is ON, the flashing or constant, illumination of the LEDs indicates the status of the StratosS and the current scan. There is an additional amber LED next to the scale zero symbol on all StratosS models that include a scale (*see figure below*).

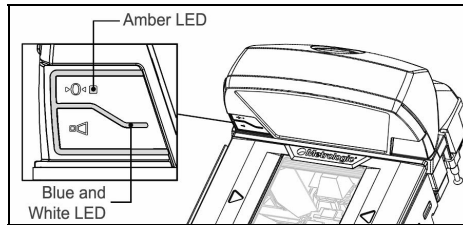


Figure 39. LEDs

#### No White or Blue LED

The LEDs will not be illuminated if the scanner is not receiving power from the host or transformer. They are also not illuminated when all lasers are turned off for any reason.

#### Steady Blue

When all lasers are active, the blue LED is illuminated. The blue LED will remain illuminated until all lasers are deactivated.

#### Steady Blue and Single White Flash

When the scanner successfully reads a bar code, the white LED will flash and the scanner will beep once. If the white LED does not flash or the scanner does not beep once, then the bar code has not been successfully read.

#### Steady White and Blue

After a successful scan, the scanner transmits the data to the host device. Some communication modes require that the host inform the scanner when data is ready to be received. If the host is not ready to accept the information, the scanner's white LED will remain on until the data can be transmitted.

## SCANNER OPERATION

---

### INDICATOR DESCRIPTIONS

#### Visual

##### **Flashing Blue then Flashing White**

This indicates the scanner is in program mode. A razzberry tone indicates that an invalid bar code has been scanned in this mode.

**or**

If the unit is in sleep mode, each LED will flash once every 15 seconds.

##### **Steady White, Blue Off**

This indicates the scanner may be waiting for communication from the host.

##### **Flashing Blue**

This indicates there is an error active on the diagnostic indicator display (see Error Codes on page 51). The scanner may continue to operate depending on the type of error.

##### **Steady Amber LED**

The amber LED is illuminated when the scale is at zero.

### INDICATOR DESCRIPTIONS

#### Failure Modes

##### **Flashing Blue and One Razzberry Tone**

This indicates that the scanner has experienced a laser subsystem failure. The scanner will try up to 3 times to correct the failure condition. If the laser subsystem continues to fail, that subsystem (horizontal or vertical) will be shut down and an error indication will be shown on the Diagnostic Indicator Display. This error stays on the display until corrected. If the remaining subsystem is still operational, scanning will continue using the operational components.

##### **Flashing Blue and White and Two Razzberry Tones**

This indicates that the scanner has experienced a motor subsystem failure. The scanner will try up to 3 times to correct the failure condition. If the motor subsystem continues to fail, that subsystem (horizontal or vertical) will be shut down and an error indication will be shown on the Diagnostic Indicator Display. This error stays on the display until corrected. If the remaining subsystem is still operational, scanning will continue using the still operational components.

##### **Continuous Razzberry Tone with Both LEDs Off**

If, upon power up, the scanner emits a continuous razzberry tone, then the scanner has an electronic failure. Return the unit for repair at an authorized service center.

##### **Three Beeps - On Power Up**

If the scanner beeps 3 times on power up then, the nonvolatile memory that holds the scanner configuration has failed. Return the unit for repair at an authorized service center.



## SCANNER OPERATION

### INDICATOR DESCRIPTIONS

#### Diagnostic Indicator Display

There is a two-digit error code display located under horizontal output window near the Metrologic logo on the platter (see figure below).

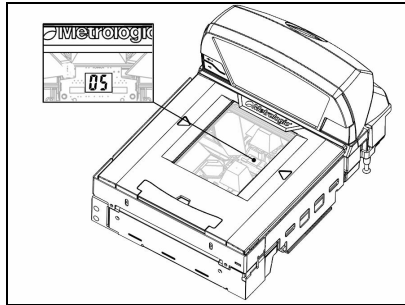


Figure 40. Error Code Display (Optional Product Roll Bar Shown)

The following is a list of possible error codes and their meanings. Some errors will require immediate scanner maintenance.

ERROR CODE	DESCRIPTION
01	Reserved
02	RAM ERROR – The scanner's Random Access Memory (RAM) is tested as faulty. Return the unit for repair at an authorized service center.
03	PROGRAM ERROR – The scanner's software program is failing. Return the unit for repair.
04	INTERFACE ERROR – After power up and any application exit (e.g. MetroSet, etc.), the scanner checks the interface hardware with that chosen in configuration. If they do not agree, an interface error exists. Correct this problem by getting the proper hardware interface OR programming StratosS configuration for the proper interface hardware attached.
05	CONFIGURATION ERROR – The non-volatile configuration memory did not agree with the data last saved. Default configuration data is then used and the scanner continues operating. This error is also accompanied by 3 beeps. This error will remain during operation as a reminder that this power cycle is scanning against a default-generated configuration.

## SCANNER OPERATION

---

### INDICATOR DESCRIPTIONS

#### Diagnostic Indicator Display

ERROR CODE	DESCRIPTION
06	COMMUNICATION ERROR – The RS232 data line is being held active. This causes the scanner to read a “break” signal constantly and continuous attempts are made to enter MetroSet configuration mode. A short on the RX Data line can cause this condition. It can also be the result of a laptop in power save mode. The scanner will abort attempts to enter configuration mode after a short timeout. The scanner can automatically recover from this condition once the short in the RX Data line is corrected.
09	COPROCESSOR COMMUNICATION ERROR – The main microprocessor is not communicating with the interface coprocessor. The interface coprocessor may be in a fault condition with the host or just not able to respond. This error may appear when the scanner is configured for USB or IBM interface applications or during an attempt to update the interface software through the flash utility. The unit should be repaired at an authorized service center.
11	SWITCH ERROR – The switch used for volume selection or sleep mode is detected in error (always closed). The condition is self-correcting if possible. If the error persists, return the unit for repair at an authorized service center. The scanning operation can continue with this error active.
12	Reserved
13	SCALE ERROR – Single Cable Scanner/Scales Only. The scanner does not communicate with the scale. Make sure there is nothing plugged into the ‘Scale RS232 to Host’ port. If there is disconnect the cable, it may be causing the communication error. If there is still no communication between the scanner and scale return the unit to authorized service center for repair.
14	SCALE RETURN TO ZERO ERROR – The scale did not return to zero between scale weight requests if the zero checking function is enabled. The scale will need to be re-zeroed.

## SCANNER OPERATION

---

### INDICATOR DESCRIPTIONS

#### Diagnostic Indicator Display

ERROR CODE	DESCRIPTION
21	LASER #1 (VERTICAL) ERROR – The laser in the vertical scanning subsystem denotes a failure. The scanner will try three times to correct the laser operation. If the laser error persists, the vertical scanning subsystem will be shut down and this error code will remain on the Diagnostic Indicators. If the horizontal scanning subsystem is still healthy, it will remain active and scanning can CONTINUE using the remaining good subsystem! The unit will still need to be repaired at an authorized service center when convenient.
22	LASER #2 (RIGHT HORIZONTAL) ERROR – The right laser in the horizontal scanning subsystem denotes a failure. The scanner will try three times to correct the laser operation. If the laser error persists, and the left horizontal laser (#3) is also in error, the horizontal scanning subsystem will be shut down and this error code will remain on the Diagnostic Indicators. If the left (Laser #3) horizontal scanning subsystem is still healthy, the horizontal scanning subsystem remains active and scanning can CONTINUE using the remaining good components! The unit, however, should be scheduled for repair at an authorized service center when convenient.
23	LASER #3 (LEFT HORIZONTAL) ERROR – The left laser in the horizontal scanning subsystem denotes a failure. The scanner will try three times to correct the laser operation. If the laser error persists, and the right horizontal laser (#2) is also in error, the horizontal scanning subsystem will be shut down and this error code will remain on the Diagnostic Indicators. If the right (Laser #2) horizontal scanning subsystem is still healthy, the horizontal scanning subsystem remains active and scanning can CONTINUE using the remaining good components! The unit, however, should be scheduled for repair at an authorized service center when convenient.
24	LASER #1 (VERTICAL) HIGH CURRENT WARNING – The laser in the vertical scanning subsystem is drawing excessive current. This could be a warning for a future total failure. Have the unit checked at an authorized service center when convenient.

## SCANNER OPERATION

---

### INDICATOR DESCRIPTIONS

#### Diagnostic Indicator Display

ERROR CODE	DESCRIPTION
25	LASER #2 (RIGHT HORIZONTAL) HIGH CURRENT WARNING – The laser in the vertical scanning subsystem is drawing excessive current. This could be a warning for a future total failure. Have the unit checked at an authorized service center when convenient.
26	LASER #3 (LEFT HORIZONTAL) HIGH CURRENT WARNING – The laser in the vertical scanning subsystem is drawing excessive current. This could be a warning for a future total failure. Have the unit checked at an authorized service center when convenient.
27	LASER #1 (VERTICAL) UNDERCURRENT WARNING – The laser in the vertical scanning subsystem is drawing too little current. The laser is probably not on. This could be the result of a loss of the required set point in memory. Have the unit checked at an authorized service center.
28	LASER #2 (RIGHT HORIZONTAL) UNDERCURRENT WARNING – The laser in the right horizontal scanning subsystem is drawing too little current. The laser is probably not on. This could be the result of a loss of the required set point in memory. Have the unit checked at an authorized service center.
29	LASER #3 (LEFT HORIZONTAL) UNDERCURRENT WARNING – The laser in the left vertical scanning subsystem is drawing too little current. The laser is probably not on. This could be the result of a loss of the required set point in memory. Have the unit checked at an authorized service center.
31	MOTOR #1 (VERTICAL) ERROR – The motor in the vertical scanning subsystem denotes a failure. The scanner will try three times to correct the motor operation. If the motor error persists, the vertical scanning subsystem will be shut down and this error code will remain on the Diagnostic Indicators. If the horizontal scanning subsystem is still healthy, it will remain active and scanning can CONTINUE using the remaining good subsystem! The unit, however, should be scheduled for repair at an authorized service center when convenient.

## SCANNER OPERATION

---

### INDICATOR DESCRIPTIONS

#### **Diagnostic Indicator Display**

ERROR CODE	DESCRIPTION
32	MOTOR #2 (HORIZONTAL) ERROR – The motor in the horizontal scanning subsystem denotes a failure. The scanner will try three times to correct the motor operation. If the motor error persists, the horizontal scanning subsystem will be shut down and this error code will remain on the Diagnostic Indicators. If the vertical scanning subsystem is still healthy, it will remain active and scanning can CONTINUE using the remaining good subsystem! The unit, however, should be scheduled for repair at an authorized service center when convenient.
34	MOTOR #1 (VERTICAL) ERROR – The motor in the vertical section cannot be speed controlled as desired. Have the unit checked at an authorized service center.
35	MOTOR #2 (HORIZONTAL) ERROR – The motor in the horizontal section cannot be speed controlled as desired. Have the unit checked at an authorized service center.

## SCANNER OPERATION

---

### POWER SAVE MODES

The MS2220 has five configurable power save modes. Refer to the *MetroSelect Configuration Guide* for additional information on Power Save Modes.

1. **Blink Power Save Mode:**

Blinks the laser OFF & ON after a configured period of non-use.

When the scanner recognizes a bar code it will exit the Blink mode.

2. **Laser Off Power Save Mode:**

Turns the laser OFF after a configured period of non-use. The motor continues to spin allowing for a faster “wake” up time.

Any movement detected by the IR will “wake” the scanner from the *Laser Off* power save mode (see *Figure 38* on page 46).

3. **Laser & Motor Off Power Save Mode:**

Turns the laser and motor OFF after a configured period of non-use.


Any movement detected by the IR will “wake” the scanner from the power save mode (see *Figure 38* on page 46). This mode’s “wake” time is slightly longer due to the motor’s need to restart.

4. **Dual Action Power Save Mode #1:**

“Blinks” the laser OFF & ON after a configured period of non-use turns the laser and motor OFF at thirty-minute intervals.

**Example:**

If the power save timeout is set to 15 minutes.

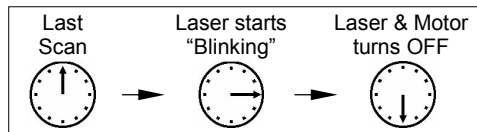

Any movement detected by the IR will “wake” the scanner from the power save mode (see *Figure 38* on page 46).


### POWER SAVE MODES

#### 5. **Dual Action Power Save Mode #2 (Default):**

Turns the laser OFF after a configured period of non-use then turns the motor OFF after thirty-minute intervals.

**Example:**

If the power save timeout is set to 15 minutes.

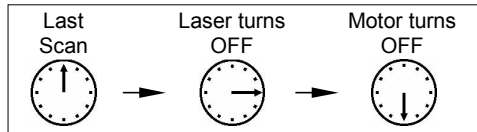

Any movement detected by the IR will “wake” the scanner from the power save mode (see *Figure 38* on page 46).

## SCANNER OPERATION

---

### BEEPER OPTIONS AND BUTTON FUNCTIONS

#### Changing the Beeper Tone

Beeper tones may be configured incrementally using the following bar code. The new tone will be heard followed by a short pause. Two more new tones will be heard signifying the new setting has been stored in memory. The silent (no beep) tone is also selectable.



#### Changing the Beeper Volume

Volume levels may be configured using the volume button or incrementally using the following bar code. The new volume will be heard followed by a short pause. Two more tones will be heard signifying the new setting has been saved in memory. The silent (no volume) tone is also selectable.





### BEEPER OPTIONS AND BUTTON FUNCTIONS

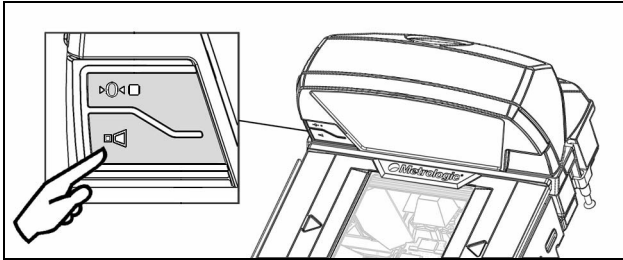


Figure 41. The Multi-Function Volume Button

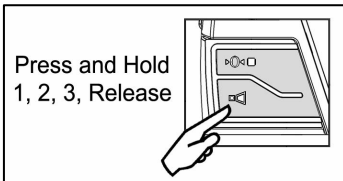


Figure 42. Changing the Beeper Volume

#### Changing the Beeper Volume

A short (<3 second) depression and the beeper volume will change. The new volume will be heard. The silent (no beep) volume is also selectable.

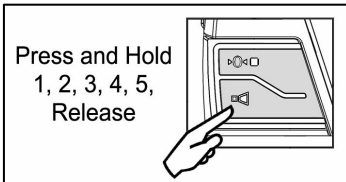


Figure 43. Laser & Motor Off Power Save Mode

#### Placing the Unit in Laser & Motor Off Power Save Mode

Long (>3 seconds) depression  
The *Laser & Motor Off Power Save Mode* is the only power save mode that can be activated with the multi-function button.

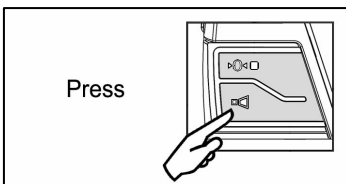


Figure 44. Normal Operation

#### Waking the Unit from All Power Save Modes

The next button depression will awaken the scanner for normal operation.

## SCANNER OPERATION

---

### STARTUP

When the scanner *first* receives power the white LED will flash, the blue LED will turn on and the scanner will beep once (*the white LED will remain on for the duration of the beep*). The scanner is now ready to scan.

### POWER-UP TEST MODE

When a StratosS scanner is first powered up, it cycles through a number of self-tests before starting normal operation. If there are any initial failures during this sequence of tests the scanner will beep or razz to indicate the error and an error code will appear in the diagnostic indicator display.

The following are examples of the types of tests performed at power-up.

1. Memory tests
2. Hardware setup tests
3. Motor tests
4. Laser tests
5. Configuration tests
6. Interface tests
7. Scale tests

These tests are also performed on a periodic basis with the operator alerted to any failures.

### CONFIGURATION MODE

All MS2220 series scanners have been configured at the factory with a set of default communication protocols. Since many host systems have unique formats and protocol requirements, Metrologic provides a wide range of configurable features that may be selected with the use of the MetroSelect® Configuration Guide (MLPN 00-02407.x), the MS2xx0 Stratos Series Configuration Addendum (MLPN 00-02034.x) and MetroSet.

For a complete list of the factory default settings, refer to the *Default Settings* section of this guide.

# SCALE OPERATION

## SCALE ZEROING

After the unit has been officially calibrated (see page 62) the scale can be re-zeroed by pressing the scale zeroing button on either the unit or on the remote display stand. When the scale is at zero the amber LED will be illuminated.

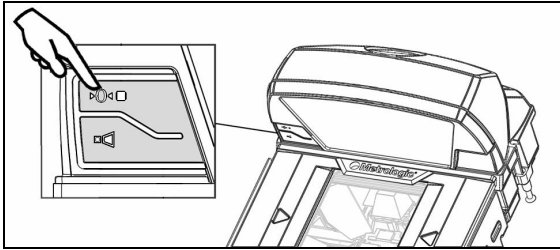


Figure 45. The scale zero button on scanner/scale.

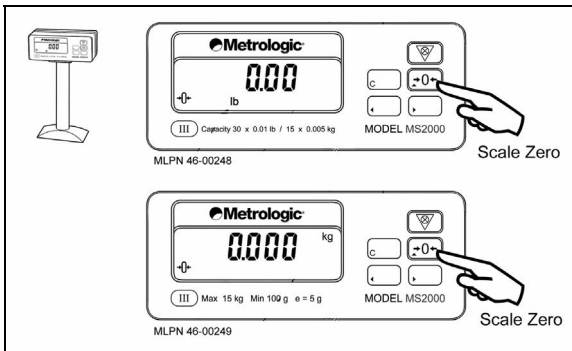


Figure 46. The scale zero button on the remote display.

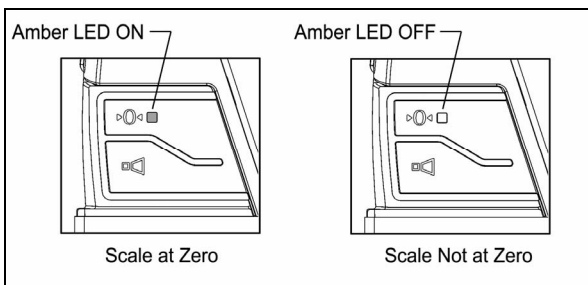


Figure 47. The scale zero indicator.

## SCALE OPERATION

---

### CALIBRATION

The scanner/scale must be calibrated if:

- it is a first time installation
- the scale cannot be re-zeroed
- the calibration verification tests indicate errors
- there is a change in the units of measure [i.e. from pounds (lbs.) to kilograms (kg)]
- if the scale load cell has been replaced
- the calibration seal is missing or torn



The certification of the weighing mechanism of the scale version of this scanner is subject to federal, state and local Weights and Measures statutes and regulations and can only be performed by authorized government agencies and/or their duly registered agents. Each time the scale or weighing mechanism is calibrated, it should be properly sealed with a paper seal or a wire seal prior to being placed into service in commerce.

It is the responsibility of the owner of the scale to confirm compliance with the relevant Weights and Measures statutes and regulations applicable in your area by checking with the appropriate government agency before placing a newly calibrated unit into service or removing any official seals.

### Tools Required

- Field Standard 30.0 pound Weight Set **or** 15.0 kilogram Weight Set
- Wire or Paper Seal



Type of seal to be used will depend on the guidelines specified by the local Weights and Measures authorities.

- Phillips #1 Screw Driver

### Scale Calibration Methods

- **Scale Calibration with Remote Display** uses the scale display to sequence through the calibration steps and store critical calibration points.
- **Bar Code Scale Calibration without Remote Display\*** uses the scanner / scale *only* and assumes there is no remote scale display. A bar code is used to initiate the calibration sequence and the speaker volume switch is used to store critical range values.

\* This calibration procedure will work with the remote display connected to the StratosS but no data will appear on the remote display.

## SCALE OPERATION

### CALIBRATION

#### Priming the Scale for Calibration (lbs. or kg)

Prime the scale before starting either method of calibration.



Calibrate the scanner/scale **after** the unit is installed in the checkstand countertop.



It is important to use the correct certified (lb. or kg.) field weight set when calibrating the scale.

1. Check the platter to ensure that nothing is interfering with its freedom to move. Assure that no debris is present from daily use of the scanner/scale if it has been in service.
2. Apply power to the scanner/scale.
3. Wait 5 minutes after power up before proceeding.

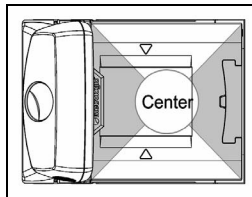


Figure 48. Scale Center

4. Place the 30.0 lb. weight **or** the 15 kg weight on the center of the scale. Allow the weight to settle.
5. Remove the weight.
6. Repeat three times to prime the scale before calibration.

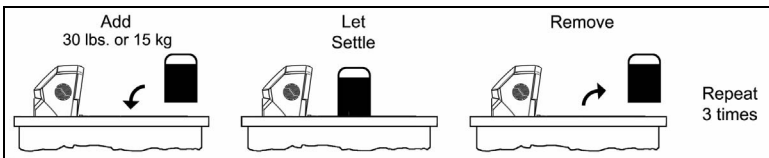


Figure 49. Priming the Scale for Calibration

## SCALE OPERATION

### CALIBRATION

#### Scale Calibration Procedure (lbs. or kg) with Remote Display

1. Temporarily Remove the platter and place it in a safe location.



It is the responsibility of the owner of the scale to confirm compliance with the relevant Weights and Measures statutes and regulations applicable in your area by checking with the appropriate government agency before placing a newly calibrated unit into service or removing any official seals.

2. If this is a currently installed scanner/scale in need of calibration, cut and remove the calibration switch cover seal. If this is a new installation, cut and remove the factory-applied adhesive seal.



Follow all Electro-Static Discharge (ESD) procedures when exposing internal scanner/scale components.

3. Remove the M3 screw securing the calibration switch/button cover. Place the cover and screw in a safe location. Verify that the scale calibration switch is in the Run position.

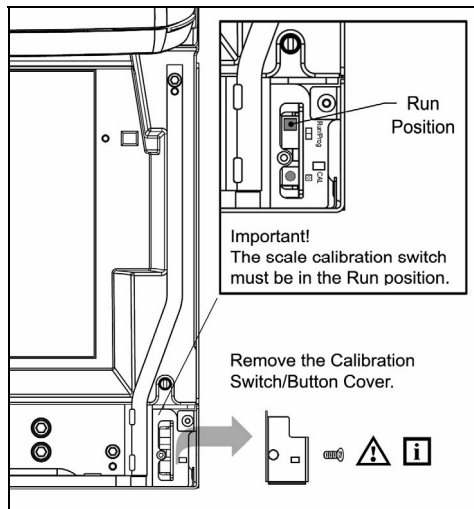


Figure 50. Calibration Switch/Button Cover Removal

## SCALE OPERATION

### CALIBRATION

#### Scale Calibration Procedure (lbs. or kg) with Remote Display

4. **Enter full service access mode.** Power down the unit if necessary. Press and hold down the Calibration push button then power up the scanner/scale. Release the Calibration push button.

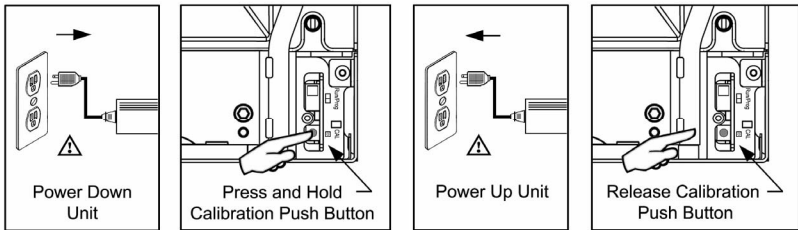


Figure 51. Entering Full Service Access Mode

5. **Enter calibration mode.** The remote display will flash all of the characters available (see illustration below). Press the right arrow button twice (►)(►) while the display flashes all characters. The remote display should read CAL 1.

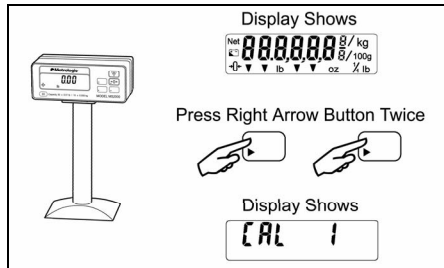


Figure 52. Enter Calibration Mode

6. Reinstall the platter onto the scanner/scale. Check the platter to ensure that it is seated properly and nothing is interfering with its freedom to move.

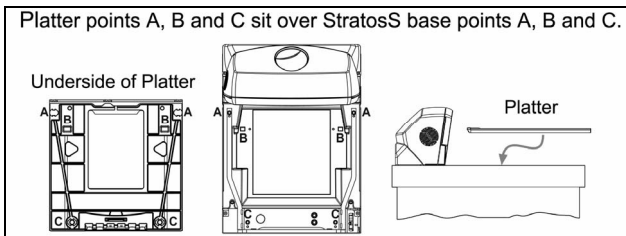


Figure 53. Install Platter

## SCALE OPERATION

### CALIBRATION

#### Scale Calibration Procedure (lbs. or kg) with Remote Display

7. Make sure there is no load on the scale platter.
8. **Calibrate a zero load.** Press the right arrow (►) button once when the remote display reads CAL 1 and there is **no** load on the scale platter.

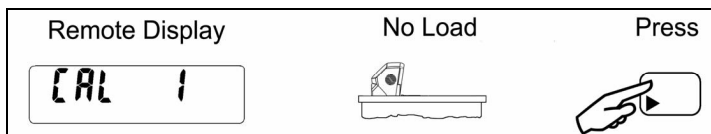


Figure 54.

9. Place a half load (15.00 lbs. or 7.500 kg) on the center of the scale platter then press the right arrow (►) button.



Figure 55.

10. Add an additional half load (15.00 lbs. or 7.500 kg) to the existing half to simulate a full load, center entire load then press the right arrow (►) button.

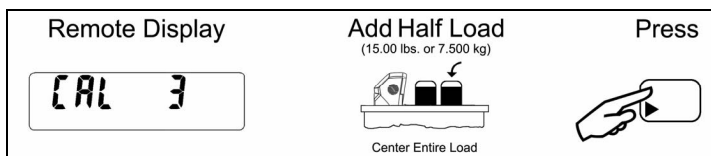


Figure 56.

11. Remove half of the load (15.00 lbs. or 7.500 kg), center the remaining load then press the right arrow (►) button.

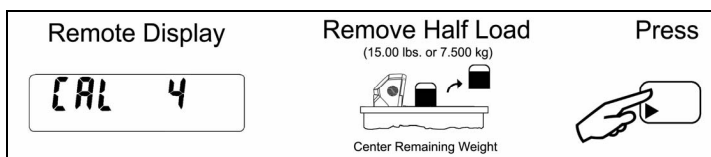


Figure 57.



## SCALE OPERATION

### CALIBRATION

#### Scale Calibration Procedure (lbs. or kg) with Remote Display

12. Remove the remaining half load from the scale then press clear (C). The message *done* will flash briefly on the display.

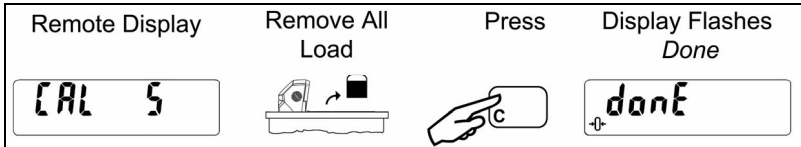


Figure 58.

13. **Exit calibration mode.** Press and hold the test button for at least 3 seconds then release. With no load on the scale the display should read 0.00 lb. or 0.000 kg.

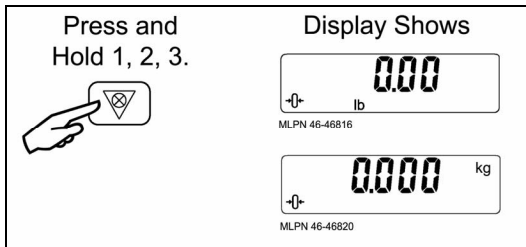


Figure 59.

14. The unit's calibration must now be verified as required by state and/or local Weights and Measures regulations (starting on page 72).

#### Need to Start Over?

If for any reason you need exit the calibration mode or restart the process press the test button then the clear button.

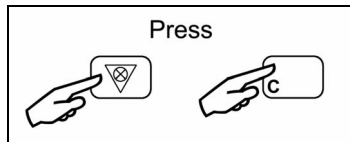


Figure 60.

## SCALE OPERATION

### CALIBRATION

#### Bar Code Calibration Procedure without Remote Display

The following calibration procedure can be used when the remote scale display is not present. This procedure requires that the scanner/scale have a software serial number of 15001, or greater. The beeper volume switch is used to advance to the next stage of calibration and the LED display notifies the operator which 'calibration stage' (1 through 5) is active.

1. Temporarily remove the platter and place it in a safe location.



It is the responsibility of the owner of the scale to confirm compliance with the relevant Weights and Measures statutes and regulations applicable in your area by checking with the appropriate government agency before placing a newly calibrated unit into service or removing any official seals.

2. If this is a currently installed scanner/scale in need of calibration, cut and remove the calibration switch cover seal. If this is a new installation, cut and remove the factory-applied adhesive seal.



Follow all Electro-Static Discharge (ESD) procedures when exposing internal scanner/scale components.

3. Remove the M3 screw securing the calibration switch/button cover. Place the cover and screw in a safe location.

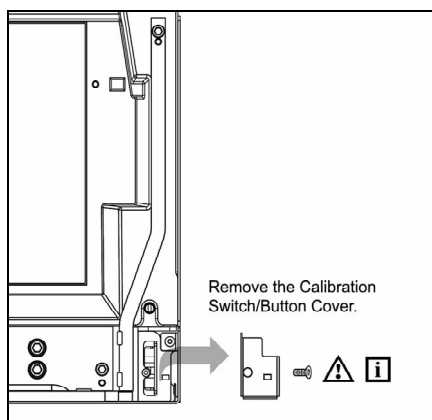


Figure 61. Calibration Switch Plate Cover Removal

## SCALE OPERATION

### CALIBRATION

#### Bar Code Calibration Procedure without Remote Display

4. **Enter the scale program mode.** Power down the unit and slide the scale program switch to the program position. *If the system is a dual cable system, disconnect the host to scale RS232 cable from the unit.*

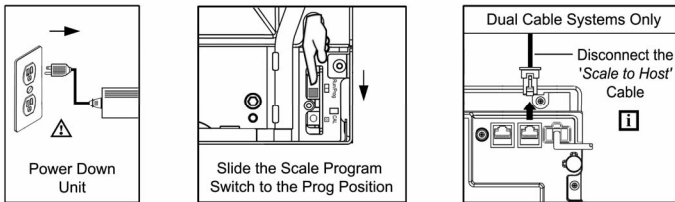


Figure 62. Entering the Scale Program Mode

5. **Reinstall the platter and power up the unit.**

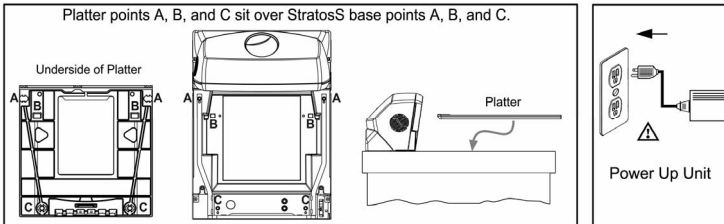


Figure 63. Platter Installation and Power Up

6. **Enter bar code calibration mode.** Use the vertical window to scan the following bar code. The scanner will beep once as it enters the bar code calibration mode and the calibration utility will start.

Barcode Calibration  
Mode

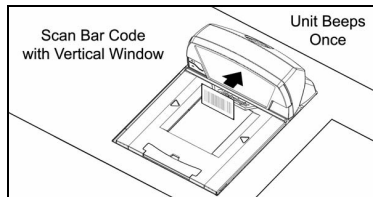


Figure 64. Entering Bar Code Calibration Mode



If a razz tone sounds, an error has occurred. Refer to *Diagnostic Indicator Display; Error Codes* starting on page 51 for additional information.

# SCALE OPERATION

## CALIBRATION

### Bar Code Calibration Procedure without Remote Display

7. Make sure there is **no load** on the scale platter. The white LEDs will be used to indicate the current step in the calibration process.
8. **Calibrate a zero load.** The white LEDs will blink once periodically. Wait 8 to 10 seconds for scale stability then press the beeper volume switch one time. The beeper will beep 1 time indicating that the Cal 1 value has been stored.

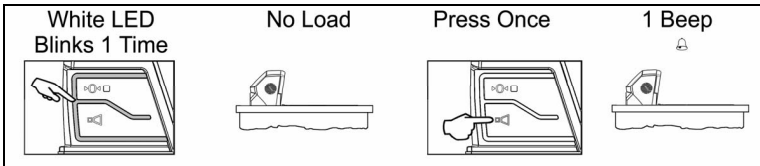


Figure 65.

9. Place a half load on the center of the scale platter. The white LEDs will blink twice periodically. Wait for scale stability, and then press the beeper volume switch once. The beeper will beep 2 times indicating that the Cal 2 value has been stored.

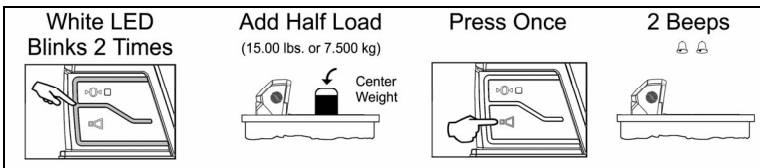


Figure 66.

10. Add an additional half load to the existing half to simulate a full load (center the entire load). The white LEDs will blink three times periodically. Wait for scale stability, and then press the beeper volume switch once. The beeper will beep 3 times indicating that the Cal 3 value has been stored.

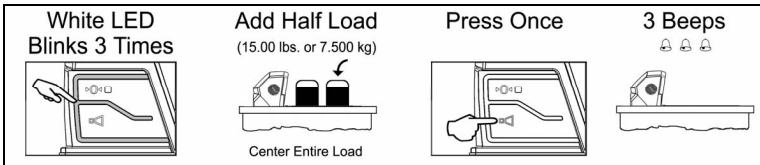


Figure 67.

# SCALE OPERATION

## CALIBRATION

### Bar Code Calibration Procedure without Remote Display

11. Remove half of the load and center the remaining load. The white LEDs will blink four times periodically. Wait for scale stability, and then press the beeper volume switch once. The beeper will beep 4 times indicating that the Cal 4 value has been stored.

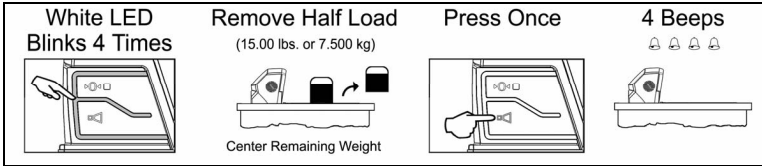


Figure 68.

12. Remove the remaining half load from the scale. The white LEDs will blink five times periodically. Wait for scale stability, and then press the beeper volume switch once. The beeper will beep 5 times indicating that the Cal 5 value has been stored.

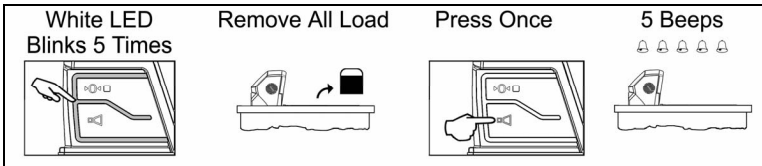


Figure 69.

13. Calibration is now complete. The scanner will automatically restart, and beep one time, in 5 seconds.
14. In order to use the scale in the normal operating mode, the unit must be powered down and the scale program switch returned to the run position.

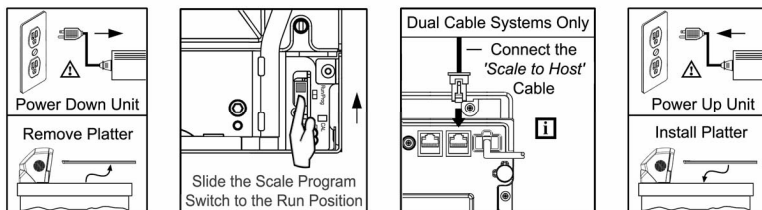


Figure 70.

15. The unit's calibration must now be verified as required by state and/or local Weights and Measures regulations (starting on page 72).

## SCALE OPERATION

---

### CALIBRATION VERIFICATION

#### **U.S. Pounds (lbs.)**

The following tests verify if the scale's Calibration is accurate. For Kilograms see instructions starting on page 74.



The following tests are based on a 2-digit accuracy setting for pounds.

- Increasing Load Test
- Shift Test
- Decreasing Load Test
- Return to Zero Test

#### *Increasing Load Test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.00 lbs.
2. Place a 5.00 lb. weight on the center of the scale platter and verify the display reads 5.00 lbs.
3. Place an additional 5.00 lb. weight on the center of the scale platter and verify the remote display reads between 9.99 and 10.01 lbs.
4. Place an additional 10.00 lb. weight on the center of the scale platter and verify the remote display reads between 19.99 and 20.01 lbs.
5. Place an additional 10.00 lb. weight on the center of the scale platter and verify the remote display reads between 29.99 and 30.01 lbs.
6. Remove all the weight from the scale platter and verify the display reads 0.00 lbs.

## SCALE OPERATION

---

### CALIBRATION VERIFICATION

#### U.S. Pounds (lbs.)

##### *Shift Test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.00 lbs.
2. Place a 15.00 lb. weight on the scale platter in the center of zone A (see diagram) and verify the remote display reads between 14.99 and 15.01 lbs.
3. Remove the 15.00 lb. weight and verify the display reads 0.00 lbs.
4. Repeat steps 2 and three for each of the remaining zones (B, C, and D).
5. Verify that the remote display reads 0.00 lbs. when all weight has been removed.

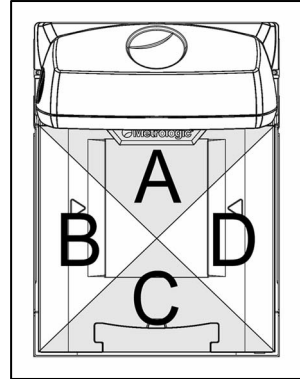


Figure 71. Shift Test Zones

##### *Decreasing Load Test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.00 lbs.
2. Place a 30.00 lb. load on the center of the scale platter (use two 10.00 lb. weights and two 5.00 lb. weights). Verify the remote display reads between 29.99 and 30.01 lbs.
3. Remove a 10.00 lb. weight from the platter and center remaining weight. Verify that the remote display reads between 19.99 and 20.01 lbs.
4. Remove another 15.00 lbs. from the platter, center the remaining weight and verify the scale reads 5.00 lbs.
5. Remove all the weight from the platter and verify the scale has returned to 0.00 lbs.

##### *Return to Zero Test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.00 lbs.

## SCALE OPERATION

---

### CALIBRATION VERIFICATION

#### Kilograms (kg)

The following tests verify if the scale's Calibration is accurate. For US Pounds see instructions starting on page 72.



The following tests are based on a 3-digit accuracy setting for kilograms.

- Increasing Load Test
- Shift Test
- Decreasing Load Test
- Return to Zero Test

#### *Increasing Load test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.000 kg.
2. Place a 2.500 kg weight on the center of the scale platter and verify the display reads 2.500 kg.
3. Place an additional 2.500 kg weight on the center of the scale platter and verify the remote display reads 4.995 kg and 5.005 kg.
4. Place an additional 5.000 kg weight on the center of the scale platter and verify the remote display reads between 9.995 kg. and 10.005 kg.
5. Place an additional 5.000 kg weight on the center of the scale platter and verify the remote display reads between 14.995 kg. and 15.005 kg.
6. Remove all the weight from the scale platter and verify the display reads 0.000 kg.



## SCALE OPERATION

---

### CALIBRATION VERIFICATION

#### Kilograms (kg)

##### *Shift Test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.000 kg.
2. Place a 7.500 kg weight on the scale platter in the center of zone A (see diagram) and verify the remote display reads between 7.495 kg. and 7.505 kg.
3. Remove the 7.500 kg weight and verify the display reads 0.000 lbs.
4. Repeat steps 2 and three for each of the remaining zones (B, C, and D).
5. Verify that the remote display reads 0.000 kg when all weight has been removed.

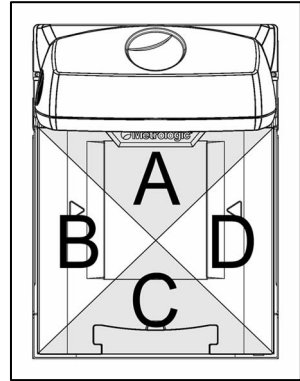


Figure 72. Shift Test Zones

##### *Decreasing Load Test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.000 kg.
2. Place a 15.000 kg load on the center of the scale platter. Verify the remote display reads between 14.995 kg. and 15.005 kg.
3. Remove 7.500 kg from the platter and center remaining weight. Verify that the remote display reads between 7.495 kg. and 7.505 kg.
4. Remove another 5.000 kg from the platter, center remaining weight and verify the scale reads 2.500 kg.
5. Remove all the weight from the platter and verify the scale has returned to 0.000 kg.

##### *Return to Zero Test*

1. Ensure there is no load on the scale platter and verify the remote display reads 0.000 kg.

## SCALE OPERATION

### SECURITY SEAL INSTALLATION



The certification of the weighing mechanism of the scale version of this scanner is subject to federal, state and local Weights and Measures statutes and regulations and can only be performed by authorized government agencies and/or their duly registered agents. Each time the scale or weighing mechanism is calibrated, it should be properly sealed with a paper seal or a wire seal prior to being placed into service in commerce.

It is the responsibility of the owner of the scale to confirm compliance with the relevant Weights and Measures statutes and regulations applicable in your area by checking with the appropriate government agency before placing a newly calibrated unit into service or removing any official seals.

Type of seal to be used will depend on the guidelines specified by the local Weights and Measures authorities.

The security seal must only be installed if there were no errors during the scale calibration verification tests.

#### Pressure Sensitive Security Seal

1. Temporarily remove the platter and place it in a safe location.
2. Reinstall the calibration switch/button cover.

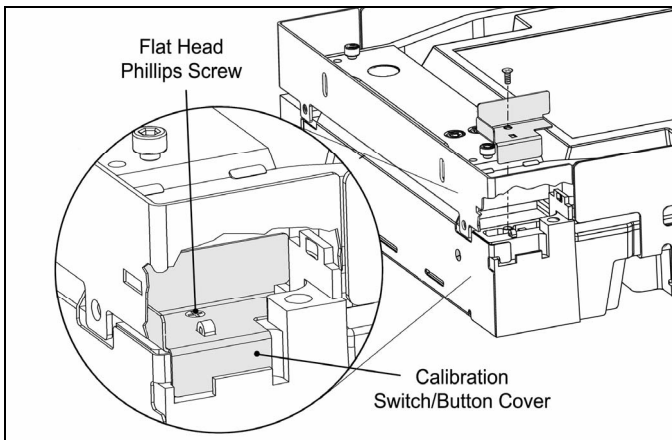


Figure 73. Calibration Switch/Button Cover

## SCALE OPERATION

### SECURITY SEAL INSTALLATION

#### Pressure Sensitive Security Seal

3. Apply the calibration security seal over the switch cover.

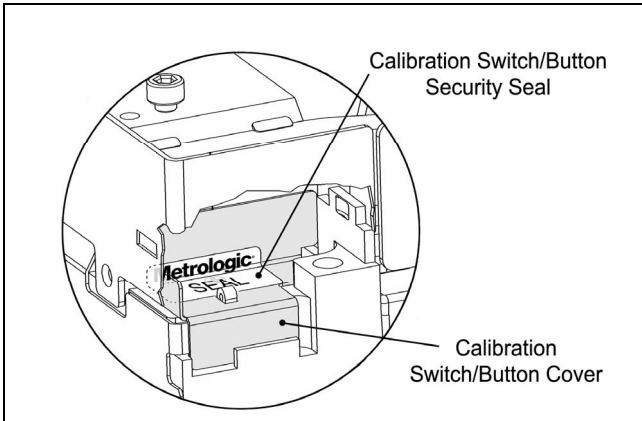


Figure 74. Calibration Switch/Button Security Seal Placement

4. Reinstall the platter.

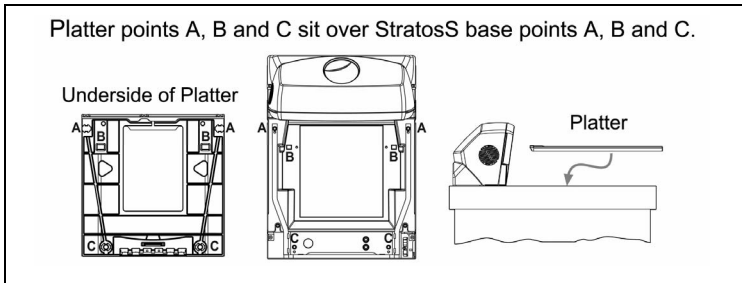


Figure 75. Platter Installation


## SCALE OPERATION

---

### SECURITY SEAL INSTALLATION

#### Wire Security Seal (Seal Conversion Kit 46-00239)

1. Temporarily remove the platter and place it in a safe location.
2. Install the calibration switch/button cover.
3. Secure the cover in place with the flat head Phillips screw provided.
4. Thread the wire through the hole in the tab that protrudes through the calibration switch/button cover
5. Continue to thread the wire through the wire lock at the other end forming a loop (see *Figure 76*).
6. Crimp the lock closed to secure the wire.
7. Insert the tab on the end of the transparent cage cover into the slot on the end of the StratosS unit then snap the other end into place over the tab on the StratosS unit.
8. Reinstall the platter.

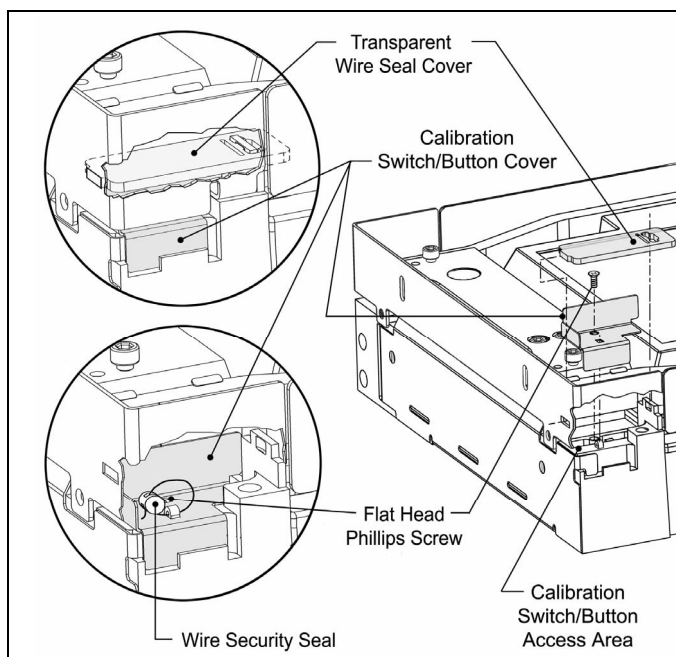


*Figure 76. Calibration Switch/Button Wire Security Seal Assembly.*

## HORIZONTAL SCAN WINDOW REPLACEMENT


### Platter/Horizontal Scan Window Removal

Flip up the handle near the end of the platter. Grip it firmly and lift the platter off unit base.

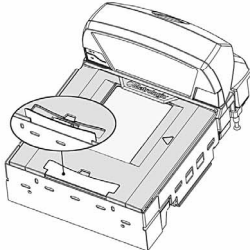

MS2220 and  
Scale Ready - MS2221 Models  
(MS2220 Shown)


Press on the platter near the center of the Metrologic logo, and then grip the other end to remove the platter from the unit base.

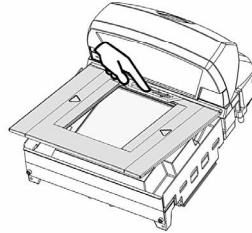


MS2221 and MS2222 Models  
(MS2222 Shown)

### Platter/Horizontal Scan Window Installation


When installing the platter, it is important to ensure the platter is positioned properly. Carefully align the platter points shown below with the matching points indicated on the unit base. No hardware is required for platter installation.

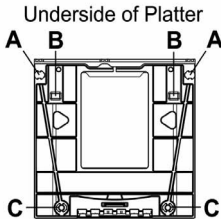


MS2220/MS2221  
Platter \*

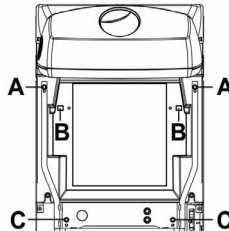


MS2220 Base Unit

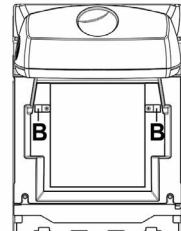

MS2221 Base Unit

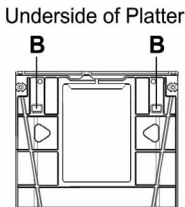

MS2222 Platter \*

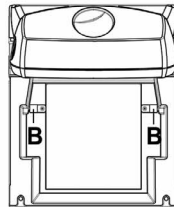

MS2222 Base Unit

Figure 77. Platter/Horizontal Scan Window Replacement

\* See replacement parts on page 6.

## MAINTENANCE

---

### VERTICAL SCAN WINDOW REPLACEMENT (MLPN 46-00232)

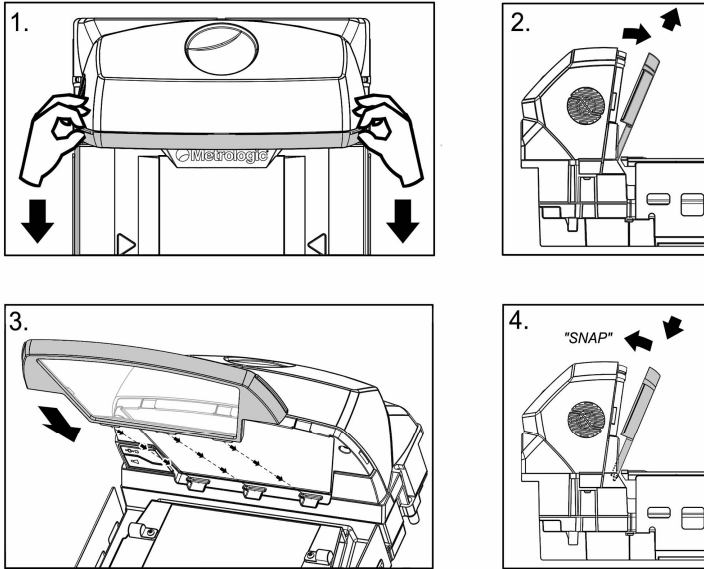


Figure 78. Vertical Scan Window Replacement

### DAILY MAINTENANCE

Smudges and dirt can interfere with the proper scanning of a bar code. Therefore, the horizontal and vertical output windows will need occasional cleaning.

For the glass window:

1. Spray glass cleaner onto lint free, non-abrasive cleaning cloth.
2. Gently wipe the scanner window.

For the inner plastic window:

1. Use mild soap and water with lint free, non-abrasive cleaning cloth.
2. Gently wipe the scanner window.

For scaled StratosS units, routinely check and clean the base unit to ensure that no debris is interfering with the platter movement.

## TROUBLESHOOTING

The following guide is for reference purposes only. Contact a Metrologic representative at 1-800-ID-METRO or 1-800-436-3876 to preserve the limited warranty terms.

Symptom	Possible Cause(s)	Solution
All Interfaces		
No LEDs, beep or motor spin.	No power is being supplied to the scanner.	Check the transformer, outlet and the power strip. Make sure the power cable is plugged into the scanner.
No LEDs, and no beep.	No power is being supplied to the scanner.	The host system cannot supply enough current to power the MS2220 series scanner. Use the power supply included with the scanner.
During power up the unit beeps 3 times.	A Non-volatile RAM failure.	Contact a Metrologic service representative, if the unit will not hold the configuration.
During power up the unit razzes continuously.	A RAM or ROM failure.	Contact a Metrologic service representative, if the unit will not function.
During power up the unit razzes once and the blue LED flashes.	A VLD failure.	Contact a Metrologic service representative.
During power up the unit razzes twice and both LEDs flash.	Scanner motor failure.	Contact a Metrologic service representative.
There are multiple scans upon presentation of code.	The <i>same symbol timeout</i> is set to short.	Adjust same symbol timeout for a longer time.
The unit powers up but does not beep.	The beeper is disabled.	Enable the beeper.
	No volume is selected.	Select a volume.
	No tone is selected.	Select a tone.

## TROUBLESHOOTING

Symptom	Possible Cause(s)	Solution
All Interfaces		
The unit powers up but does not scan and/or beep.	The unit is trying to scan a particular symbology that is not enabled.	UPC/EAN and Code 128 are enabled by default. Verify that the type of bar code being read has been selected.
	The unit has been configured for a character length lock or a minimum length and the bar code being scanned does not satisfy the configured criteria.	Verify that the bar code that is being scanned falls into the criteria.  <i>Typical of Non-UPC/EAN codes. The scanner defaults to a minimum of 4 character bar code.</i>
The unit scans a bar code, but locks up after the first scan ( <i>the white LED stays on</i> ).	The scanner is configured to support some form of host handshaking but is not receiving the signal.	If the scanner is setup to support ACK/NAK, RTS/CTS, XON/XOFF or D/E, verify that the host cable and host are supporting the handshaking properly.
The unit scans but the data transmitted to the host is incorrect.	The scanner's data format does not match the host system requirements.	Verify that the scanner's data format matches that required by the host. Make sure that the scanner is connected to the proper host port.
Scanner beeps at some bar codes and NOT form others of the same bar code symbology.	The print quality of the bar code is suspect.	The type of printer and/or the printer settings could be the problem.  Check the print mode or change the printer settings. For example change to econo mode or high speed.
	Check the character length lock.	
	The aspect ratio of the bar code is out of tolerance.	



## TROUBLESHOOTING

Symptom	Possible Cause(s)	Solution
All Interfaces		
The unit powers up but does not scan and/or beep.	The unit is trying to scan a particular symbology that is not enabled.	UPC/EAN and Code 128 are enabled by default. Verify that the type of bar code being read has been selected.
	The unit has been configured for a character length lock or a minimum length and the bar code being scanned does not satisfy the configured criteria.	Verify that the bar code that is being scanned falls into the criteria.  <i>Typical of Non-UPC/EAN codes. The scanner defaults to a minimum of 4 character bar code.</i>
The unit beeps at some bar codes but NOT for others of the same bar code symbology.	The bar code may have been printed incorrectly.	Check if it is a check digit, character or border problem.
	The scanner is not configured correctly for this type of bar code.	Check if check digits are set properly.
	The minimum symbol length setting does not work with the bar code.	Check if the correct minimum symbol length is set.
RS232 Only		
The unit powers up OK and scans OK but does not communicate properly to the host.	The com port at the host is not working or is not configured properly.	Check to make sure that the baud rate and parity of the scanner and the communication port match and the program is looking for RS232 data.
	The cable is not connected to the proper com port.	
	The com port is not operating properly.	

## TROUBLESHOOTING

Symptom	Possible Cause(s)	Solution
RS232 Only		
The host is receiving data but the data does not look correct.	The scanner and host may not be configured for the same interface.	Check that the scanner and the host are configured for the same interface.
Characters are being dropped.	The intercharacter delay needs to be added to the transmitted output.	Add some intercharacter delay to the transmitted output by using the MetroSelect Configuration Guide (MLPN 00-02407 x).
Aux Port Operation With Any Interface		
The secondary scanner is not functioning.		Refer to the user's guide provided with the secondary scanner.
The secondary scanner powers up but data is not relayed to the host.	The auxiliary cable may not be connected to the proper port on the StratosS.	Ensure that the secondary scanner is connected to the MS2220 com port marked "Aux" port.
	The auxiliary com port may not be operating properly.	* The MS2220 series must be configured to enable the auxiliary port.
		The auxiliary input port's data format must match the main output format of the secondary scanner.
* Use MetroSet. For the auxiliary interface, choose "HoloTrak Decode" All remaining parameters will be automatically chosen.		

### RS232 DEMONSTRATION PROGRAM

If an RS232 scanner is not communicating with your IBM compatible PC, key in the following BASIC program to test that the communication port and scanner are working. This program is for demonstration purposes only. It is only intended to prove that cabling is correct, the com port is working, and the scanner is working. If the bar code data displays on the screen while using this program, it only demonstrates that the hardware interface and scanner are working. At this point, investigate whether the application software and the scanner configuration match. If the application does not support RS232 scanners, a software wedge program that will take RS232 data and place it into a keyboard buffer may be needed. This program tells the PC to ignore RTS-CTS, Data Set Ready (DSR) and Data Carrier Detect (DCD) signals. If the demonstration program works and yours still does not, jumper RTS to CTS and Data Terminal Reading (DTR) to DCD and DSR on the back of your PC.

```
10  CLS
20  ON ERROR GOTO 100
30  OPEN "COM1:9600,S,7,1,CS0,DS0,CD0,LF" AS #1
35  PRINT "SCAN A FEW BAR CODES"
40  LINE INPUT #1, BARCODE$
50  PRINT BARCODE$
60  K$ = INKEY$: IF K$ = CHR$(27) THEN GOTO 32766
70  GOTO 40
100 PRINT "ERROR NO. "; ERR; " PRESS ANY KEY TO TERMINATE."
110 K$ = INKEY$: IF K$ = "" THEN GOTO 110
32766 CLOSE: SYSTEM
32767 END
```

## DEFAULT SETTINGS

---

### COMMUNICATION PARAMETERS

Many functions of the scanner can be "configured" - that is, enabled or disabled. The scanner is shipped from the factory pre-configured to a set of default conditions. The default parameter of the scanner has an asterisk ( \* ) in the charts on the following pages. If an asterisk is not in the default column then the default setting is Off or Disabled. Every interface does not support every parameter. If the interface supports a parameter listed in the charts on the following pages, a check mark will appear.

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
UPC/EAN	*	✓	✓	✓	✓
Code 128	*	✓	✓	✓	✓
Code 93		✓	✓	✓	✓
Codabar		✓	✓	✓	✓
Interleaved 2 of 5 (ITF)		✓	✓	✓	✓
MOD 10 Check on ITF		✓	✓	✓	✓
Code 11		✓	✓	✓	✓
Code 39		✓	✓	✓	✓
Full ASCII Code 39		✓	✓	✓	✓
MOD 43 CD on Code 39		✓	✓	✓	✓
Transmit Mode 43 CD		✓	✓	✓	✓
Paraff		✓	✓	✓	✓
Paraff Lead "A"		✓	✓	✓	✓
Allow Paraff Failures		✓	✓	✓	✓
French PC Terminal			✓		
MSI-Plessey		✓	✓	✓	✓
Airline (15 digit) 2 of 5		✓	✓	✓	✓
Airline (13 digit) 2 of 5		✓	✓	✓	✓
Matrix 2 of 5		✓	✓	✓	✓
Telepen		✓	✓	✓	✓
UK Plessey		✓	✓	✓	✓
STD 2 of 5		✓	✓	✓	✓

## DEFAULT SETTINGS

### COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
MSI-Plessey 10/10 Check Digit		✓	✓	✓	✓
MSI-Plessey MOD 10 Check Digit		✓	✓	✓	✓
ITF Symbol Lengths	Variable	✓	✓	✓	✓
ITF Minimum Symbol Length	6	✓	✓	✓	✓
Symbol Length Lock	None	✓	✓	✓	✓
Minimum Symbol Length	4	✓	✓	✓	✓
Trioptic		✓	✓	✓	✓
RSS14 Enable		✓	✓	✓	✓
RSS14 ID "je0"	*	✓	✓	✓	✓
RSS14 App ID "01"	*	✓	✓	✓	✓
RSS14 Check Digit	*	✓	✓	✓	✓
RSS Expanded Enable		✓	✓	✓	✓
Expanded ID "je0"	*	✓	✓	✓	✓
RSS Limited Enable		✓	✓	✓	✓
RSS Limited ID "je0"	*	✓	✓	✓	✓
RSS Limited App ID "01"	*	✓	✓	✓	✓
RSS Limited Check Digit	*	✓	✓	✓	✓
DTS/SIEMENS		✓			
DTS/NIXDORF	*	✓			
NCR F		✓			
NCR S		✓			
Beeper Tone	Normal	✓	✓	✓	✓
Beep Transmit Sequence	Before Transmit	✓	✓	✓	✓
Beeper Volume	Loudest	✓	✓	✓	✓
Power-Up Disable Good Scan Beep		✓	✓	✓	✓
Communication Timeout	None	✓	✓	✓	✓
Razzberry Tone on Timeout		✓	✓	✓	✓

## DEFAULT SETTINGS

### COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
Three Beeps on Timeout		✓	✓	✓	✓
No Beeps on Timeout	*	✓	✓	✓	✓
Fast Beep		✓	✓	✓	✓
Beep Twice on Supplements		✓	✓	✓	✓
No Beeps on Timeout	*	✓	✓	✓	✓
5 Retries Before Timeout		✓	✓	✓	✓
Timeout In ...	2 secs.	✓	✓	✓	✓
Laser Off Between Records		✓	✓	✓	✓
Variable Laser Off Delay	5 - 635 msec	✓	✓	✓	✓
Disable Button Control of Power Save Mode		✓	✓	✓	✓
Disable Button Control of Beep Volume		✓	✓	✓	✓
Bright LED Intensity	*	✓	✓	✓	✓
Dim LED Intensity		✓	✓	✓	✓
Flash LED on Good Scan	*	✓	✓	✓	✓
Reverse LED Convention		✓	✓	✓	✓
Flash LED on Good Scan	*	✓	✓	✓	✓
Enter Power Save Mode	61 mins.	✓	✓	✓	✓
Blink Power Save Mode		✓	✓	✓	✓
Laser OFF Power Save Mode		✓	✓	✓	✓
Laser & Motor OFF Power Save Mode		✓	✓	✓	✓
Dual Action Power Save Mode #1		✓	✓	✓	✓
Dual Action Power Save Mode #2	*	✓	✓	✓	✓
Same Symbol Rescan Timeout: 500 msec Configurable in 50 msec steps (MAX 6.35 seconds)	*	✓	✓	✓	✓
Intercharacter Delay Configurable in 1 msec steps (MAX 255 msec)	1 msec 10 msec in KBW	✓	✓	✓	

## DEFAULT SETTINGS

### COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
Number of Scan Buffers	1	✓	✓	✓	✓
UPC GTIN-14 Format		✓	✓	✓	✓
EAN-8 Enable	*	✓	✓	✓	✓
Transmit EAN-8 Check Digit	*	✓	✓	✓	✓
Convert EAN-8 to EAN-13		✓	✓	✓	✓
EAN-8 with Small Borders		✓	✓	✓	✓
EAN-13 Enable	*	✓	✓	✓	✓
Transmit EAN-13 Check Digit	*	✓	✓	✓	✓
UPC-A Enable	*	✓	✓	✓	✓
Convert UPC-A to EAN-13		✓	✓	✓	✓
Transmit UPC-A Check Digit	*	✓	✓	✓	✓
Transmit UPC-A Number System	*	✓	✓	✓	✓
Transmit UPC-A Manufacturers ID.	*	✓	✓	✓	✓
Transmit UPC-A Item ID	*	✓	✓	✓	✓
UPC-E Enable	*	✓	✓	✓	✓
Expand UPC-E		✓	✓	✓	✓
Transmit UPC-E Lead '0'	*	✓	✓	✓	✓
Transmit UPC-E Check Digit		✓	✓	✓	✓
Disable UPC-E Auto Redundancy	*	✓	✓	✓	✓
Transmit Codabar Start/Stop Characters		✓	✓	✓	✓
Codabar CLSI		✓	✓	✓	✓
Dual Field Codabar		✓	✓	✓	✓
Tab Between Dual field Codabar		✓	✓	✓	✓
Codabar CLSI Check Digit		✓	✓	✓	✓
Codabar 7-Check Check Digit		✓	✓	✓	✓
Codabar Mod-16 Check Digit		✓	✓	✓	✓

## DEFAULT SETTINGS

---

### COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
Transmit MSI Plessey Check Digits		✓	✓	✓	✓
Number of MSI Plessey Check Digits	0	✓	✓	✓	✓
UK Plessey A to X Convert		✓	✓	✓	✓
UK Plessey Special 12 Character Format		✓	✓	✓	✓
Transmit UK Plessey Check Digit		✓	✓	✓	✓
EAN 128 Enable		✓	✓	✓	✓
Enable French Pharma		✓	✓	✓	✓
Enable Matrix 2 of 5 Check Digit		✓	✓	✓	✓
Enable Hong Kong 2 of 5		✓	✓	✓	✓
Enable Alpha Telepen		✓	✓	✓	✓
Telepen Convert Lead 'A' to 'E'		✓	✓	✓	✓
Enable Code 11 Check Digit		✓	✓	✓	✓
Parity	Space		✓		
Baud Rate	9600		✓		
8 Data Bits			✓		
7 Data Bits	*		✓		
Stop Bits	2		✓		
RTS / CTS Enabled			✓		
Message RTS			✓		
Character RTS	*		✓		
ACK / NAK			✓		
O / N Handshaking			✓		
Host Bell / Cancel			✓		
Xon / Xoff			✓		
No Transmit Without DTR Present			✓		
French PC Terminal Emulation			✓		
"D/E" Disable Command			✓		



## DEFAULT SETTINGS

---

### COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
"Z/R" Disable Command			✓		
"F/L" Laser Command			✓		
"M/O" Motor Enable Commands			✓		
Beep on Bell			✓		
Razz on 'z'			✓		
CTS Scan Transmit Enable			✓		
Limit 1 Scan per CTS			✓		
Activate on DTR			✓	✓	✓
Activate on DC2 Character			✓		
Xmit No Read Message on DC2 Timeout			✓		
No Transmit LED During No Read Message			✓		
Configurable "No Read" Message			✓		
Recv "I" = Transmit "METROLOGIC"			✓		
Recv "i" = Transmit Scanner ID Byte			✓		
STX Prefix			✓		✓
TAB Prefix			✓		✓
Metrologic Prefix			✓		✓
UPC Prefix			✓		✓
ETX Suffix			✓		✓
TAB Suffix			✓		✓
Carriage Return Suffix	*		✓		✓
Line Feed Suffix	*		✓		✓
UPC Suffix			✓		✓
Transmit LRC			✓		✓
Start LRC on 1 <sup>st</sup> Byte			✓		✓
Start LRC on 2 <sup>nd</sup> Byte			✓		✓

## DEFAULT SETTINGS

### COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
'c' Prefix for UPC			✓		✓
'\$' Prefix for UPC			✓		✓
Configurable Prefix Characters	10 avail		✓		✓
Configurable Suffix Characters	10 avail		✓		✓
Predefined Code ID Sets	Multiple Selections		✓		✓
Configurable Prefix for Code Types			✓		✓
Configurable Suffix for Code Types			✓		✓
Configurable Code Length Locks	7 avail		✓	✓	✓
Code Selects	7 avail		✓	✓	✓
Transmit High Priority Code at Timeout			✓	✓	✓
Random Code Deselects	1 Set		✓	✓	✓
Do not transmit Similar Codes			✓	✓	✓
Target Code Deselects	1 Set		✓	✓	✓
Transmit Lower Priority Codes			✓	✓	✓
Code Select / Deselect Timeout 0.1 to 25.5 seconds	5 sec		✓	✓	✓
Razz on Code Select Timeout	*		✓	✓	✓
Replace 1 Character in Transmission			✓		✓
Japan Dual Field Code Selects			✓	✓	✓
EAN-13 Only in Japan Dual Field			✓	✓	✓
Two Digit Supplements		✓	✓	✓	✓
Five Digit Supplements		✓	✓	✓	✓
Require Supplements		✓	✓	✓	✓
Remote Supplement Support		✓	✓	✓	✓
Two Digit Redundancy		✓	✓	✓	✓
Five Digit Redundancy		✓	✓	✓	✓
Enable Coupon Code 128		✓	✓	✓	✓
Transmit Coupon 'JC1'	*	✓	✓	✓	✓

## DEFAULT SETTINGS

---

### COMMUNICATION PARAMETERS

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
Group Separator	*	✓	✓	✓	✓
Coupon Code Can Begin with '4'		✓	✓	✓	✓
Enable EAN-99 Coupon Code		✓	✓	✓	✓
Bookland Supplements		✓	✓	✓	✓
French 378/379 Supplements		✓	✓	✓	✓
German 434/439 Supplements		✓	✓	✓	✓
Convert Bookland to ISBN		✓	✓	✓	✓
Bookland 979 Supplements		✓	✓	✓	✓
Convert 979 to ISBN		✓	✓	✓	✓
Convert 290 to ISBN					
Reformat ISBN		✓	✓	✓	✓
Add EAN Article ID					
Transmit ISBN / EAN Check Digit		✓	✓	✓	✓
977 Supplements (2-digit)					
Convert 977 to ISSN		✓	✓	✓	✓
Reformat ISSN		✓	✓	✓	✓
Transmit ISSN Check Digit		✓	✓	✓	✓
414 / 419 requires Supplements		✓	✓	✓	✓
Number System 2 Enables Supplements		✓	✓	✓	✓
Number System 2 Requires 5-Digit Supplements		✓	✓	✓	✓
Number System 5 Enables Supplements		✓	✓	✓	✓
Allow Code ID's with Supplements		✓	✓	✓	✓
High Density Codes	*	✓	✓	✓	✓
Medium Density Codes		✓	✓	✓	✓
Low Density Codes		✓	✓	✓	✓

## DEFAULT SETTINGS

---

### COMMUNICATION PARAMETERS

#### Default settings for “Aux” interface

The secondary scanner and the MS2220 series always communicates via RS232. Data is relayed to the host via various primary interfaces

PARAMETER	DEFAULT	OCIA	RS232	IBM 46xx	USB
Aux Baud Rate	38400	✓	✓	✓	✓
Aux Parity	none	✓	✓	✓	✓
Aux Data Bits	8	✓	✓	✓	✓
Aux Stop Bits	1	✓	✓	✓	✓
Aux Character RTS	*	✓	✓	✓	✓
Aux Message RTS		✓	✓	✓	✓
Aux Ack/Nak	*	✓	✓	✓	✓
Aux Xon/Xoff	*	✓	✓	✓	✓
Aux D/E Commands		✓	✓	✓	✓
Aux M/O Commands		✓	✓	✓	✓
Aux F/L Commands		✓	✓	✓	✓
Aux Intercharacter Delay	1 msec	✓	✓	✓	✓
Aux Port Data Format	None (Disabled)	✓	✓	✓	✓
Aux Port to Stratos-School <sup>†</sup>	None (Disabled)	✓	✓	✓	✓

<sup>†</sup> When the *Aux Port* connects to a host port, the *Aux Port Data Format* should be disabled (requires cable MLPN 57-57008x-N-3).

# SCANNER AND CABLE TERMINATIONS

## SCANNER PINOUT CONNECTIONS

The MS2220 Series scanner interfaces terminate to 10-pin modular jacks located on the bottom of the units. The serial number label indicates the model number of the scanner.

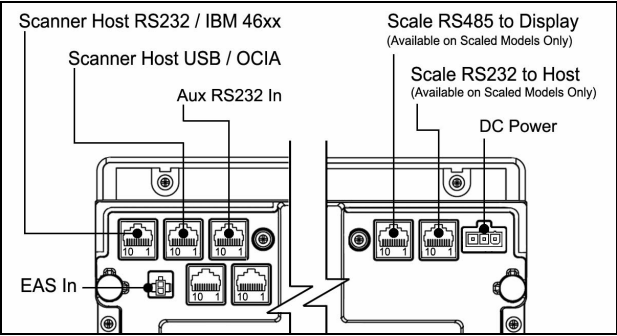


Figure 79. Connector Layout

EAS	
Pin	Function
1	EAS In
2	EAS Out

Auxiliary RS232 In	
Pin	Function
1	Ground
2	RS232 Receive Input
3	RS232 Transmit Output
4	RS232 RTS In
5	RS232 CTS Out
6-8	No Connect
9	+5V Out
10	No Connect

DC Power	
Pin	Function
1	12VDC
2	Ground
3	5.2VDC

Scale RS232 to Host (Scale Data, Dual Cable Applications)	
Pin	Function
1	Ground
2	Scale RS232 TX
3	Scale RS232 RX
4	Scale RS232 RTS
5	Scale RS232 CTS
6 - 9	No Connect
10	Shield

Scale RS485 to Display	
Pin	Function
1	V_UN
2	Ground
3	Y+/-
4	Z+
5	A+
6	B-
7 - 10	No Connect

## SCANNER AND CABLE TERMINATIONS

---

### SCANNER PINOUT CONNECTIONS

Scanner to Host, IBM 46xx	
Pin	Function
1	Signal Ground
2	RS232 Transmit
3	RS232 Receive
4	RS232 RTS
5	RS232 CTS
6	RS232 DTR
7	<i>No Connect</i>
8	DSR
9	IBM B-
10	IBM A+


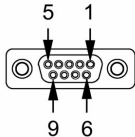
Scanner to Host, RS232	
Pin	Function
1	Ground
2	RS232 Transmit
3	RS232 Receive
4	RS232 RTS
5	RS232 CTS
6	RS232 DTR
7	<i>No Connect</i>
8	DSR
9	<i>Reserved for IBM 46xx Interface</i>
10	<i>Reserved for IBM 46xx Interface</i>


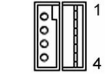
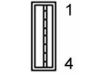
Scanner to Host, OCIA	
Pin	Function
1	Signal Ground
2	OCIA R Data
3	OCIA Clock In
4	Shield Ground
5	OCIA Clock Out
6	OCIA Clock In Return / Clock Out Return
7	<i>Reserved for USB Interface</i>
8	OCIA R Data Return
9	<i>Reserved for USB Interface</i>
10	<i>Reserved for USB Interface</i>


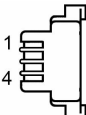
Scanner to Host, USB	
Pin	Function
1	Signal Ground
2	RS232 Transmit Output
3	RS232 Receive Input
4	Shield
5	<i>Reserved for OCIA Interface</i>
6	<i>Reserved for OCIA Interface</i>
7	PC +5VDC
8	<i>Reserved for OCIA Interface</i>
9	Data -
10	Data +

# SCANNER AND CABLE TERMINATIONS

## CABLE CONNECTOR CONFIGURATIONS (HOST END)


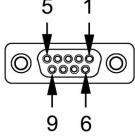
RS232 Interface Cable, MLPN 57-57210x-N-3		
Pin	Function	 <p>9-Pin D-Type Connector</p>
1	No Connect	
2	RS232 Transmit Output	
3	RS232 Receive Input	
4	DTR Input	
5	Power/Signal Ground	
6	DSR Output	
7	CTS Input	
8	RTS Output	
9	No Connect	


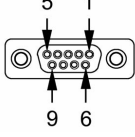
Full Speed USB Cable, MLPN 57-57201x-N-3 or MLPN 57-57227x-N-3			
Pin	Function	 Locking, Type A 57-57227x-N-3	 Non-Locking, Type A 57-57201x-N-3
1	PC +5V USB		
2	D-		
3	D+		
4	Ground		



IBM 46xx Cable, MLPN 57-57212x-N-3		
Pin	Function	 4-Pin SDL
1	Signal Ground	
2	IBM +A	
3	IBM -B	
4	No Connect	

# SCANNER AND CABLE TERMINATIONS

## CABLE CONNECTOR CONFIGURATIONS (HOST END)

OCIA Cable, MLPN 57-57016x-N-3		
Pin	Function	 <p>9-Pin D-Type Connector</p>
1	Shield Ground	
2	OCIA R Data	
3	OCIA R Data Return	
4	OCIA Clock Out	
5	Signal Ground	
6	OCIA Clock In Return /	
7	Clock Out Return	
8	Clock In	
9	No Connect	

Program Cable, MLPN 57-57008x-N-3		
Pin	Function	 <p>9-Pin D-Type Connector</p>
1	No Connect	
2	Transmit Data	
3	Receive Data	
4	No Connect	
5	Ground	
6-9	No Connect	

RS232 LSO/AUX Cable, MLPN 57-57099x-3		
Pin	Function	 <p>10-Position Modular Plug</p>
1	Signal Ground	
2	RS232 Transmit Output	
3	RS232 Receive Input	
4	RTS Output	
5	CTS Input	
6-8	No Connect	
9	+ 5VDC – Transformer / Direct	
10	Shield Ground	



### NOTICES

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense. Any unauthorized changes or modifications to this equipment could void the users authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Notice

This Class A digital apparatus complies with Canadian ICES-003.

#### Remarque

Cet appareil numérique de la classe A, conformément à la norme NMB-003 du Canada.

#### European Standard

##### Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

#### Funkstöreigenschaften nach EN 55022:1998

##### Warnung!

Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchführen.

#### Standard Europeo

##### Attenzione

Questo e' un prodotto di classe A. Se usato in vicinanza di residenze private potrebbe causare interferenze radio che potrebbero richiedere all'utilizzatore opportune misure.

##### Attention

Ce produit est de classe "A". Dans un environnement domestique, ce produit peut être la cause d'interférences radio. Dans ce cas l'utilisateur peut être amené à prendre les mesures adéquates.

## CAUTIONS

### Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure. Under no circumstances should the customer attempt to service the laser scanner. Never attempt to look at the laser beam, even if the scanner appears to be nonfunctional. Never open the scanner in an attempt to look into the device. Doing so could result in hazardous laser light exposure. The use of optical instruments with the laser equipment will increase eye hazard.

### Atención

La modificación de los procedimientos, o la utilización de controles o ajustes distintos de los especificados aquí, pueden provocar una luz de láser peligrosa. Bajo ninguna circunstancia el usuario deberá realizar el mantenimiento del láser del escáner. Ni intentar mirar al haz del láser incluso cuando este no esté operativo. Tampoco deberá abrir el escáner para examinar el aparato. El hacerlo puede conllevar una exposición peligrosa a la luz de láser. El uso de instrumentos ópticos con el equipo láser puede incrementar el riesgo para la vista.

### Attention

L'emploi de commandes, réglages ou procédés autres que ceux décrits ici peut entraîner de graves irradiations. Le client ne doit en aucun cas essayer d'entretenir lui-même le scanner ou le laser. Ne regardez jamais directement le rayon laser, même si vous croyez que le scanner est inactif. N'ouvrez jamais le scanner pour regarder dans l'appareil. Ce faisant, vous vous exposez à une rayonnement laser qui est dangereux. L'emploi d'appareils optiques avec cet équipement laser augmente le risque d'endommagement de la vision.


### Achtung

Die Verwendung anderer als der hier beschriebenen Steuerungen, Einstellungen oder Verfahren kann eine gefährliche Laserstrahlung hervorrufen. Der Kunde sollte unter keinen Umständen versuchen, den Laser-Scanner selbst zu warten. Sehen Sie niemals in den Laserstrahl, selbst wenn Sie glauben, daß der Scanner nicht aktiv ist. Öffnen Sie niemals den Scanner, um in das Gerät hineinzusehen. Wenn Sie dies tun, können Sie sich einer gefährlichen Laserstrahlung aussetzen. Der Einsatz optischer Geräte mit dieser Laserausrüstung erhöht das Risiko einer Sehschädigung.

### Attenzione

L'utilizzo di sistemi di controllo, di regolazioni o di procedimenti diversi da quelli descritti nel presente Manuale può provocare delle esposizioni a raggi laser rischiose. Il cliente non deve assolutamente tentare di riparare egli stesso lo scanner laser. Non guardate mai il raggio laser, anche se credete che lo scanner non sia attivo. Non aprite mai lo scanner per guardare dentro l'apparecchio. Facendolo potete esporvi ad una esposizione laser rischiosa. L'uso di apparecchi ottici, equipaggiati con raggi laser, aumenta il rischio di danni alla vista.

IEC 60825-1:1993+A1:1997+A2:2001

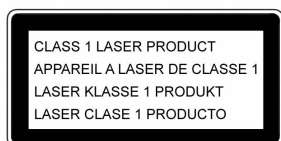

## LIMITED WARRANTY

---

The MS2200 StratosS™ Series scanners are manufactured by Metrologic at its Blackwood, New Jersey, U.S.A. facility. The MS2200 StratosS Series scanners have a two (2) year limited warranty from the date of manufacture. Metrologic warrants and represents that all MS2200 StratosS Series scanners are free of all defects in material, workmanship and design, and have been produced and labeled in compliance with all applicable U.S. Federal, state and local laws, regulations and ordinances pertaining to their production and labeling.

This warranty is limited to repair, replacement of product or refund of product price at the sole discretion of Metrologic. Faulty equipment must be returned to one of the following Metrologic repair facilities: Blackwood, New Jersey, USA; Madrid, Spain; or Suzhou, China. To do this, contact the appropriate Metrologic Customer Service/Repair Department to obtain a Returned Material Authorization (RMA) number.

In the event that it is determined the equipment failure is covered under this warranty, Metrologic shall, at its sole option, repair the Product or replace the Product with a functionally equivalent unit and return such repaired or replaced Product without charge for service or return freight, whether distributor, dealer/reseller, or retail consumer, or refund an amount equal to the original purchase price.

This limited warranty does not extend to any Product which, in the sole judgment of Metrologic, has been subjected to abuse, misuse, neglect, improper installation, or accident, nor any damage due to use or misuse produced from integration of the Product into any mechanical, electrical or computer system. The warranty is void if the case of Product is opened by anyone other than Metrologic's repair department or authorized repair centers.

THIS LIMITED WARRANTY, EXCEPT AS TO TITLE, IS IN LIEU OF ALL OTHER WARRANTIES OR GUARANTEES, EITHER EXPRESS OR IMPLIED, AND SPECIFICALLY EXCLUDES, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE UNDER THE UNIFORM COMMERCIAL CODE, OR ARISING OUT OF CUSTOM OR CONDUCT. THE RIGHTS AND REMEDIES PROVIDED HEREIN ARE EXCLUSIVE AND IN LIEU OF ANY OTHER RIGHTS OR REMEDIES. IN NO EVENT SHALL METROLOGIC BE LIABLE FOR ANY INDIRECT OR CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES TO PERSON OR PROPERTY, OR EFFECT ON BUSINESS OR PROPERTY, OR OTHER DAMAGES OR EXPENSES DUE DIRECTLY OR INDIRECTLY TO THE PRODUCT, EXCEPT AS STATED IN THIS WARRANTY. IN NO EVENT SHALL ANY LIABILITY OF METROLOGIC EXCEED THE ACTUAL AMOUNT PAID TO METROLOGIC FOR THE PRODUCT. METROLOGIC RESERVES THE RIGHT TO MAKE ANY CHANGES TO THE PRODUCT DESCRIBED HEREIN.

### **CORPORATE HEADQUARTERS, NORTH AMERICA**

#### **Metrologic Instruments, Inc.**

90 Coles Rd.

Blackwood, NJ 08012-4683

Customer Service Department

Tel: 1-800-ID-METRO

Fax: 856-228-6673

Email: [info@metrologic.com](mailto:info@metrologic.com)

### **METROLOGIC EUROPEAN REPAIR CENTER (MERC)**

#### **Metrologic Eria Ibérica, SL**

C/Alfonso Gomez, 38-40, 1D

28037 Madrid

Tel: +34 913 751 249

Fax: +34 913 270 437

### **MTLG AUTO ID INSTRUMENTS (SHANGHAI) CO., LTD**

#### **Suzhou Sales Office**

BLK A, Room# 03/03-04

No.5 Xinghan Street, Xinsu Industrial Square

China-Singapore Suahou Industrial Park, Suzhou, PRC

Tel: 86-512-67622550

Fax: 86-512-67622560

Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

## PATENTS

---

### Patent Information

This METROLOGIC product may be covered by one or more of the following U.S. Patents:

U.S. Patent No.;

5,343,027; 5,627,359; 5,686,717; 5,789,731; 5,828,049; 6,029,894;  
6,209,789; 6,299,065; 6,345,505; 6,422,467; 6,481,625; 6,494,377;  
6,814,292; 6,830,190; 6,874,690; 6,918,540; 6,951,304;

No license right or sublicense is granted, either expressly or by implication, estoppel, or otherwise, under any METROLOGIC or third party intellectual property rights (whether or not such third party rights are licensed to METROLOGIC), including any third party patent listed above, except for an implied license only for the normal intended use of the specific equipment, circuits, and devices represented by or contained in the METROLOGIC products that are physically transferred to the user, and only to the extent of METROLOGIC'S license rights and subject to any conditions, covenants and restrictions therein.

Other worldwide patents pending.

## INDEX

---

### A

AC ..... *see power*  
amber LED ..... *see indicators*  
application ..... 51, 85  
audible ..... *see indicators*  
AUX ..... 11, 15, 84, 95

### B

beep ..... *see indicators*  
blue LED ..... *see indicators*  
button  
    calibration ..... 63, 65  
    display ..... 61, 66, 67  
    multi-function .. 11, 15, 18, 58, 59  
    scale zero ..... 11, 61  
    test ..... 67  
    tone ..... 11, 15, 18, 58, 59  
    volume ..... 11, 15, 18, 58, 59

### C

cable ..... 22, 23, 81, 82, 84  
    communication ..... 4, 24, 29–40  
    EAS ..... 4, 43  
    pinouts ..... 95–98  
    power ..... 4  
calibration ..... 22, 23, 66  
    mode ..... 65  
    test ..... 62–78  
caution .. 6, 7, 13, 17, 21, 25, 29–40, 100  
CE ..... 100  
checkstand ..... 22, 23  
class ..... 99  
communication parameters  
    default ..... 86–94  
compliance .... 9, 29–40, 64, 68, 101  
components ..... 11, 15, 18, 19  
connector ..... 95–98  
connector panel ..... 12, 16, 20  
current ..... 9, 47, 48, 81  
customer service ..... 3  
cutout ..... 26–28

### D

DC ..... *see power*  
default settings ..... 60, 86–94  
depth of field ..... 8, 44–45  
diagnostic indicator ..... 15, 19

dimensions ..... 5, 12, 16, 20, 22  
display ..... 5, 15, 19, 24, 51–55, 65, 67

### E

EAS ..... 11, 15, 19, 43, 95  
electrical ..... 101  
error codes ..... 51, 52, 53, 54

### F

failure  
    error codes ..... 51–55  
    indicator ..... 47  
    modes ..... 47, 50  
finger recess ..... 7, 15, 19  
flow ..... 15, 18  
frame ..... 18  
full service access mode ..... 65  
function ..... 81, 91, 92, 93, 95–98

### G

ground ..... 95–98

### H

host ..... 48, 49, 60, 81–85, 86–94

### I

IBM 46xx ..... 86–94  
indicators ..... 8  
    audible ..... 47, 48, 58, 60, 81–85, 87, 88, 91  
    diagnostic ..... 51–55  
    error codes ..... 51–55  
    failure ..... 50, 51–55  
    visual ..... 11, 15, 18, 47–49, 60, 81, 82, 88  
interface ..... 8, 13, 17, 21  
    IBM 46xx ..... 35–37, 85, 86–94, 96, 97  
    OCIA ..... 38–40, 86–94, 96, 98  
    RS232 ..... 29–31, 86–94, 96, 97  
    USB ..... 32–34, 86–94, 96, 97  
IR ..... 46

### L

labels ..... 13, 17, 21  
laser aperture ..... 11, 15, 18

## INDEX

---

LED ..... *see indicators*  
light source ..... 8

### **M**

maintenance ..... 51, 80  
manual ..... 1, 3, 24, 47  
mechanical ..... 101  
modes ..... 56, 57  
mounting ..... 22, 26–28  
multi-function ..... *see button*

### **N**

notices ..... 99

### **O**

OCIA ..... 39, 40, 86–94, 96  
operation ..... 99  
output window ..... 51, 80

### **P**

parameters ..... 86–94  
patents ..... 102  
platter ..... 6, 7, 11, 15, 18, 19, 22,  
24, 63, 64, 65, 66, 68, 75, 76  
port ..... 82, 83, 84, 94  
power ..... 4, 8, 9, 22, 23, 29–40,  
81, 95  
power save ..... 56, 57, 59  
property ..... 102  
protocols ..... 60

### **R**

razzberry tone ..... 47, 49, 50, 88  
remote display ..... 5, 65, 75  
repair ..... 50, 51, 52, 55, 101  
RS232 ..... 86–94

### **S**

safety ..... 99  
scale ..... 11, 22  
scale capacity ..... 9  
scan pattern ..... 8

scan speed ..... 8  
scan zone ..... 44–45  
scanner  
    pinouts ..... 95–98  
seal ..... 4, 64, 68, 76  
secondary scanner ..... 41, 42  
SELV ..... 29–40  
shipping hardware ..... 25  
specifications ..... 8–9  
storage ..... 9  
switch ..... 11, 43  
    cover ..... 64, 68, 76

### **T**

test ..... 5, 60, 62–78  
    button ..... 67  
tone ..... 15, 18, 47, 58, *see button*  
transformer ..... *see power*  
troubleshooting ..... 81–85

### **U**

unit of measure ..... 72, 74  
USB ..... 86–94

### **V**

ventilation ..... 9, 22  
visual ..... 49  
voltage ..... 4, 9, 29–40  
volume ..... 15, 18, 58, *See button*

### **W**

warranty ..... 81, 101  
weight ..... 8, 11, 63, 73, 74, 75  
weights and measure ..... 62–78  
white LED ..... *see indicators*  
window ..... 6, 7, 11, 15, 23, 80

### **Z**

zero ..... 5, 15, 18, 61, 62, 66,  
75, *See button*

## Worldwide Headquarters

### Metrologic Instruments, Inc.

90 Coles Road • Blackwood, NJ 08012-4683 • Email: info@metrologic.com  
Tel: 856-228-8100 • Fax: 856-228-6673 (Sales) • Fax: 856-228-1879 (Marketing) • Fax: 856-228-0653 (Legal/Finance)

#### Metrologic Companies

##### Adaptive Optics Associates (AOA)

Tel: 617-806-1400  
Fax: 617-806-1899  
Email: info@aoinc.com

##### Omniplanar

Tel: 856.537.6100  
Fax: 856.537.6116  
Email: info@omniplanar.com

#### Metrologic - The Americas

##### Metrologic The Americas

Tel: 1.856.537.6400  
Fax: 1.856.537.6474  
Email: info@us.metrologic.com

##### Metrologic Canada

Tel: 416.752.7190  
Fax: 416.752.8060  
Email: info@ca.metrologic.com

##### Metrologic Mexico, S.A. DE C.V.

Tel: 55.5365.6247  
Fax: 55.5362.2544  
Email: info@mx.metrologic.com

##### Metrologic do Brasil Ltda.

Tel: 55.11.5182.7273  
Fax: 55.11.5182.7198  
Email: info@sa.metrologic.com

##### Metrologic South America

Tel: 239.642.1958  
Fax: 239.642.1959  
Email: info@sa.metrologic.com

#### Metrologic GmbH

##### Metrologic Instruments UK Limited

Tel: +44 (0) 1256 365900  
Fax: +44 (0) 1256 365955  
Email: info@uk.metrologic.com

##### Metrologic Instruments GmbH

Tel: 49-89-89019-0  
Fax: 49-89-89019-200  
Email:  
info@europe.metrologic.com

##### Metrologic Eria Iberica, SL

Tel: +34 913 272 400  
Fax: +34 913 273 829  
Email: info@es.metrologic.com

##### Metrologic Instruments Italia

Tel: +39 0 57 6511978 or +39  
051 651 1978  
Fax: +39 0 51 6521337  
Email: info@it.metrologic.com

##### Metrologic Eria France SA

Tel: +33 (0) 1 48.63.78.78  
Fax: +33 (0) 1 48.63.24.94  
Email: info@fr.metrologic.com

##### Metrologic Instruments Poland

Tel: +48 (22) 545 04 30  
Fax: +48 (22) 545 04 31  
Email: info@pl.metrologic.com

##### Metrologic Russia

Tel: +7 095 730 7424  
Fax: +7 095 730 7425  
Email: info@ru.metrologic.com

#### Metrologic Asia (Pte) Ltd

##### Metrologic Asia (Pte) Ltd

Tel : (65) 6842-7155  
Fax : (65) 6842-7166  
Email: info@sg.metrologic.com

##### MTLG Auto ID Instruments (Shanghai) Co., Ltd

Tel: 86-21-58692780  
Fax: 86-21-58692782  
Email: info@cn.metrologic.com

##### Suzhou Sales Office

Tel: 86-512-67622550  
Fax: 86-512-67622560  
Email: info@cn.metrologic.com

##### Guangzhou Sales Office

Tel: 86-20-38823476  
Fax: 86-20-38823477  
Email: info@cn.metrologic.com

##### Chengdu Sales Office

Tel/Fax: 86 28 86200109  
Email: info@cn.metrologic.com

##### Beijing Sales Office

Tel/Fax: 86 10 82253472  
Email: info@cn.metrologic.com

##### India Sales Office

Tel: +91 80 51256718  
Fax: +91 80 51256719  
Email: info@in.metrologic.com

##### Metrologic Indonesia

Tel: 62 21 7360682  
Fax: 62 21 7360682  
Email:  
aherdian@id.metrologic.com

##### Taiwan Sales Office

Tel: 886-2-2351 0125  
Email:  
john.cheng@tw.metrologic.com

##### Metrologic Thailand

Tel: 661-814-2352

##### Metrologic Japan Co., Ltd.

Tel: 81-3-3839-8511  
Fax: 81-3-3839-8519  
Email: info@jp.metrologic.com

##### Korea Sales Office

Tel: 82-2-6205-5379  
Fax: 82-2-3444-3980  
Email:  
Scott.lee@kr.metrologic.com

January 2006, Version 01

Printed in the USA



00 - 02035B