

## - WD200 Wearable Terminal -



# **Quick Start Guide**

608901G V1.0

### **Package**

Please make sure the following contents are in the WD200 gift box. If something is missing or damaged, please contact your unitech representative.


### The package contents

- WD200
- USB Type C Cable
- Quick Start Guide
- Regulatory Compliance Statements

### Optional accessories

- 4 slot cradle
- EZ Lock arm strap Holder
- Wrist Holder
- Necklace Holder
- Belt Holder
- USB 3.0 Cable

### **Product View**

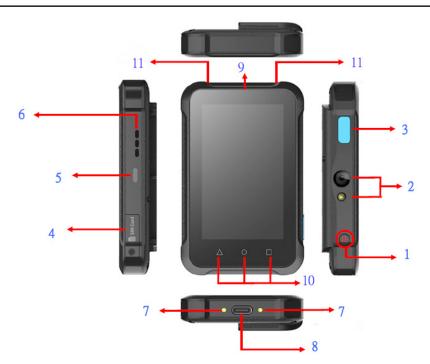

| 1 | Power Key                           | 6  | Speaker          |
|---|-------------------------------------|----|------------------|
| 2 | Camera & LED Flash Light            | 7  | Pogo pin         |
| 3 | Programmable Button / Camera Button | 8  | USB Type C Port  |
| 4 | SIM Card Slot                       | 9  | Touch Panel      |
| 5 | LED Light                           | 10 | Δ : Back Button  |
|   |                                     |    | O : Home Button  |
|   |                                     |    | : Recent Button  |
|   |                                     | 11 | Microphone Holes |



#### Charging the battery

Connect the type C USB cable to the USB port on WD200 and connect the other end of the USB cable to AC power adapter. Then plug into the electrical outlet. It is highly recommended that using the unitech USB type-C cable to charge the terminal.

The charging LED indicator on WD200 is turning red when it is in charging state. The green light is on after the battery is fully charged.



#### Inserting a Nano SIM Card

- Remove the one screw on the Nano SIM card slot cover with a screw driver and remove the cover.
- 2. Insert the SIM card with the notched corner.
- 3. Push the card into the slot until you feel the card click into place.
- 4. Lock the cover back into place.



### Checking LED Status

| LED  | Description                     |  |
|--|---------------------------------|--|
| Red Light  | ■ Battery Charging              |  |
|  | ■ Twinkling to indicate battery |  |
|  | low status(less than 15%)       |  |
| Green Light  | ■ Battery Fully charged         |  |
|  | ■ Barcode scan good read        |  |
| Blue Light   | Message                         |  |
| No LED (Red and Green) display when battery is out(even AC IN) |                                 |  |

For other product documentation, please scan the QR code below for more information.



#### WARNING!

DO NOT force opening the battery cover and attempting to change the battery as you may damage the product and the battery, it is built-in and is not user changeable.

Any batteries inappropriate use could result in damage or safety issues such as catching fire, or malfunctioning the sensitive components. unitech reserves the right and disclaims any liability as a result of any damages caused by ignoring this warning. To avoid any consequential damages, please contact a unitech representative before removing the battery.

### WARNING!

There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

#### CAUTION!

- To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.
- If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.

http://www.ute.com/