



METROLOGIC INSTRUMENTS, INC.

**MS3780 Fusion™**

**Omni/Single Line Scanner  
Installation and User's Guide**



## **Copyright**

© 2006 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

# TABLE OF CONTENTS

---

## Introduction

|                                       |   |
|---------------------------------------|---|
| Product Overview .....                | 1 |
| Scanner and Accessories.....          | 2 |
| Scanner Components.....               | 4 |
| Caution and Serial Number Labels..... | 5 |
| Stand Specifications .....            | 5 |
| Cable Removal .....                   | 6 |
| Cable Connection Warning.....         | 6 |
| Maintenance .....                     | 6 |

## Installation

|                                                |    |
|------------------------------------------------|----|
| RS232 or Light Pen .....                       | 7  |
| IBM 46xx or OCIA .....                         | 8  |
| Keyboard Wedge.....                            | 9  |
| Stand-Alone Keyboard Wedge .....               | 10 |
| Full Speed or Low Speed USB (Integrated) ..... | 11 |
| EAS Deactivation .....                         | 12 |

## Scanner Operation

|                                                          |    |
|----------------------------------------------------------|----|
| The Scan Pattern Mode Select Button .....                | 13 |
| How to Use CodeGate and the Manual Activation Mode ..... | 14 |

### Indicators

|               |    |
|---------------|----|
| Audible ..... | 15 |
| Visual .....  | 16 |
| Failure ..... | 17 |

### Depth of Field Specifications

|                        |    |
|------------------------|----|
| Normal Scan Zone ..... | 18 |
| Reduced Scan Zone..... | 19 |

### Depth of Field by Bar Code Element Width

|                        |    |
|------------------------|----|
| Normal Scan Zone ..... | 20 |
| Reduced Scan Zone..... | 21 |

# TABLE OF CONTENTS

---

|                                                  |    |
|--------------------------------------------------|----|
| IR Activation Range                              |    |
| Normal .....                                     | 22 |
| Reduced .....                                    | 22 |
| Troubleshooting Guide .....                      | 23 |
| Design Specifications .....                      | 27 |
| Applications and Protocols .....                 | 29 |
| Default Settings - Communication Parameters..... | 30 |
| Upgrading the Flash ROM Firmware .....           | 35 |
| Scanner and Cable Terminations .....             | 36 |
| Laser and Product Safety .....                   | 40 |
| Limited Warranty .....                           | 42 |
| Patents .....                                    | 43 |
| Index .....                                      | 44 |

## INTRODUCTION

---

The Fusion is a hand-held, omnidirectional bar code scanner with optional single-line scanning capabilities. It utilizes the powerful Metrologic QuantumE scan engine to provide an outstanding scan performance on all standard 1D barcode symbologies, including RSS. Designed for retail applications, the Fusion includes additional key product features like:

- Fully Automatic Scanning Operation
- Single-Line Mode for Menu Reading
- Custom Configurable Scan Pattern
- User-Replaceable Single-Cable Interface to Host (PowerLink Compatible)
- User Configurable Depth of Field
- Easy Bar Code Configuration
- Data Editing
- 7 Beeper Tones
- Flash - Upgradeable Firmware
- OPOS and JPOS System Compatible
- CodeGate<sup>®</sup>
- Sunrise 2005 Compliant

| SCANNER   | INTERFACE                                                                     |
|-----------|-------------------------------------------------------------------------------|
| MS3780-9  | OCIA and RS232 Transmit/Receive                                               |
| MS3780-11 | IBM 46xx and Full RS232                                                       |
| MS3780-38 | RS232 Low Speed USB*,<br>Keyboard Emulation Mode or USB Serial Emulation Mode |
| MS3780-40 | Full Speed USB                                                                |
| MS3780-41 | RS232/Light Pen Emulation                                                     |
| MS3780-47 | Keyboard Wedge, Stand-Alone Keyboard and<br>RS232 Transmit/Receive            |
| MS3780-48 | Stand Alone Keyboard and RS232 Transmit/Receive                               |

\* Configurable for Keyboard Emulation Mode or Serial Emulation Mode.  
The default setting is Keyboard Emulation Mode.

## INTRODUCTION

---

### Scanner and Accessories

| BASIC KIT COMPONENTS |                                        |
|----------------------|----------------------------------------|
| Part No.             | Description                            |
| MS3780               | Fusion Scanner                         |
| 00-02099             | MS3780 Installation and User's Guide * |
| 00-02407             | MetroSelect® Configuration Guide *     |

\* Guides also available for download at [www.metrologic.com](http://www.metrologic.com).

| OPTIONAL ACCESSORIES                                              |                                                                                                           |
|-------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Part No.                                                          | Description                                                                                               |
| AC to DC Power Transformer - Regulated 5.2VDC @ 650 mA output.    |                                                                                                           |
| 45-45593                                                          | 120V United States and Canada                                                                             |
| 45-45591                                                          | 220V-240V Continental European                                                                            |
| 45-45592                                                          | 220V-240V United Kingdom                                                                                  |
| 46-46803                                                          | 250V Australia                                                                                            |
| 46-46983                                                          | 250V China                                                                                                |
| The following cables are for Fusion models not equipped with EAS. |                                                                                                           |
| 53-53000.x-3                                                      | RS232 PowerLink Cable with Built in Power Jack<br>2.7 m (9 ft.) coiled cord, long strain relief, black    |
| 53-53002.x-3                                                      | Keyboard Wedge PowerLink cable with Adapter Cable<br>2.7 m (9 ft.) coiled cord, long strain relief, black |
| 53-53020.x-3                                                      | Stand Alone Keyboard PowerLink Cable<br>2.7 m (9 ft.) coiled cord, long strain relief, black              |
| MVC-3MPC-IB9                                                      | Metrologic Voltage Converter Cable, $\pm 12\text{VDC}$ to $+5.2\text{VDC}$<br>For IBM Applications        |
| MVC-3MNC-N7052                                                    | Metrologic Voltage Converter Cable, $\pm 12\text{VDC}$ to $+5.2\text{VDC}$<br>For OCIA Applications       |

*Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's customer service department at 1-800-436-3876.*

## Scanner and Accessories

| OPTIONAL ACCESSORIES                                          |                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Part No.                                                      | Description                                                                                                                                                                                                                                                 |
| 53-53213.x-N-3                                                | USB Full Speed Cable, Locking Plus-Power™ Type A<br>3 m (10 ft.) straight cord, short strain relief                                                                                                                                                         |
| 53-53214.x-N-3                                                | USB Full Speed Cable, Locking Plus-Power™ Type A<br>5 m (17 ft.) straight cord, short strain relief<br> This cable is for use with full speed<br>USB (-40) interface only. |
| 53-53235.x-N-3                                                | USB Low Speed Communication Cable,<br>Type A (Non-Locking) Connector<br>2.8 m (9.2 ft.) straight cord, short strain relief                                                                                                                                  |
| The following cables are for Fusion models equipped with EAS. |                                                                                                                                                                                                                                                             |
| 55-55000.x-E-3                                                | RS232 PowerLink Cable with Built in Power Jack and<br>EAS Connection Wire (1 ft.)<br>1.8 m (6 ft.), long strain relief, straight cable, black                                                                                                               |
| 55-55006.x-E-3                                                | IBM PowerLink Cable with Built in Power Jack and<br>EAS Connection Wire (1 ft.)<br>1.8 m (6 ft.), long strain relief, straight, black                                                                                                                       |
|                                                               |                                                                                                                                                                                                                                                             |
| 46-00225                                                      | Stand                                                                                                                                                                                                                                                       |

*Other items may be ordered for the specific protocol being used. To order additional items, contact the dealer, distributor or call Metrologic's customer service department at 1-800-436-3876.*

Scanner Components

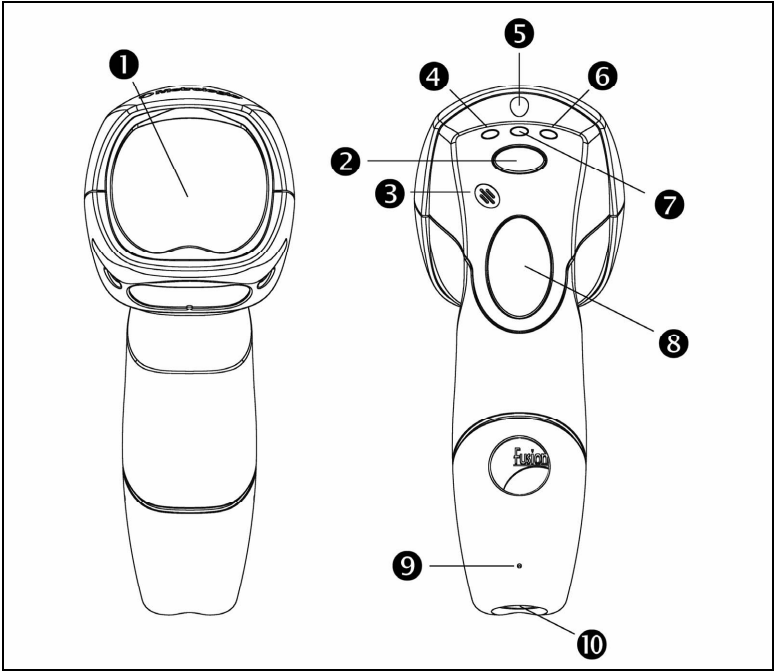


Figure 1. Scanner Components

| ITEM No. | DESCRIPTION                                                         |
|----------|---------------------------------------------------------------------|
| 1        | Red Output Window, Laser Aperture (See page 40)                     |
| 2        | Mode Select Button (See page 13)                                    |
| 3        | Beeper (See page 15)                                                |
| 4        | Blue LED, Single-Line Mode / Menu Reading (See page 15)             |
| 5        | White LED (See page 15)                                             |
| 6        | Blue LED, All Scan Lines On / Omnidirectional Reading (See page 15) |
| 7        | Amber LED, CodeGate (See page 15)                                   |
| 8        | CodeGate Button (See page 14)                                       |
| 9        | Pin Hole for Cable Release (See page 6)                             |
| 10       | 10-Pin RJ45, Female Socket (See page 36)                            |



# INTRODUCTION

## Caution and Serial Number Labels

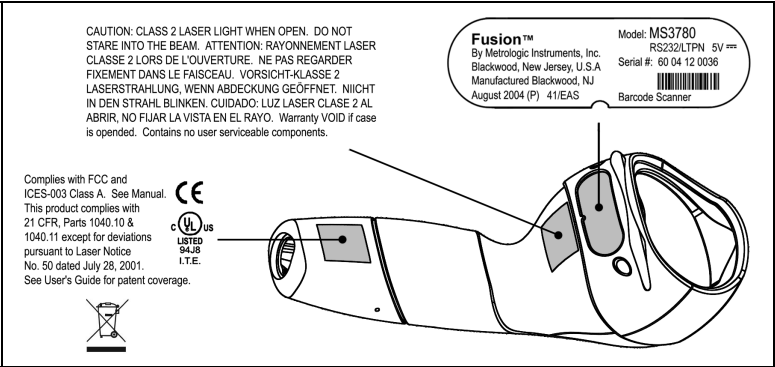


Figure 2. Caution and Serial Labels

## Stand Specifications

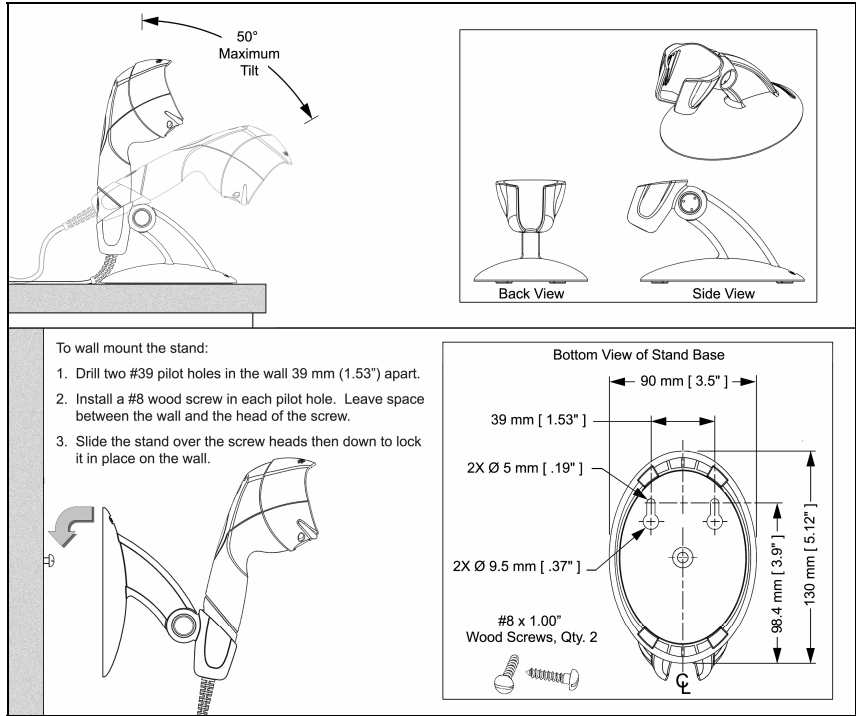


Figure 3. Stand Specifications

# Introduction

---

## Maintenance

Smudges and dirt can interfere with the proper scanning of a bar code. Therefore, the output window will need occasional cleaning.

1. Spray glass cleaner onto a lint free, non-abrasive cleaning cloth.
2. Gently wipe the scanner window.

## Cable Removal

Disconnect the power supply from the PowerLink cable and turn off power to the host system before removing the cable from the scanner.

1. Locate the small 'pin-hole' beneath the Fusion logo on the front side of the scanner near the end of the handle.
2. Bend an ordinary paperclip into the shape shown above.
3. Insert the paperclip (or other small metallic pin) into the small 'pin-hole'. There will be a faint 'click' when the connector's lock releases.
4. Pull gently on the cable's strain-relief to remove the cable.

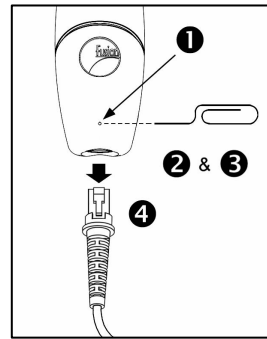


Figure 4.

## Cable Connection Warning

**i** Important: If the PowerLink cable is not fully latched the unit can power intermittently.

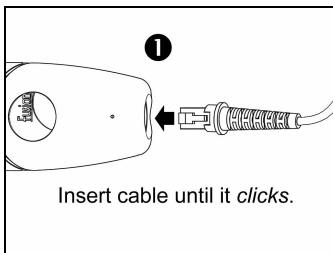


Figure 5.

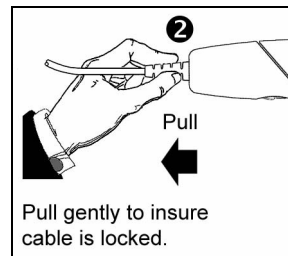


Figure 6.

### RS232 or Light Pen

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin socket on the MS3780.
3. Connect the 9-pin female end of the PowerLink cable to the appropriate communication port on the host device.
4. Plug the external power supply into the power jack on the PowerLink cable.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet must be located near the equipment and be easily accessible.

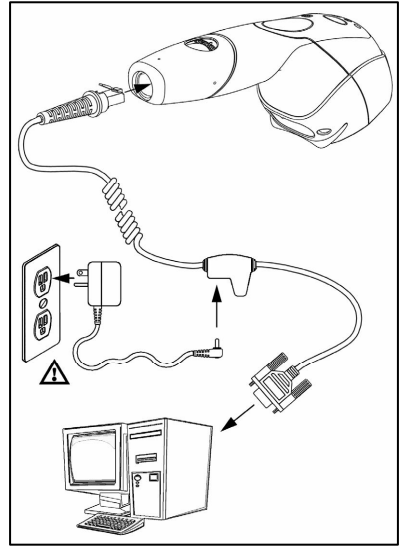


Figure 7.

5. Connect AC power to the transformer.
6. Turn on the host device.



When the scanner first receives power the white LED will flash, one blue LED will turn on and the scanner will emit one beep.



Plugging the scanner into the serial port of the PC does not guarantee that scanned information will appear at the PC. A software driver and correct configuration setting are also required for proper communication to occur.



#### Caution

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### IBM 46xx or OCIA

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the MVC cable into the 10-pin socket on the MS3780.

3. For IBM:  
Connect the other end of the MVC cable to Port 9 of the host device.

For OCIA:

Connect the other end of the MVC cable to the appropriate communication port on the host device.

4. Turn on the host device.


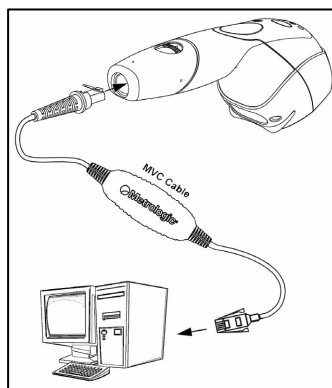


Figure 8. IBM (above), OCIA (below)



When the scanner first receives power the white LED will flash, one blue LED will turn on and the scanner will emit one beep.

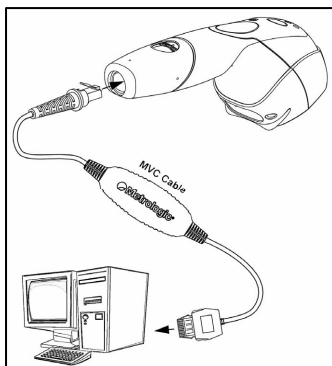

Plugging the scanner into the serial port of the PC does not guarantee that scanned information will appear at the PC. A software driver and correct configuration setting are also required for proper communication to occur.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

## INSTALLATION

### Keyboard Wedge

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin socket on the MS3780.
3. Disconnect the keyboard from the host device.
4. Connect the “Y” end of the PowerLink cable to the keyboard and the keyboard port on the host PC. If necessary use the male/female adapter cable supplied with the scanner for proper connections.
5. Plug the external power supply into the power jack on the PowerLink cable.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet must be located near the equipment and be easily accessible.

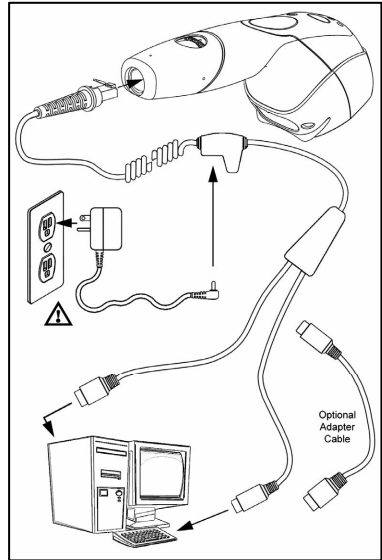


Figure 9.

6. Connect AC power to the transformer.
7. Turn on the host device.



When the scanner first receives power the white LED will flash, one blue LED will turn on and the scanner will emit one beep.



Powering the MS3780 directly from the host device can sometimes cause interference with the operation of the scanner or the computer. Not all computers supply the same current through the keyboard port. For this reason, Metrologic recommends using an external power supply. For additional information contact a Metrologic customer service representative.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

### Stand-Alone Keyboard

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the PowerLink cable into the 10-pin socket on the MS3780.
3. Connect the other end of the PowerLink cable to the keyboard port on the host device.
4. Plug the external power supply into the power jack on the PowerLink cable.



Check the AC input requirements of the power supply to make sure the voltage matches the AC outlet. The outlet must be located near the equipment and be easily accessible.

5. Connect AC power to the transformer.
6. Turn on the host device.

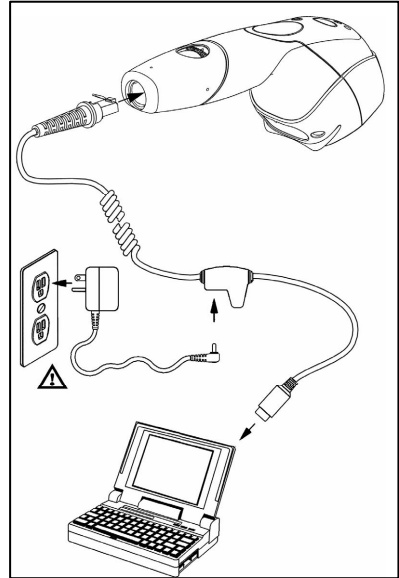


Figure 10.



When the scanner first receives power the white LED will flash, one blue LED will turn on and the scanner will emit one beep.



Powering the MS3780 directly from the host device can sometimes cause interference with the operation of the scanner or the computer. Not all computers supply the same current through the keyboard port. For this reason, Metrologic recommends using an external power supply. For additional information contact a Metrologic customer service representative.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

### Full Speed or Low Speed USB (Integrated)

1. Turn off the host device.
2. Plug the male 10-pin RJ45 end of the USB PowerLink cable into the 10-pin socket on the MS3780.
3. Plug the other end of the USB interface cable into the host device's USB port.
4. Turn on the host device.

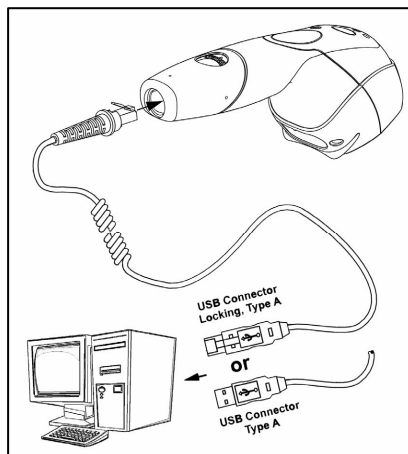


Figure 11.



As a default, the MS3780-38 leaves the factory with USB Keyboard Emulation Mode enabled.

For information on configuring the MS3780-38 for USB Serial Emulation Mode, please refer to the USB: Low Speed section of the MetroSelect Configuration Guide (MLPN 00-02407).



When the scanner first receives power the white LED will flash, one blue LED will turn on and the scanner will emit one beep.



Plugging the scanner into the USB port of the PC does not guarantee that scanned information will appear at the PC. A software driver and correct configuration setting are also required for proper communication to occur.



**Caution:**

To maintain compliance with applicable standards, all circuits connected to the scanner must meet the requirements for SELV (Safety Extra Low Voltage) according to EN/IEC 60950.

To maintain compliance with standard CSA C22.2 No. 60950/UL 60950 and norm EN/IEC 60950, the power source should meet applicable performance requirements for a limited power source.

# EAS Deactivation

## EAS DEACTIVATION

SW1 and SW2 are the switch banks inside the CheckPoint Device that set the deactivation range. The following is a list of CheckPoint recommended switch bank settings.

| CheckPoint Recommended Switch Bank Settings |
|---------------------------------------------|
| SW1 & SW2 switches 1 and 6 set to ON        |

All Fusion models equipped with EAS capabilities have an EAS designation in their model numbers. The cable supplied with these units will have additional wires for connection to the CheckPoint Device.

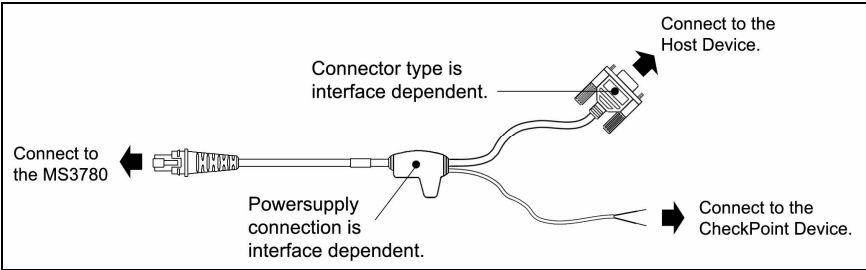


Figure 12. EAS Cable Connection (Bottom of StratosS)

Figure 13 shows the location of the EAS deactivation area for Fusion.

It is important to pass the entire tag through this area to deactivate the security tag.

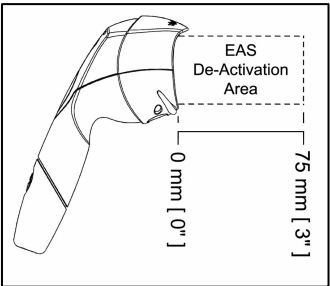


Figure 13. EAS Deactivation Area



### The Scan Pattern Mode Select Button

There are two configurable scan pattern modes available with the MS3780.

- The **primary** scan pattern mode is the default scan pattern active when the scanner starts. By default, the primary scan pattern is set to all-scan-lines for omnidirectional reading.
- Pressing the scan pattern mode button (see figure below) activates the **secondary** scan pattern mode. By default, the secondary scan pattern is set to single-line mode for menu reading.



Please refer to the MetroSelect Configuration Guide for information on changing the default scan pattern settings.

### To Change Scan Pattern Modes

1. To activate the secondary scan pattern, **press** and **release** the mode select button.

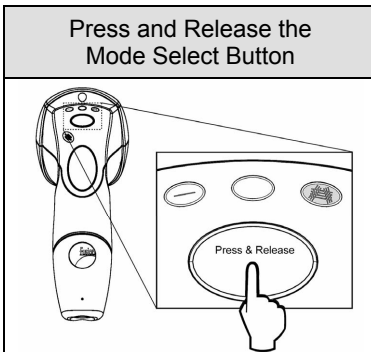


Figure 14.

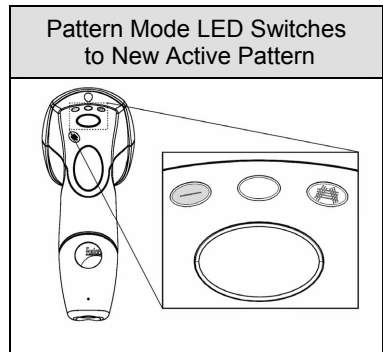


Figure 15.



Activating a pattern mode when the scanner is out of its stand does not change the in-stand pattern mode. When the scanner is returned to the stand it will automatically revert to the most recent scan pattern selected during in-stand operation.

2. To re-activate the primary scan pattern, **press** and **release** the mode select button again.

### How to Use CodeGate and the Manual Activation Mode



For illustration purposes the unit's scan pattern has been set to *single-line (menu reading) mode*.

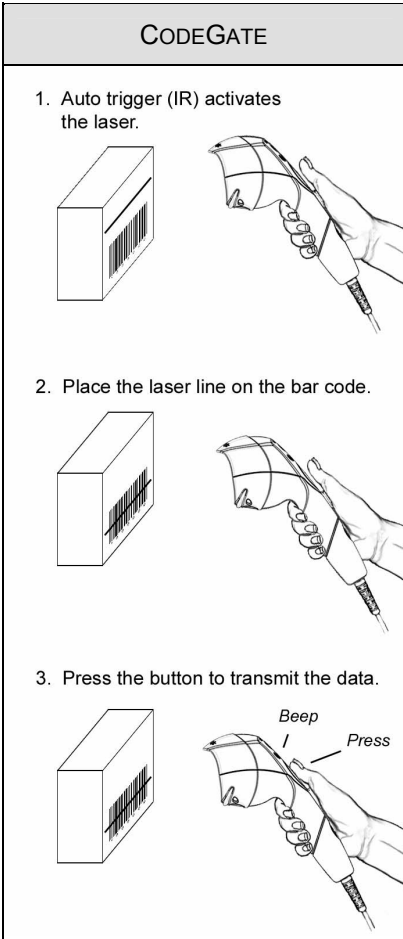


Figure 16.

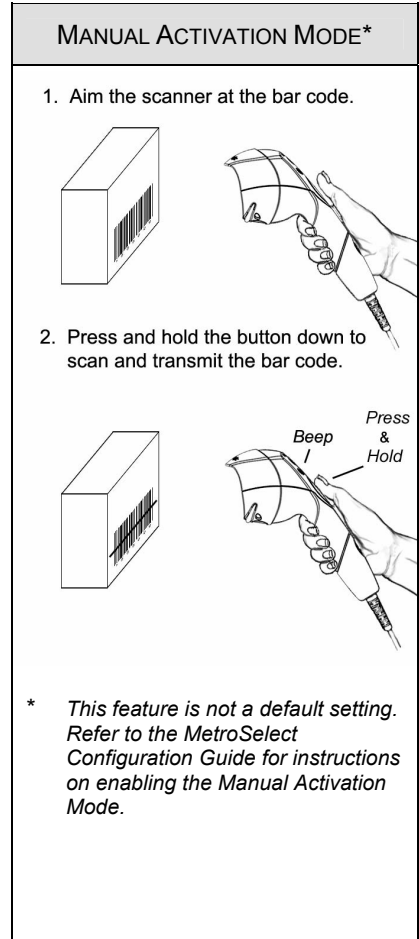


Figure 17.



**Factory Defaults:** In-Stand, CodeGate is not active (Amber LED is On)  
Out-of-Stand, CodeGate is active (Amber LED is Off)

For information on how to change the factory defaults, refer to the MetroSelect Configuration Guide (00-02407).

### Audible Indicators

When the MS3780 is in operation, it can provide audible feedback. These sounds indicate the status of the scanner. Eight settings are available for the tone of the beep (normal, 6 alternate tones and no tone). For instruction on how to change the tone of the beeper, refer to the MetroSelect Configuration Guide (00-02407).



#### One Beep

When the scanner *first* receives power; the white LED will flash, one blue LED will turn on and the scanner will emit a beep (*the white LED will remain on for the duration of the beep*). The scanner is now ready to scan.

When the scanner *successfully* reads a bar code, the white LED will flash and the scanner will emit one beep (*if configured to do so*). If the scanner does not emit one beep and the white light does not flash, then the bar code has *not* been successfully read.



#### Razzberry Tone

This is a failure indicator. Refer to *Failure Mode Indicators* on page 17.



#### Three Beeps - during operation

When placing the scanner in configuration mode, the white and blue LEDs will flash while the scanner emits three beeps. The white and blue LEDs will continue to flash until the unit exits the configuration mode. Upon exiting the configuration mode, the scanner will emit three beeps and the white LED will stop flashing.

When configured, 3 beeps can also indicate a communications timeout during normal scanning mode.

When using one-code-programming, the scanner will emit three beeps: the current selected tone, followed by a short pause then a high tone and a low tone. This tells the user that the single code configuration has *successfully* configured the scanner.




#### Three Beeps - on power up

This is a failure indicator. Refer to *Failure Mode Indicators* on page 17.

### Visual Indicators

There are four LEDs located on the top of the MS3780. When the scanner is on, the flashing or constant illumination of the LEDs indicates the status of the current scan and the scanner.

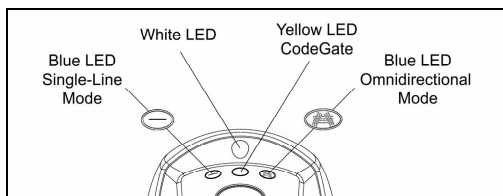

*Figure 18. LED Indicators*

#### No LEDs

The LEDs will not be illuminated if the scanner is not receiving power from the host or transformer. They are also not illuminated when all lasers are turned off for any reason.

#### Steady Blue Single-Line LED

Indicates the laser is active and the scanner is in Single-Line Mode. The blue LED will remain illuminated until the laser is deactivated.

#### Steady Blue Omni LED

Indicates the laser is active and the scanner is in the Omnidirectional Mode. The blue LED will remain illuminated until the laser is deactivated.

#### Steady Blue Single-Line or Omni LED and a Single White LED Flash

When the scanner successfully reads a bar code, the white LED will flash and the scanner will beep once. If the white LED does not flash or the scanner does not beep, then the bar code has not been successfully read.

#### Steady White and Blue Single-Line or Omni LED

After a successful scan, the scanner transmits the data to the host device. Some communication modes require that the host inform the scanner when data is ready to be received. If the host is not ready to accept the information, the scanner's white LED will remain on until the data can be transmitted.

#### Alternate Flashing of Both Blue LEDs and the White LED

This indicates the scanner is in program mode. A razzberry tone indicates that an invalid bar code has been scanned in this mode.

#### Steady Amber LED

Indicates that CodeGate is not active (in-stand default).

### **Failure Mode Indicators**

#### **Both Blue LEDs Flashing with One Emitted Razzberry Tone**

This indicates that the scanner has experienced a laser subsystem failure. Return the unit to a Metrologic authorized service center for repair.

#### **Both Blue LEDs and the White LED are Flashing with Two Emitted Razzberry Tones**

This indicates that the scanner has experienced a motor failure. Return the unit to a Metrologic authorized service center for repair.

#### **Continuous Razzberry Tone with Both LEDs Off - On Power Up**

A continuous razzberry tone upon power up indicates there has been an electronic failure. Return the unit to a Metrologic authorized service center for repair.

#### **Three Beeps - On Power Up**

This indicates that the nonvolatile memory that holds the scanner configuration has failed. Return the unit to a Metrologic authorized service center for repair.

## Depth of Field Specifications\*

### Normal Scan Zone

*Specifications are based on a 0.33 mm (13 mil) bar code.*

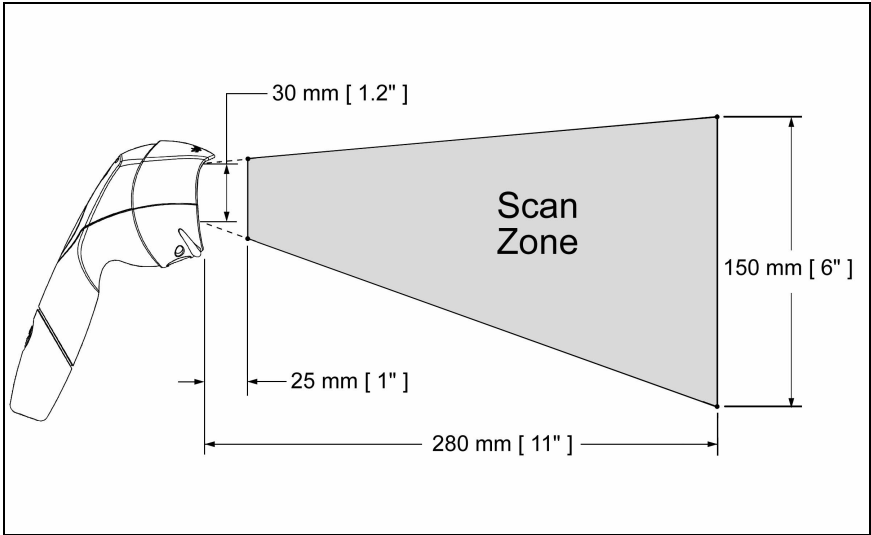



Figure 19. Normal Depth of Field

\* All specifications are subject to change without notice.

### Depth of Field Specifications\*

#### Reduced Scan Zone

*Specifications are based on a 0.33 mm (13 mil) bar code.*

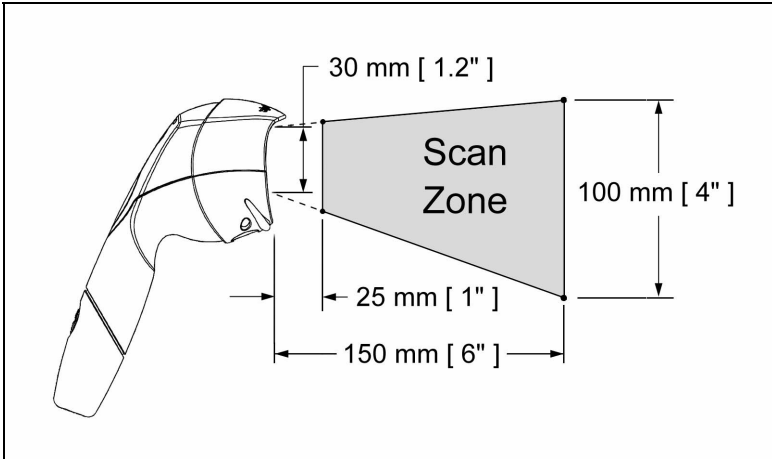

*Figure 20. Reduced Depth of Field*

\* All specifications are subject to change without notice.

Depth of Field by Bar Code Element Width\*

Normal Scan Zone

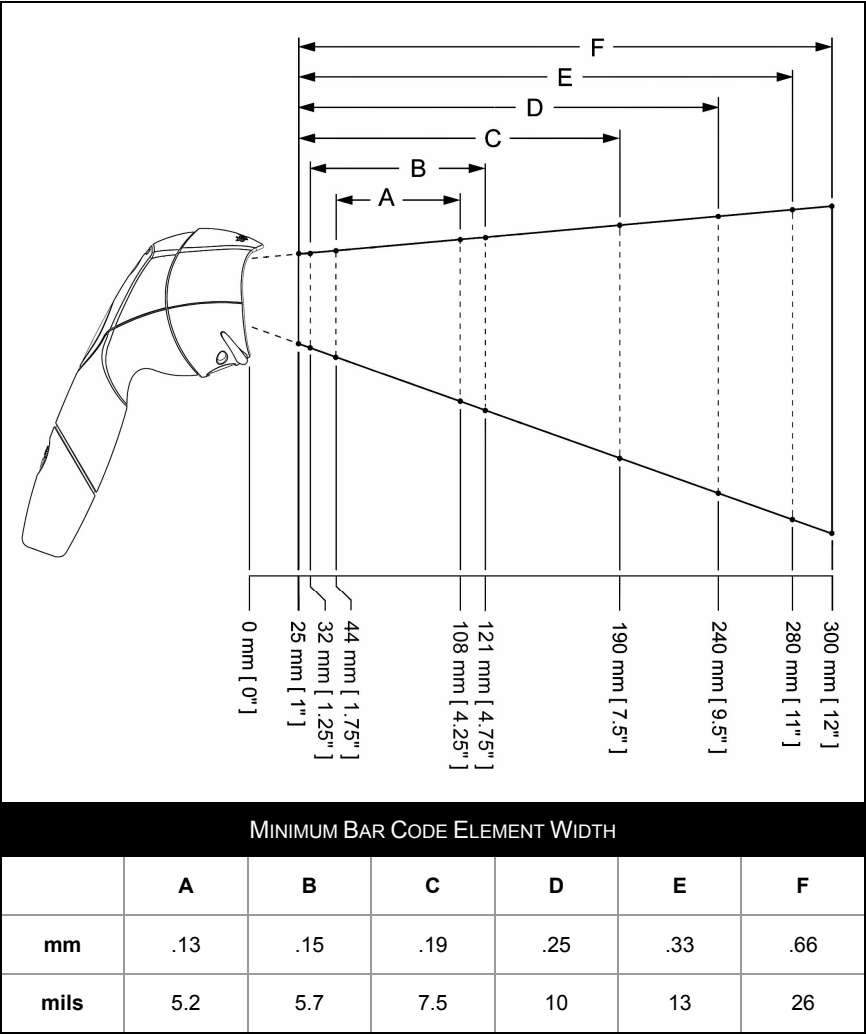


Figure 21. Normal Scan Zone by Bar Code Element Width

\* All specifications are subject to change without notice.



Depth of Field by Bar Code Element Width\*

Reduced Scan Zone

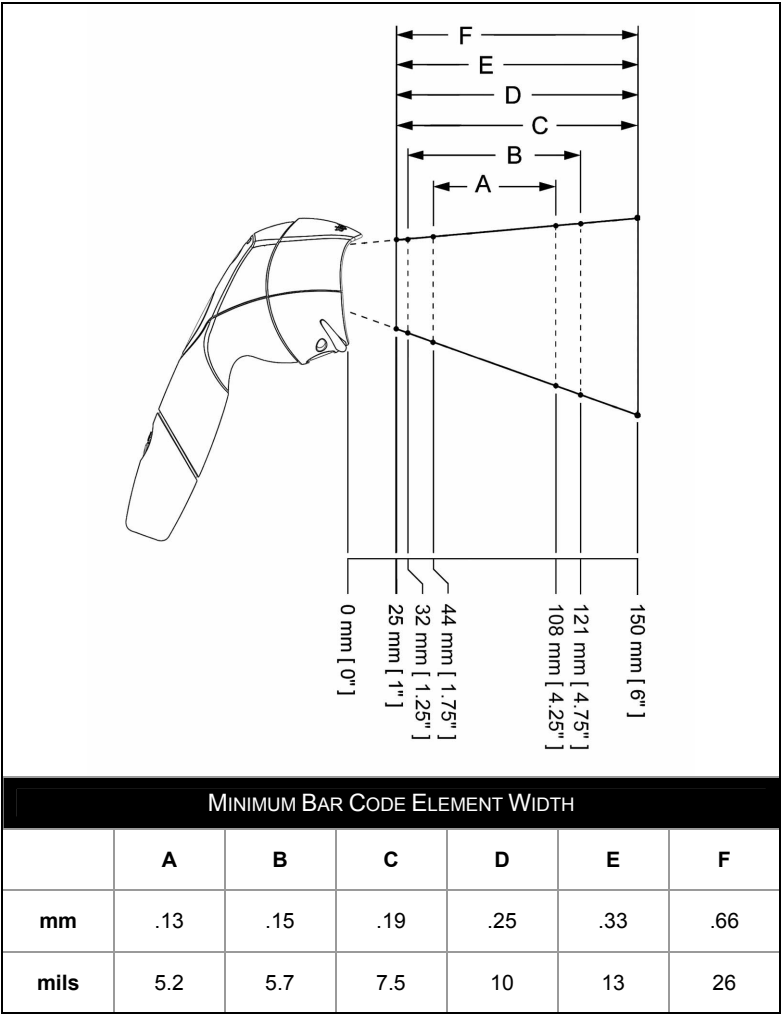


Figure 22. Reduced Scan Zone by Bar Code Element Width

\* All specifications are subject to change without notice.

IR Activation Range\*

Normal

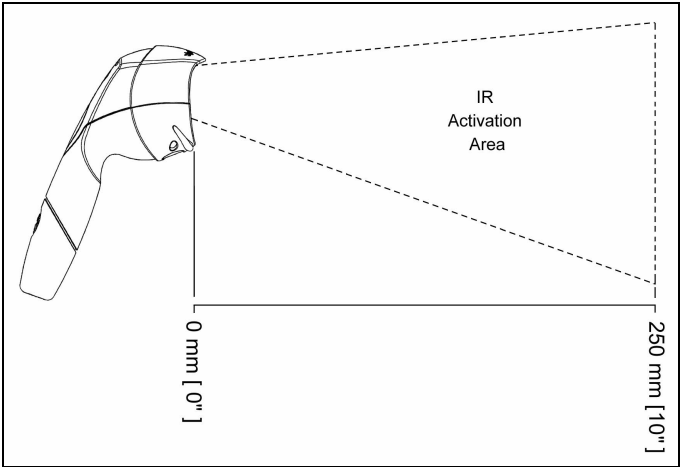


Figure 23. Normal IR Activation Range

Reduced

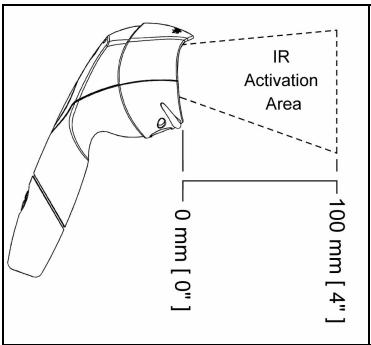


Figure 24. Reduced IR Activation Range

\* All specifications are subject to change without notice.

## TROUBLESHOOTING GUIDE

The following guide is for reference purposes only. Contact a Metrologic representative at 1-800-ID-METRO or 1-800-436-3876 to preserve the limited warranty terms on page 42.

| Symptoms                                            | Possible Cause(s)                                                                                                                                     | Solution                                                                                                                                                                       |
|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>All Interfaces</i>                               |                                                                                                                                                       |                                                                                                                                                                                |
| The unit has no LEDs, beeper or motor spin.         | No power is being supplied to the scanner.                                                                                                            | Check the transformer, outlet and power strip. Make sure the cable is plugged into the scanner.                                                                                |
| The unit has no LEDs and / or beeper.               | No power is being supplied to the scanner from host.                                                                                                  | Some host systems cannot supply enough current to power the MS3780. Use the power supply included with the scanner.                                                            |
| There are multiple scans upon presentation of code. | The same symbol timeout is set too short.                                                                                                             | Adjust the same symbol timeout for a longer time increment.                                                                                                                    |
| The unit powers up but does not beep.               | The beeper is disabled.                                                                                                                               | Enable the beeper.                                                                                                                                                             |
|                                                     | No tone is selected.                                                                                                                                  | Select a tone.                                                                                                                                                                 |
| The unit powers up but does not scan and/or beep.   | The unit is trying to scan a particular symbology that is not enabled.                                                                                | UPC/EAN, Code 39, Interleaved 2 of 5, Code 93, Code 128 and Codabar are enabled by default. Verify that the type of bar code being read has been selected                      |
|                                                     | The scanner has been configured for a character length lock, or a minimum length and bar code being scanned does not satisfy the configured criteria. | Verify that the bar code that is being scanned falls into the criteria.<br><br><i>Typical of Non-UPC/EAN codes. The scanner defaults to a minimum of 4 character bar code.</i> |

## TROUBLESHOOTING GUIDE

| Symptoms                                                                                        | Possible Cause(s)                                                                                   | Solution                                                                                                                                           |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>All Interfaces</i>                                                                           |                                                                                                     |                                                                                                                                                    |
| The unit scans a bar code, but locks up after the first scan ( <i>the white LED stays on</i> ). | The scanner is configured to support some form of host handshaking but is not receiving the signal. | If the scanner is setup to support ACK/NAK, RTS/CTS, XON/XOFF or D/E, verify that the host cable and host are supporting the handshaking properly. |
| The unit scans but the data transmitted to the host is incorrect.                               | The scanner's data format does not match the host system requirements.                              | Verify that the scanner's data format matches the format required by the host. Make sure that the scanner is connected to the proper host port.    |
| Scanner beeps at some bar codes and NOT for others of the same bar code symbology.              | The print quality of the bar code is suspect.                                                       | The type of printer and/or the printer settings could be the problem.                                                                              |
|                                                                                                 | The aspect ratio of the bar code is out of tolerance.                                               | Check the print mode or change the printer settings. For example, change to econo mode or high speed.                                              |
|                                                                                                 | The bar code may have been printed incorrectly.                                                     | Check if it is a check digit, character or border problem.                                                                                         |
|                                                                                                 | The scanner is not configured correctly for the type of bar code.                                   | Check if check digits are set properly.                                                                                                            |
|                                                                                                 | The minimum symbol length setting does not work with the bar code.                                  | Check if the correct minimum symbol length is set.                                                                                                 |

## TROUBLESHOOTING GUIDE

| Symptoms                                                                          | Possible Cause(s)                                                      | Solution                                                                                                                                         |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>All Interfaces</i>                                                             |                                                                        |                                                                                                                                                  |
| During power up the unit beeps 3 times.                                           | There is a non-volatile RAM failure.                                   | Contact a Metrologic service representative.                                                                                                     |
| During power up the unit razzes continuously.                                     | There is a RAM or ROM failure.                                         | Contact a Metrologic service representative.                                                                                                     |
| During power up the unit razzes once and the blue LED flashes.                    | There is a VLD failure.                                                | Contact a Metrologic service representative.                                                                                                     |
| During power up the unit razzes twice and both LEDs flash.                        | There is a scanner motor failure.                                      | Contact a Metrologic service representative.                                                                                                     |
| <i>RS232 Only</i>                                                                 |                                                                        |                                                                                                                                                  |
| The unit powers up OK and scans OK but does not communicate properly to the host. | The com port at the host is not working or is not configured properly. | Check to make sure that the baud rate and parity of the scanner and the communication port match and that the program is looking for RS232 data. |
|                                                                                   | The cable is not connected to the proper com port.                     |                                                                                                                                                  |
|                                                                                   | The com port is not operating properly.                                |                                                                                                                                                  |

## TROUBLESHOOTING GUIDE

| Symptoms                                                       | Possible Cause(s)                                                                 | Solution                                                                                                                         |
|----------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <i>RS232 Only</i>                                              |                                                                                   |                                                                                                                                  |
| The host is receiving data but the data does not look correct. | The scanner and host may not be configured for the same interface.                | Check that the scanner and the host are configured for the same interface.                                                       |
| Characters are being dropped.                                  | The intercharacter delay needs to be added to the transmitted output.             | Add some intercharacter delay to the transmitted output by using the MetroSelect Configuration Guide (MLPN 00-02407).            |
| <i>Keyboard Wedge Only</i>                                     |                                                                                   |                                                                                                                                  |
| The unit scans the bar code but there is no data.              | The unit may not be configured correctly.                                         | Make sure the scanner is configured for the appropriate mode.                                                                    |
| The unit scans but the data is not correct.                    | The unit may not be configured correctly.                                         | Make sure that the proper PC type (ie. AT, PS2 or XT) is selected.                                                               |
|                                                                |                                                                                   | Verify correct country code and data formatting are selected.                                                                    |
|                                                                |                                                                                   | Adjust the intercharacter delay.                                                                                                 |
| The unit is not transmitting each character.                   | The unit may not be configured correctly.                                         | Increase the interscan code delay setting. Adjust whether the F0 break is transmitted. It may be necessary to try both settings. |
| Alpha characters show as lower case.                           | The computer is in caps lock mode.                                                | Enable <i>caps lock detect</i> setting of the scanner to detect whether the PC is operating in caps lock.                        |
| Everything works except for a couple of characters.            | These characters may not be supported by the current country's key look up table. | Try operating the scanner in <i>Alt Mode</i> .                                                                                   |

## DESIGN SPECIFICATIONS

|                         |                    | MS3780                                                                                                               |                              |
|-------------------------|--------------------|----------------------------------------------------------------------------------------------------------------------|------------------------------|
| Operational             |                    |                                                                                                                      |                              |
| Light Source:           |                    | Visible Laser Diode (VLD) @ 650 nm                                                                                   |                              |
| Laser Power:            |                    | 1.1 mW (Peak)                                                                                                        |                              |
| Normal Depth of Field:  |                    | 25 mm - 280 mm (1" - 11")                                                                                            | 0.33 mm (13 mil)<br>bar code |
| Reduced Depth of Field: |                    | 25 mm - 150 mm (1" - 6")                                                                                             |                              |
| Omni Scan               |                    |                                                                                                                      |                              |
|                         | Scan Speed:        | 1333 scan lines per second                                                                                           |                              |
|                         | No. of Scan Lines: | 20                                                                                                                   |                              |
| Single-Line             |                    |                                                                                                                      |                              |
|                         | Scan Speed:        | 67 scan lines per second                                                                                             |                              |
|                         | No. of Scan Lines: | 1                                                                                                                    |                              |
| Motor Speed:            |                    | 4000 RPM                                                                                                             |                              |
| Min Bar Width:          |                    | 0.127 mm (5.0 mil)                                                                                                   |                              |
| Decode Capability:      |                    | All standard 1-D bar codes including RSS-14, RSS-Expanded, and RSS-14 Limited                                        |                              |
| System Interfaces:      |                    | RS232, Keyboard Wedge, Stand-Alone Keyboard, Light Pen Emulation, IBM468x/469x, USB (low speed and full speed), OCIA |                              |
| Print Contrast:         |                    | 35% minimum reflectance difference                                                                                   |                              |
| No. Characters Read:    |                    | Up to 80 data characters<br>Maximum number will vary based on symbology and density.                                 |                              |
| Beeper Operation:       |                    | 7 tones or no beep                                                                                                   |                              |
| Indicators (LED):       |                    | Blue = laser on, ready to scan                                                                                       |                              |
|                         |                    | White = good read, decoding                                                                                          |                              |
| Termination:            |                    | 10 position modular RJ45 connector                                                                                   |                              |
| Cable:                  |                    | Application Dependent                                                                                                |                              |
| Mechanical              |                    |                                                                                                                      |                              |
| Scanner Length:         |                    | 189 mm (7.44")                                                                                                       |                              |
| Scanner Width:          |                    | 65 mm (2.56")                                                                                                        |                              |
| Scanner Height:         |                    | 73 mm (2.88")                                                                                                        |                              |
| Scanner Weight:         |                    | 195 g (6.9 oz.)                                                                                                      |                              |

Specifications subject to change without notice.

## DESIGN SPECIFICATIONS

| MS3780                 |                                                                      |
|------------------------|----------------------------------------------------------------------|
| Electrical             |                                                                      |
| Voltage Supply:        | 5VDC $\pm$ 0.25V                                                     |
| Operating Power:       | 1.375 W                                                              |
| Standby Power:         | 1.0 W                                                                |
| Operating Current:     | 275 mA typical at 5VDC                                               |
| Standby Current:       | 200 mA typical at 5VDC                                               |
| DC Transformers:       | Class II; 5.2VDC @ 650 mA                                            |
| Laser Class 1:         | IEC 60825-1:1993+A1:1997+A2:2001<br>EN 60825-1:1994+A11:1996+A2:2001 |
| EMC:                   | FCC, ICES-003 & EN 55022 Class A                                     |
| Environmental          |                                                                      |
| Operating Temperature: | -20°C to 40°C (-4°F to 104°F)                                        |
| Storage Temperature:   | -40°C to 60°C (-40°F to 140°F)                                       |
| Humidity:              | 5% to 95% relative humidity, non-condensing                          |
| Contaminants:          | Sealed to resist airborne particulate contaminants                   |
| Ventilation:           | None required                                                        |
| Shock:                 | Withstands multiple drops from 1.5 meters                            |

*Specifications subject to change without notice.*



## APPLICATIONS AND PROTOCOLS

---

The model number on each scanner includes the scanner number and factory default communications protocol.

| SCANNER | VERSION IDENTIFIER | INTERFACE                                                             |
|---------|--------------------|-----------------------------------------------------------------------|
| MS3780  | 9                  | OCIA and RS232 Transmit/Receive                                       |
|         | 11                 | IBM 46xx and Full RS232                                               |
|         | 38                 | RS232 Low Speed USB*, Keyboard Emulation or USB Serial Emulation Mode |
|         | 40                 | Full Speed USB                                                        |
|         | 41                 | RS232/Light Pen Emulation                                             |
|         | 47                 | Keyboard Wedge, Stand-Alone Keyboard and RS232 Transmit/Receive       |
|         | 48                 | Stand Alone Keyboard and RS232 Transmit/Receive                       |

The MS3780 scanner with Built-in PC Keyboard Wedge Interface is designed to be used for keyboard emulation only. Many RS232 configurable functions (e.g. formatting) available in other Metrologic scanners are also available as keyboard wedge functions.

The following are the most important selectable options specific to the keyboard wedge.

### Keyboard Type

- \*\* AT (includes IBM® PS2 models 50, 55, 60, 80)
- XT
- IBM PS2 (includes models 30, 70, 8556)

### Keyboard Country Type

- |           |           |                  |
|-----------|-----------|------------------|
| • USA **  | • German  | • Spanish        |
| • Belgium | • Italian | • Swiss          |
| • French  | • Japan   | • United Kingdom |

\*\* Default setting. For a complete list of default settings, see *Default Settings - Communication Parameters* starting on page 30 of this guide. Refer to the MetroSelect® Configuration Guide (MLPN 00-02407) or MetroSet2's help files for information on how to change the default settings.

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

Many functions of the scanner can be "configured" - that is enabled or disabled. The scanner is shipped from the factory configured to a set of default conditions. The default parameter of the scanner has an asterisk ( \* ) in the charts on the following pages. If an asterisk is not in the default column then the default setting is *off* or *disabled*. Every interface does not support every parameter. If the interface supports a parameter listed in the charts on the following pages, a check mark (✓) will appear in the column for that interface.

| PARAMETER                         | DEFAULT  | OCIA | USB | RS232* | LIGHT<br>PEN | IBM<br>46XX | KBW |
|-----------------------------------|----------|------|-----|--------|--------------|-------------|-----|
| UPC/EAN                           | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Code 128                          | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Code 93                           | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Codabar                           | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Interleaved 2 of 5 (ITF)          | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| MOD 10 Check on ITF               |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Code 11                           |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Code 39                           | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Full ASCII Code 39                |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| MOD 43 Check on Code 39           |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| MSI-Plessey                       |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| MSI-Plessey<br>10/10 Check Digit  |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| MSI-Plessey<br>MOD 10 Check Digit |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Paraf Support                     |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| ITF Symbol Lengths                | Variable | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Minimum Symbol Length             | 4        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Symbol Length Lock                | None     | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS14 Enable                      |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS14 ID "Je0"                    | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS14 App ID "01"                 | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS14 Check Digit                 | *        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS Expanded Enable               |          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

| PARAMETER                                                                                      | DEFAULT                     | OCIA | USB | RS232* | LIGHT<br>PEN | IBM<br>46XX | KBW |
|------------------------------------------------------------------------------------------------|-----------------------------|------|-----|--------|--------------|-------------|-----|
| Expanded ID "Je0"                                                                              | *                           | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS Limited Enable                                                                             |                             | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS Limited ID "Je0"                                                                           | *                           | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS Limited App ID "01"                                                                        | *                           | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| RSS Limited Check Digit                                                                        | *                           | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Bars High as Code 39                                                                           | *                           |      |     |        | ✓            |             |     |
| Spaces High as Code 39                                                                         |                             |      |     |        | ✓            |             |     |
| Bars High as Scanned                                                                           |                             |      |     |        | ✓            |             |     |
| Spaces High as Scanned                                                                         |                             |      |     |        | ✓            |             |     |
| DTS/SIEMENS                                                                                    |                             | ✓    |     |        |              |             |     |
| DTS/NIXDORF                                                                                    | *                           | ✓    |     |        |              |             |     |
| NCR F                                                                                          |                             | ✓    |     |        |              |             |     |
| NCR S                                                                                          |                             | ✓    |     |        |              |             |     |
| Poll Light Pen Source                                                                          |                             |      |     |        | ✓            |             |     |
| Beeper Tone                                                                                    | Normal                      | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Beep/Transmit Sequence                                                                         | Before<br>Transmit          | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Communication Timeout                                                                          | None                        | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Razzberry Tone on Timeout                                                                      |                             | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Three Beeps on Timeout                                                                         |                             | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| No Beeps on Timeout                                                                            | *                           | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Enter Power Save Mode                                                                          | 5 mins.                     | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Same Symbol Rescan<br>Timeout: 500 msec<br>Programmable in 50 msec<br>steps (MAX 6.35 seconds) | *                           | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Intercharacter Delay<br>Programmable in 1 msec steps<br>(MAX 255 msec)                         | 1 msec<br>10 msec<br>in KBW | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Number of Scan Buffers                                                                         | 1                           | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

| PARAMETER                                 | DEFAULT | OCIA | USB | RS232* | LIGHT<br>PEN | IBM<br>46XX | KBW |
|-------------------------------------------|---------|------|-----|--------|--------------|-------------|-----|
| Transmit UPC-A<br>Check Digit             | *       | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Transmit UPC-E<br>Check Digit             |         |      | ✓   | ✓      | ✓            | ✓           | ✓   |
| Expand UPC-E                              |         | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Convert UPC-A to EAN-13                   |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Transmit Lead Zero on<br>UPC-E            |         | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Convert EAN-8 to EAN-13                   |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Transmit UPC-A<br>Number System           | *       | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Transmit UPC-A Manufacturer<br>ID#        | *       | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Transmit UPC-A Item ID#                   | *       | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Transmit Codabar<br>Start/Stop Characters |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| CLSI Editing (Enable)                     |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Transmit Mod 43 Check Digit<br>on Code 39 |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Transmit Code 39<br>Stop/Start Characters |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Transmit Mod 10/ITF                       |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Transmit MSI-Plessey Check<br>Characters  |         | ✓    | ✓   | ✓      |              | ✓           | ✓   |
| Parity                                    | Space   |      |     | ✓      |              |             |     |
| Baud Rate                                 | 9600    |      |     | ✓      |              |             |     |
| 8 Data Bits                               |         |      |     | ✓      |              |             |     |
| 7 Data Bits                               | *       |      |     | ✓      |              |             |     |
| Stop Bits                                 | 2       |      |     | ✓      |              |             |     |
| Transmit Sanyo ID Characters              |         |      | ✓   | ✓      |              |             | ✓   |

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

| PARAMETER                                 | DEFAULT | OCIA | USB | RS232* | LIGHT<br>PEN | IBM<br>46XX | KBW |
|-------------------------------------------|---------|------|-----|--------|--------------|-------------|-----|
| Nixdorf ID                                |         |      | ✓   | ✓      |              |             | ✓   |
| LRC Enabled                               |         |      | ✓   | ✓      |              |             | ✓   |
| UPC Prefix                                |         |      | ✓   | ✓      |              |             | ✓   |
| UPC Suffix                                |         |      | ✓   | ✓      |              |             | ✓   |
| Transmit AIM ID Characters                |         |      | ✓   | ✓      |              |             | ✓   |
| STX Prefix                                |         |      | ✓   | ✓      |              |             | ✓   |
| ETX Suffix                                |         |      | ✓   | ✓      |              |             | ✓   |
| Carriage Return                           | *       |      | ✓   | ✓      |              |             | ✓   |
| Line Feed - disabled by default<br>in KBW | *       |      | ✓   | ✓      |              |             | ✓   |
| Tab Prefix                                |         |      | ✓   | ✓      |              |             | ✓   |
| Tab Suffix                                |         |      | ✓   | ✓      |              |             | ✓   |
| “DE” Disable Command                      |         |      |     | ✓      |              |             |     |
| “FL” Laser Enable Command                 |         |      |     | ✓      |              |             |     |
| DTR Handshaking Support                   |         |      |     | ✓      |              |             |     |
| RTS/CTS Handshaking                       |         |      |     | ✓      |              |             |     |
| Character RTS/CTS                         | *       |      |     | ✓      |              |             |     |
| Message RTS/CTS                           |         |      |     | ✓      |              |             |     |
| XON/XOFF Handshaking                      |         |      |     | ✓      |              |             |     |
| ACK/NAK                                   |         |      |     | ✓      |              |             |     |
| Two Digit Supplements                     |         | ✓    | ✓   | ✓      | as code 39   | ✓           | ✓   |
| Five Digit Supplements                    |         | ✓    | ✓   | ✓      | as code 39   | ✓           | ✓   |
| Bookland                                  |         | ✓    | ✓   | ✓      | as code 39   | ✓           | ✓   |
| 977 (2 digit) Supplemental<br>Requirement |         | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |

## DEFAULT SETTINGS - COMMUNICATION PARAMETERS

| PARAMETER                                                                         | DEFAULT      | OCIA | USB | RS232* | LIGHT<br>PEN | IBM<br>46XX | KBW |
|-----------------------------------------------------------------------------------|--------------|------|-----|--------|--------------|-------------|-----|
| Supplements are not Required                                                      | *            | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Two Digit Redundancy                                                              | *            | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Five Digit Redundancy                                                             |              | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| 100 msec to Find Supplement<br>Programmable in 100msec<br>steps<br>(MAX 800 msec) | *            | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Coupon Code 128                                                                   |              | ✓    | ✓   | ✓      | as code 39   | ✓           | ✓   |
| Programmable Code Lengths                                                         | 7<br>avail.  | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Programmable Prefix<br>Characters                                                 | 10<br>avail. |      | ✓   | ✓      |              |             | ✓   |
| Programmable Suffix<br>Characters                                                 | 10<br>avail. |      | ✓   | ✓      |              |             | ✓   |
| Prefixes for individual Code<br>Types                                             |              |      | ✓   | ✓      |              |             | ✓   |
| Editing                                                                           |              | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Inter Scan-Code Delay<br>Programmable<br>(100 µsec steps)                         | 800<br>µsec  |      |     |        |              |             | ✓   |
| Function/Control Key Support                                                      |              |      |     |        |              |             | ✓   |
| Minimum Element Width<br>Programmable in 5.6 µsec<br>steps                        | 1<br>msec    |      |     |        | ✓            |             |     |
| Normal Depth of Field                                                             | *            | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |
| Reduced Depth of Field                                                            |              | ✓    | ✓   | ✓      | ✓            | ✓           | ✓   |

## UPGRADING THE FLASH ROM FIRMWARE

---

The MetroSet2 program is a functional component of Metrologic's new line of Flash- based scanners. This program allows the user of a Metrologic scanner to quickly upgrade to a new or custom version of firmware. It requires the use of a personal computer running Windows® 95 or greater and the use of a serial port. The user merely connects the scanner to a serial port on the PC, launches the MetroSet2 program, and blasts off to new software upgrades.

Each MS3780, regardless of the version number or communication protocol, can be upgraded. In other words, all RS232 (-41), keyboard wedge (-47), light pen (-41), OCIA (-9), IBM 468X/469X (-11), low speed USB (-38), and integrated full speed USB (-40) units can be upgraded. To upgrade all units, a power supply and PowerLink cable (MLPN 54-54014) are required.



RS232 units can be upgraded using the standard PowerLink cable (MLPN 53-53xxx-3).

The program guides the user with its simplistic one click approach. The user must first select the file. Once the file is selected and verified, the scanner is ready to be upgraded. Press the "Flash Scanner" button to upgrade the scanner. The unit will go into a "flash mode" – both the blue and white LEDs will be on. The user can follow the progress of the upgrade by watching the screen for details. When the upgrade is complete, the scanner will respond with its normal one beep on power up. If two beeps occur, the scanner did not upgrade properly. Contact a Metrologic service representative for additional assistance.

Scanner Pinout Connections

The MS3780 scanner interfaces terminate to a 10-pin modular socket. The serial # label indicates the interface enabled when the scanner is shipped from the factory.

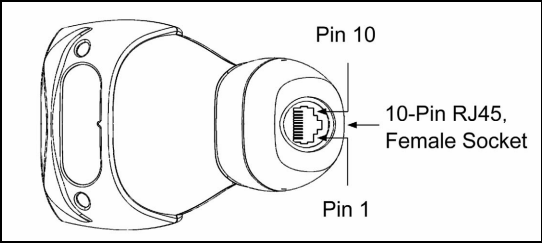


Figure 25.

| Keyboard Wedge and Stand-Alone Keyboard MS3780-47 |                       |
|---------------------------------------------------|-----------------------|
| Pin                                               | Function              |
| 1                                                 | Ground                |
| 2                                                 | RS232 Transmit Output |
| 3                                                 | RS232 Receive Input   |
| 4                                                 | PC Data               |
| 5                                                 | PC Clock              |
| 6                                                 | KB Clock              |
| 7                                                 | PC +5V                |
| 8                                                 | KB Data               |
| 9                                                 | +5VDC                 |
| 10                                                | Shield Ground         |

| RS232 and Light Pen Emulation MS3780-41 |                       |
|-----------------------------------------|-----------------------|
| Pin                                     | Function              |
| 1                                       | Ground                |
| 2                                       | RS232 Transmit Output |
| 3                                       | RS232 Receive Input   |
| 4                                       | RTS Output            |
| 5                                       | CTS Input             |
| 6                                       | DTR Input/LTPN Source |
| 7                                       | Reserved              |
| 8                                       | LTPN Data             |
| 9                                       | +5VDC                 |
| 10                                      | Shield Ground         |

| MS3780-40 Full Speed USB |                       |
|--------------------------|-----------------------|
| Pin                      | Function              |
| 1                        | Ground/USB-           |
| 2                        | RS232 Transmit Output |
| 3                        | RS232 Receive Input   |
| 4                        | RTS Output            |
| 5                        | CTS Input             |
| 6                        | D+                    |
| 7                        | USB +V                |
| 8                        | D-                    |
| 9                        | +5VDC                 |
| 10                       | Shield Ground         |

| RS232 Low Speed USB MS3780-38 |                       |
|-------------------------------|-----------------------|
| Pin                           | Function              |
| 1                             | Ground/USB-           |
| 2                             | RS232 Transmit Output |
| 3                             | RS232 Receive Input   |
| 4                             | RTS Output            |
| 5                             | CTS Input             |
| 6                             | D+                    |
| 7                             | USB +V                |
| 8                             | D-                    |
| 9                             | +5VDC                 |
| 10                            | Shield Ground         |

Continued on next page.



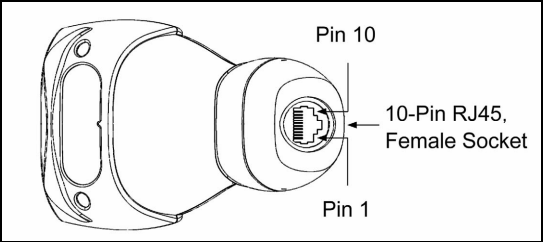



Figure 26.


| MS3780-11 IBM 468X/469X |                       |
|-------------------------|-----------------------|
| Pin                     | Function              |
| 1                       | Ground                |
| 2                       | RS232 Transmit Output |
| 3                       | RS232 Receive Input   |
| 4                       | RTS Output            |
| 5                       | CTS Input             |
| 6                       | DTR Input             |
| 7                       | IBM B-Transmit        |
| 8                       | IBM A+ Receive        |
| 9                       | +5VDC                 |
| 10                      | Shield Ground         |

| MS3780-9 OCIA |                                    |
|---------------|------------------------------------|
| Pin           | Function                           |
| 1             | Ground                             |
| 2             | RS232 Transmit Output              |
| 3             | RS232 Receive Input                |
| 4             | RDATA                              |
| 5             | RDATA Return                       |
| 6             | Clock In                           |
| 7             | Clock Out                          |
| 8             | Clock in Return/<br>Clock out Rtrn |
| 9             | +5VDC                              |
| 10            | Shield Ground                      |

## Cable Connector Configurations (Host End)

| Keyboard Wedge PowerLink Cable<br>53-53002x-3 |                |                       |
|-----------------------------------------------|----------------|--------------------------------------------------------------------------------------------------------|
| Pin                                           | Function       | <br>5-Pin DIN, Female |
| 1                                             | Keyboard Clock |                                                                                                        |
| 2                                             | Keyboard Data  |                                                                                                        |
| 3                                             | No Connect     |                                                                                                        |
| 4                                             | Power Ground   |                                                                                                        |
| 5                                             | +5 Volts DC    |                                                                                                        |
| Pin                                           | Function       | <br>6-Pin DIN, Male   |
| 1                                             | PC Data        |                                                                                                        |
| 2                                             | No Connect     |                                                                                                        |
| 3                                             | Power Ground   |                                                                                                        |
| 4                                             | +5 Volts DC    |                                                                                                        |
| 5                                             | PC Clock       |                                                                                                        |
| 6                                             | No Connect     |                                                                                                        |

Metrologic will supply an adapter cable with a 5-pin DIN male connector on one end and a 6-pin mini DIN female connector on the other. According to the termination required, connect the appropriate end of the adapter cable to the PowerLink cable, leaving the necessary termination exposed for connecting to the keyboard and the keyboard port on the PC.

| Keyboard Wedge Adapter Cable |                |                              |
|------------------------------|----------------|---------------------------------------------------------------------------------------------------------------|
| Pin                          | Function       | <br>5-Pin DIN, Male        |
| 1                            | PC Clock       |                                                                                                               |
| 2                            | PC Data        |                                                                                                               |
| 3                            | No Connect     |                                                                                                               |
| 4                            | Power Ground   |                                                                                                               |
| 5                            | +5 Volts DC    |                                                                                                               |
| Pin                          | Function       | <br>6-pin Mini DIN, Female |
| 1                            | Keyboard Data  |                                                                                                               |
| 2                            | No Connect     |                                                                                                               |
| 3                            | Power Ground   |                                                                                                               |
| 4                            | +5 Volts DC    |                                                                                                               |
| 5                            | Keyboard Clock |                                                                                                               |
| 6                            | No Connect     |                                                                                                               |

### **Caution**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure. Under no circumstances should the customer attempt to service the laser scanner. Never attempt to look at the laser beam, even if the scanner appears to be nonfunctional. Never open the scanner in an attempt to look into the device. Doing so could result in hazardous laser light exposure. The use of optical instruments with the laser equipment will increase eye hazard.

### **Atención**

La modificación de los procedimientos, o la utilización de controles o ajustes distintos de los especificados aquí, pueden provocar una luz de láser peligrosa. Bajo ninguna circunstancia el usuario deberá realizar el mantenimiento del láser del escáner. Ni intentar mirar al haz del láser incluso cuando este no esté operativo. Tampoco deberá abrir el escáner para examinar el aparato. El hacerlo puede conllevar una exposición peligrosa a la luz de láser. El uso de instrumentos ópticos con el equipo láser puede incrementar el riesgo para la vista.

### **Attention**

L'emploi de commandes, réglages ou procédés autres que ceux décrits ici peut entraîner de graves irradiations. Le client ne doit en aucun cas essayer d'entretenir lui-même le scanner ou le laser. Ne regardez jamais directement le rayon laser, même si vous croyez que le scanner est inactif. N'ouvrez jamais le scanner pour regarder dans l'appareil. Ce faisant, vous vous exposez à une rayonnement laser qui est dangereux. L'emploi d'appareils optiques avec cet équipement laser augmente le risque d'endommagement de la vision.

### **Achtung**

Die Verwendung anderer als der hier beschriebenen Steuerungen, Einstellungen oder Verfahren kann eine gefährliche Laserstrahlung hervorrufen. Der Kunde sollte unter keinen Umständen versuchen, den Laser-Scanner selbst zu warten. Sehen Sie niemals in den Laserstrahl, selbst wenn Sie glauben, daß der Scanner nicht aktiv ist. Öffnen Sie niemals den Scanner, um in das Gerät hineinzusehen. Wenn Sie dies tun, können Sie sich einer gefährlichen Laserstrahlung aussetzen. Der Einsatz optischer Geräte mit dieser Laserausrüstung erhöht das Risiko einer Sehschädigung.

### **Attenzione**

L'utilizzo di sistemi di controllo, di regolazioni o di procedimenti diversi da quelli descritti nel presente Manuale può provocare delle esposizioni a raggi laser rischiose. Il cliente non deve assolutamente tentare di riparare egli stesso lo scanner laser. Non guardate mai il raggio laser, anche se credete che lo scanner non sia attivo. Non aprite mai lo scanner per guardare dentro l'apparecchio. Facendolo potete esporVi ad una esposizione laser rischiosa. L'uso di apparecchi ottici, equipaggiati con raggi laser, aumenta il rischio di danni alla vista.



# LASER AND PRODUCT SAFETY

---

## Notices

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense. Any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Notice

This Class A digital apparatus complies with Canadian ICES-003.

### Remarque

Cet appareil numérique de la classe A, conforme à la norme NMB-003 du Canada.

## European Standard

### Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Funkstöreigenschaften nach EN 55022:1998

### Warnung!

Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchführen.

## Standard Europeo






### Attenzione

Questo è un prodotto di classe A. Se usato in vicinanza di residenze private potrebbe causare interferenze radio che potrebbero richiedere all'utilizzatore opportune misure.

### Attention

Ce produit est de classe "A". Dans un environnement domestique, ce produit peut être la cause d'interférences radio. Dans ce cas l'utilisateur peut être amené à prendre les mesures adéquates.

Cable Connector Configurations (Host End)
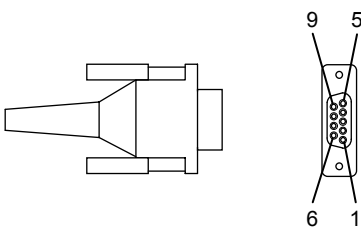
|                                                                              |                            |                                                                                                                                                                                                                                         |  |
|------------------------------------------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| RS232 PowerLink Cable 53-53000-3                                             |                            |                                                                                                                                                        |  |
| Pin                                                                          | Function                   |  <p>9-Pin D-Type Connector</p>                                                                                                                         |  |
| 1                                                                            | Shield Ground              |                                                                                                                                                                                                                                         |  |
| 2                                                                            | RS232 Transmit Output      |                                                                                                                                                                                                                                         |  |
| 3                                                                            | RS232 Receive Input        |                                                                                                                                                                                                                                         |  |
| 4                                                                            | DTR Input/Light Pen Source |                                                                                                                                                                                                                                         |  |
| 5                                                                            | Power/Signal Ground        |                                                                                                                                                                                                                                         |  |
| 6                                                                            | Light Pen Data             |                                                                                                                                                                                                                                         |  |
| 7                                                                            | CTS Input                  |                                                                                                                                                                                                                                         |  |
| 8                                                                            | RTS Output                 |                                                                                                                                                                                                                                         |  |
| 9                                                                            | +5VDC                      |                                                                                                                                                                                                                                         |  |
| USB Power/Communication Cable 53-53213x-N-3, 53-530214x-N-3 or 53-53235x-N-3 |                            |                                                                                                                                                        |  |
| Pin                                                                          | Function                   |  <p>USB Type A<br/>Locking with Power</p>  <p>USB<br/>Non-Locking</p> |  |
| 1                                                                            | PC +5V/V_USB               |                                                                                                                                                                                                                                         |  |
| 2                                                                            | D-                         |                                                                                                                                                                                                                                         |  |
| 3                                                                            | D+                         |                                                                                                                                                                                                                                         |  |
| 4                                                                            | Ground                     |                                                                                                                                                                                                                                         |  |
| Shield                                                                       | Shield                     |                                                                                                                                                                                                                                         |  |
| Stand Alone Keyboard PowerLink Cable 53-53020x-3                             |                            |                                                                                                                                                      |  |
| Pin                                                                          | Function                   |  <p>6-Pin Male Mini-DIN Connector</p>                                                                                                                |  |
| 1                                                                            | PC Data                    |                                                                                                                                                                                                                                         |  |
| 2                                                                            | No Connect                 |                                                                                                                                                                                                                                         |  |
| 3                                                                            | Power Ground               |                                                                                                                                                                                                                                         |  |
| 4                                                                            | +5VDC PC Power to KB       |                                                                                                                                                                                                                                         |  |
| 5                                                                            | PC Clock                   |                                                                                                                                                                                                                                         |  |
| 6                                                                            | No Connect                 |                                                                                                                                                                                                                                         |  |

## LIMITED WARRANTY

---

The MS3780 Fusion™ scanners are manufactured by Metrologic at its Blackwood, New Jersey, U.S.A. facility. The MS3780 Fusion scanners have a five (5) year limited warranty from the date of manufacture. Metrologic warrants and represents that all MS3780 Fusion scanners are free of all defects in material, workmanship and design, and have been produced and labeled in compliance with all applicable U.S. Federal, state and local laws, regulations and ordinances pertaining to their production and labeling.

This warranty is limited to repair, replacement of product or refund of product price at the sole discretion of Metrologic. Faulty equipment must be returned to one of the following Metrologic repair facilities: Blackwood, New Jersey, USA; Madrid, Spain; or Suzhou, China. To do this, contact the appropriate Metrologic Customer Service/Repair Department to obtain a Returned Material Authorization (RMA) number.

In the event that it is determined the equipment failure is covered under this warranty, Metrologic shall, at its sole option, repair the Product or replace the Product with a functionally equivalent unit and return such repaired or replaced Product without charge for service or return freight, whether distributor, dealer/reseller, or retail consumer, or refund an amount equal to the original purchase price.

This limited warranty does not extend to any Product which, in the sole judgment of Metrologic, has been subjected to abuse, misuse, neglect, improper installation, or accident, nor any damage due to use or misuse produced from integration of the Product into any mechanical, electrical or computer system. The warranty is void if the case of Product is opened by anyone other than Metrologic's repair department or authorized repair centers.

THIS LIMITED WARRANTY, EXCEPT AS TO TITLE, IS IN LIEU OF ALL OTHER WARRANTIES OR GUARANTEES, EITHER EXPRESS OR IMPLIED, AND SPECIFICALLY EXCLUDES, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE UNDER THE UNIFORM COMMERCIAL CODE, OR ARISING OUT OF CUSTOM OR CONDUCT. THE RIGHTS AND REMEDIES PROVIDED HEREIN ARE EXCLUSIVE AND IN LIEU OF ANY OTHER RIGHTS OR REMEDIES. IN NO EVENT SHALL METROLOGIC BE LIABLE FOR ANY INDIRECT OR CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES TO PERSON OR PROPERTY, OR EFFECT ON BUSINESS OR PROPERTY, OR OTHER DAMAGES OR EXPENSES DUE DIRECTLY OR INDIRECTLY TO THE PRODUCT, EXCEPT AS STATED IN THIS WARRANTY. IN NO EVENT SHALL ANY LIABILITY OF METROLOGIC EXCEED THE ACTUAL AMOUNT PAID TO METROLOGIC FOR THE PRODUCT. METROLOGIC RESERVES THE RIGHT TO MAKE ANY CHANGES TO THE PRODUCT DESCRIBED HEREIN.

**WORLDWIDE HEADQUARTERS,**  
**Metrologic Instruments, Inc.**  
90 Coles Rd.  
Blackwood, NJ 08012-4683  
Tel: 856-228-8100  
Fax: 856-228-6673  
Email: [info@metrologic.com](mailto:info@metrologic.com)

**METROLOGIC THE AMERICAS HEADQUARTERS**  
**METROLOGIC THE AMERICAS**  
1571 Imperial Way Suite B  
West Deptford, NJ 08066  
Tel: 800-ID-METRO (800-436-3876)  
Fax: 856-537-6474  
Email: [info@us.metrologic.com](mailto:info@us.metrologic.com)

**MTLG AUTO ID INSTRUMENTS (SHANGHAI) Co., LTD**  
**Suzhou Sales Office**  
BLK A, Room# 03/03-04  
No.5 Xinghan Street, Xinsu Industrial Square  
China-Singapore  
Suahou Industrial Park, Suzhou, PRC  
Tel: 86-512-67622550  
Fax: 86-512-67622560  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

**METROLOGIC EUROPEAN REPAIR CENTER (MERC)**  
**Metrologic Eria Ibérica, SL**  
Julian Camarillo 29, D-1  
28037 Madrid  
Tel: +34 913 272 400  
Fax: +34 913 273 829  
Email: [info@es.metrologic.com](mailto:info@es.metrologic.com)

## PATENTS

---

### Patent Information

This METROLOGIC product may be covered by one or more of the following U.S. Patents:

U.S. Patent No.;

5,216,232; 5,260,553; 5,340,971; 5,340,973; 5,424,525; 5,468,951;  
5,484,992; 5,525,789; 5,528,024; 5,557,093; 5,591,953; 5,616,908;  
5,627,359; 5,637,852; 5,661,292; 5,767,501; 5,777,315; 5,789,730;  
5,789,731; 5,796,091; 5,811,780; 5,825,012; 5,828,048; 5,844,227;  
5,883,375; 5,886,337; 5,895,907; 5,925,870; 5,925,871; 5,939,698;  
5,942,743; 6,029,894; 6,098,885; 6,182,898; 6,189,793; 6,286,760;  
6,299,067; 6,347,743; 6,412,696; 6,460,767; 6,604,684; 6,856,572;  
6,905,071; 6,209,789; 6,860,427

No license right or sublicense is granted, either expressly or by implication, estoppel, or otherwise, under any METROLOGIC or third party intellectual property rights (whether or not such third party rights are licensed to METROLOGIC), including any third party patent listed above, except for an implied license only for the normal intended use of the specific equipment, circuits, and devices represented by or contained in the METROLOGIC products that are physically transferred to the user, and only to the extent of METROLOGIC'S license rights and subject to any conditions, covenants and restrictions therein.

Other worldwide patents pending.

## INDEX

---

### **A**

AC ..... 2, 7–11  
Accessories ..... 2, 3  
Adapter ..... 9  
Audible Indicator.. 15–17, 23–26, 35

### **B**

Bar Code ..... 15–17, 23–26, 27  
Bar Width..... 27  
Beep ..... 15, 16, 17, 23–26, 35  
Blue LED ..... 15–17, 23–26, 35  
Button ..... 4, 13–14  
    CodeGate ..... 4  
    Mode Select..... 4

### **C**

Cable  
    Communication... 2, 7–11, 23–26,  
        35, 38–39  
    EAS..... 12  
    IBM ..... 2  
    Keyboard Wedge ..... 2, 38–39  
    OCIA ..... 2  
    Pin Assignments ..... 38–39  
    PowerLink.. 2, 6, 7–11, 35, 38–39  
    RS232..... 2  
    Troubleshooting ..... 23–26  
    USB ..... 38–39  
Caution ..... 5, 7–11, 40  
Class ..... 41  
CodeGate ..... 1, 4, 13–14  
Communication ..... 16, 23–26, 29  
    Parameters ..... 30–34  
Compliance ..... 7–11  
Components ..... 2, 4  
Configuration ..... 15, 17  
    Default ..... 30–34  
Current ..... 28

### **D**

DC ..... 2, 28  
Default Settings ..... 13, 29, 30–34  
Depth of Field  
    Normal ..... 18, 20, 27, 34  
    Reduced ..... 19, 20, 21, 27, 34

### **E**

EAS..... 12

### **F**

Failure  
    Modes..... 17  
FCC ..... 41  
Firmware ..... 35  
Flash ROM..... 1, 35

### **H**

Host ..... 23–26

### **I**

IBM ..... 8, 30–34  
Indicator  
    Audible .. 4, 15–17, 23–26, 27, 35  
    Failure ..... 17  
    Visual .... 4, 15–17, 23–26, 27, 35  
Interface ..... 27  
    IBM ..... 1, 8, 30–34  
    Keyboard Wedge. 1, 9, 26, 30–34  
    Laser Emulation ..... 1, 30–34  
    Light Pen ..... 1, 7, 30–34  
    OCIA ..... 1, 8, 30–34  
    RS232 ..... 1, 7, 25, 26, 30–34  
    Stand-Alone Keyboard ..... 1, 10  
    Troubleshooting..... 23–26  
    USB..... 1, 11, 30–34  
IR Activation Range  
    Far ..... 22  
    Near ..... 22

### **K**

Keyboard..... 29  
Keyboard Wedge ..... 9, 26, 30–34

### **L**

Label  
    Caution ..... 5  
    Serial Number ..... 5  
Laser ..... 4, 40  
Laser Emulation ..... 30–34  
LED ..... 15–17  
Light Pen..... 7, 30–34



## INDEX

---

Light Source ..... 27

### **M**

Maintenance..... 6

Manual..... 2, 15, 29

MetroSet2..... 35

Mode of Operation

    Button ..... 14

    Primary ..... 13–14

    Secondary..... 13–14

Mode Select ..... 4

Motor Speed..... 27

Mounting Specifications ..... 5

### **N**

Notices ..... 41

### **O**

OCIA ..... 8, 30–34

Omnidirectional Mode ..... 4

Operation..... 41

### **P**

Patents ..... 43

Pin Assignments

    Cable ..... 38–39

    Scanner ..... 36–37

Port..... 7–11, 23–26

Power ..... 2, 7–11, 35

Power Supply ..... 6

PowerLink..... 7–11

Product Safety..... 40

Protocol ..... 29

### **R**

RAM ..... 25

Razzberry Tone..... 15–17, 25

Read Rate ..... 14

Repair..... 17

ROM..... 25

RS232 ..... 7, 25, 26, 30–34

### **S**

Scan Lines ..... 27

Scan Pattern ..... 1, 27

    Primary ..... 13–14

    Secondary ..... 13–14

    Single-Line ..... 13–14

Scan Speed ..... 27

SELV..... 7–11

Single-Line Mode ..... 4

Specification

    Electrical..... 28

    Environmental ..... 28

    Mechanical..... 27

    Operational..... 27

Stand-Alone Keyboard ..... 10

Storage ..... 28

Switch Bank ..... 12

### **T**

Tone..... 1, 15

Transformer ..... 2, 28

Troubleshooting ..... 23–26

### **U**

Upgrade ..... 35

USB ..... 11, 30–34

### **V**

Ventilation ..... 28

Visual Indicator ... 15–17, 23–26, 35

    Blue LED ..... 4, 23–26

    White LED ..... 4, 23–26

    Amber LED ..... 4, 23–26

Voltage..... 7–11, 28

Volume..... 15

### **W**

Weight..... 27

White LED ..... 15–17, 23–26, 35

Window ..... 4

## NOTES

---

## Worldwide Headquarters

### Metrologic Instruments, Inc.

90 Coles Road Blackwood, NJ 08012-4683

Email: [info@metrologic.com](mailto:info@metrologic.com) • Tel: 856-228-8100

Fax: 856-228-6673 (Sales) • Fax: 856-228-1879 (Marketing) • Fax: 856-228-0653 (Legal/Finance)

#### Metrologic Companies

##### Adaptive Optics Associates (AOA)

Tel: 617-806-1400  
Fax: 617-806-1899  
Email: [info@aoinc.com](mailto:info@aoinc.com)

##### Omniplanar

Tel: 856.537.6100  
Fax: 856.537.6116  
Email: [info@omniplanar.com](mailto:info@omniplanar.com)

#### Metrologic - The Americas

##### Headquarters

Tel: 1.856.537.6400  
Fax: 1.856.537.6474  
Email: [info@us.metrologic.com](mailto:info@us.metrologic.com)

##### Metrologic Canada

Tel: 416.752.7190  
Fax: 416.752.8060  
Email: [info@ca.metrologic.com](mailto:info@ca.metrologic.com)

##### Metrologic do Brasil Ltda.

Tel: 55.11.5182.7273  
Fax: 55.11.5182.7198  
Email: [info@sa.metrologic.com](mailto:info@sa.metrologic.com)

##### Metrologic Mexico, S.A. DE C.V.

Tel: 55.5365.6247  
Fax: 55.5362.2544  
Email: [info@mx.metrologic.com](mailto:info@mx.metrologic.com)

##### Metrologic South America

Tel: 239.642.1958  
Fax: 239.642.1959  
Email: [info@sa.metrologic.com](mailto:info@sa.metrologic.com)

##### Metrologic - USA

Tel: 1.856.537.6400  
Fax: 1.856.537.6474  
Email: [info@us.metrologic.com](mailto:info@us.metrologic.com)

#### Metrologic - EMEA

##### Headquarters

Tel: 49-89-89019-0  
Fax: 49-89-89019-200  
Email: [info@europe.metrologic.com](mailto:info@europe.metrologic.com)

##### Metrologic Eria France SA

Tel: +33 (0) 1 48.63.78.78  
Fax: +33 (0) 1 48.63.24.94  
Email: [info@fr.metrologic.com](mailto:info@fr.metrologic.com)

##### Metrologic Eria Iberica, SL

Tel: +34 913 272 400  
Fax: +34 913 273 829  
Email: [info@es.metrologic.com](mailto:info@es.metrologic.com)

##### Metrologic Russia

Tel: +7 095 730 7424  
Fax: +7 095 730 7425  
Email: [info@ru.metrologic.com](mailto:info@ru.metrologic.com)

##### Metrologic Instruments GmbH

Tel: 49-89-89019-0  
Fax: 49-89-89019-200  
Email: [info@europe.metrologic.com](mailto:info@europe.metrologic.com)

##### Metrologic Instruments Italia

Tel: +39 0 57 6511978 or +39  
051 651 1978  
Fax: +39 0 51 6521337  
Email: [info@it.metrologic.com](mailto:info@it.metrologic.com)

##### Metrologic Instruments

**Poland**  
Tel: +48 (22) 545 04 30  
Fax: +48 (22) 545 04 31  
Email: [info@pl.metrologic.com](mailto:info@pl.metrologic.com)

##### Metrologic Instruments

**UK Limited**  
Tel: +44 (0) 1256 365900  
Fax: +44 (0) 1256 365955  
Email: [info@uk.metrologic.com](mailto:info@uk.metrologic.com)

#### Metrologic - APAC

##### Headquarters

Tel: (65) 6842-7155  
Fax: (65) 6842-7166  
Email: [info@sg.metrologic.com](mailto:info@sg.metrologic.com)

##### Beijing Sales Office

Tel/Fax: 86 10 82253472  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

##### Chengdu Sales Office

Tel/Fax: 86 28 86200109  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

##### Guangzhou Sales Office

Tel: 86-20-38823476  
Fax: 86-20-38823477  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

##### India Sales Office

Tel: +91 80 51256718  
Fax: +91 80 51256719  
Email: [info@in.metrologic.com](mailto:info@in.metrologic.com)

##### Korea Sales Office

Tel: 82-2-6205-5379  
Fax: 82-2-3444-3980  
Email: [Scott.lee@kr.metrologic.com](mailto:Scott.lee@kr.metrologic.com)

##### Metrologic Asia (Pte) Ltd

Tel: (65) 6842-7155  
Fax: (65) 6842-7166  
Email: [info@sg.metrologic.com](mailto:info@sg.metrologic.com)

##### Metrologic Japan Co., Ltd.

Tel: 81-3-3839-8511  
Fax: 81-3-3839-8519  
Email: [info@jp.metrologic.com](mailto:info@jp.metrologic.com)

##### Metrologic Thailand

Tel: 661-814-2352  
Email: [tawan.jandang@th.metrologic.com](mailto:tawan.jandang@th.metrologic.com)

##### MTLG Auto ID Instruments

(Shanghai) Co., Ltd  
Tel: 86-21-58692780  
Fax: 86-21-58692782  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

##### Suzhou Sales Office

Tel: 86-512-67622550  
Fax: 86-512-67622560  
Email: [info@cn.metrologic.com](mailto:info@cn.metrologic.com)

##### Taiwan Sales Office

Tel: 886-2-2351 0125  
Email: [john.cheng@tw.metrologic.com](mailto:john.cheng@tw.metrologic.com)

April 2006

Printed in the USA



00 - 02269B