

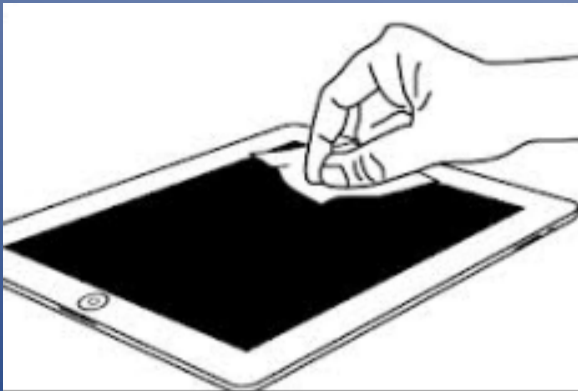


iPad installation in XCRiPad rubber case

Step1. Clean the iPad
with a Cloth.

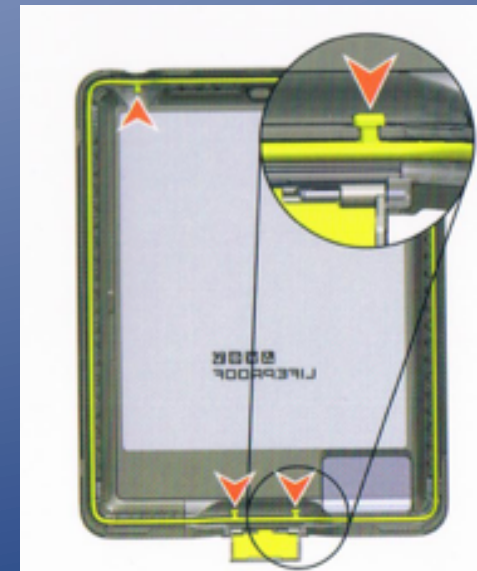


Step2. Make sure the o-rings
(shown in yellow) are firmly
seated in the grooves as shown
by red arrows.

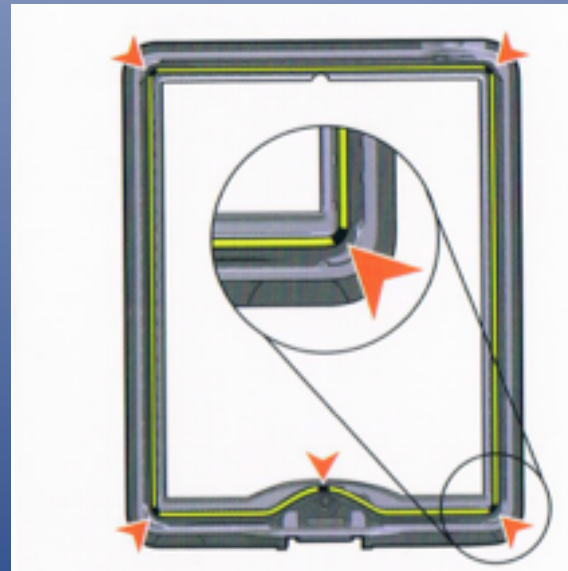

iPad installation in XCRiPad rubber case (Continued)

Step3. Place iPad into the rear rubber case section

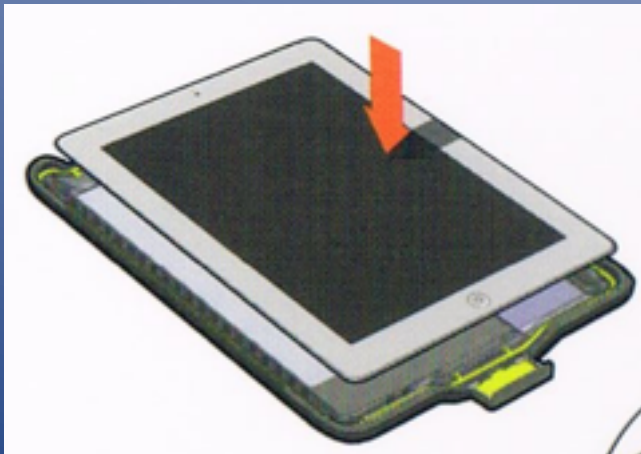


Step4. Slide the rubber case front on an angle, hooking the base on first case section




iPad installation in XCRiPad rubber case (Continued)

Step5. Firmly snap front and back case together.

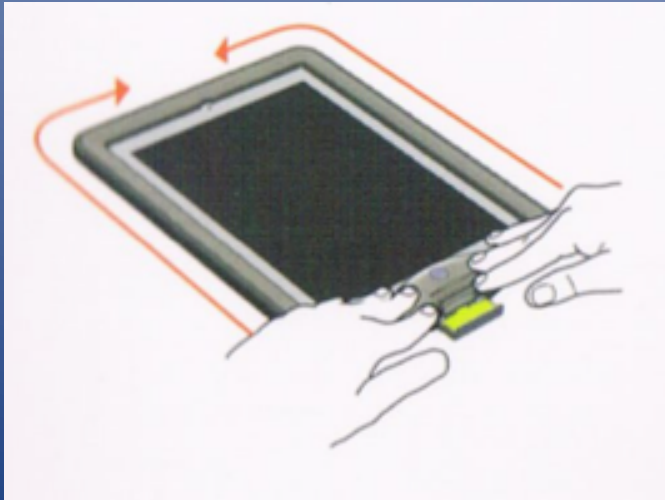


Step6. Snap shut the charge port door (B)

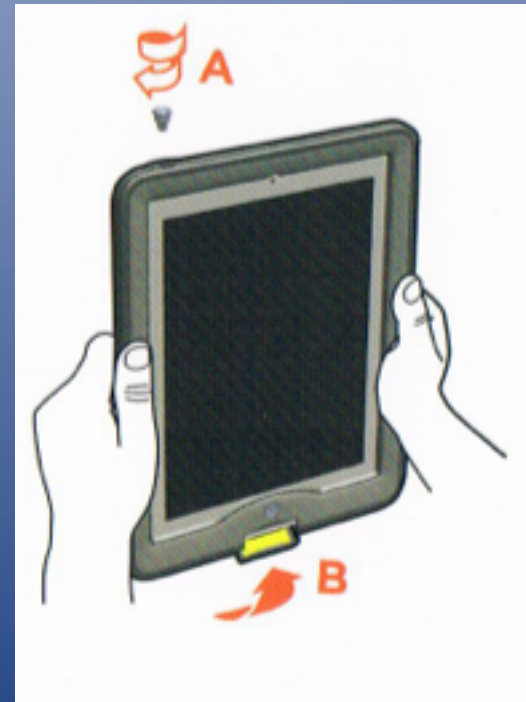

iPad installation in XCRiPad rubber case and test

Step7. Make sure all
the functions work.

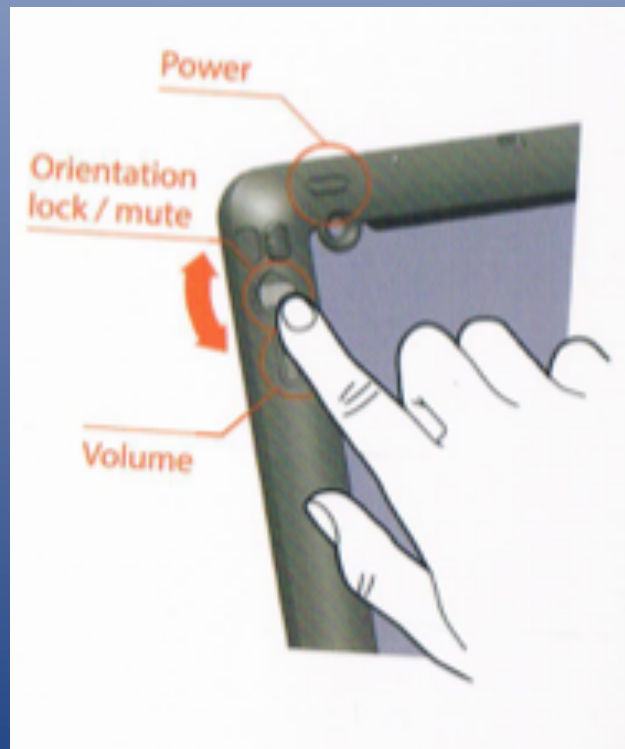

iPad installation in XCRiPad Nylon cover

Step7. Insert the rubber case
in its Nylon cover .

